HDR-CX550/CX550E/CX550V/CX550VE/ XR550/XR550E/XR550V/XR550VE

RMT-835

SERVICE MANUAL

LEVEL 2

Ver. 1.0 2010.01



US Model Canadian Model AEP Model North European Model E Model Australian Model Hong Kong Model Chinese Model Korea Model Tourist Model Japanese Model

Photo: HDR-XR550

SERVICE NOTE (Check the following note before the service.)

- 1-1. POWER SUPPLY DURING REPAIRS
- 1-2. PRECAUTION ON REPLACING THE VC-592 BOARD
- 1-3. PRECAUTION ON REPLACING THE MM-094 BOARD
- 1-4. SELF-DIAGNOSIS FUNCTION
- 1-5. METHOD OF COPING WITH SHIFT LENS ERROR
- 1-6. PRECAUTION ON REPLACING THE CABINET (BM)
- 1-7. GPS RECEIVING CHECK(CX550V/CX550VE/XR550V/XR550VE)
- 1-8. PRECAUTION ON REPLACING THE HDD(XR550V/XR550VE), **DD-329 BOARD (CX550V/CX550VE)**

DIGITAL HD VIDEO CAMERA RECORDER

mark \triangle are critical for safety. pour la sécurité.

The components identified Les composants identifiés par by mark \triangle or dotted line with une marque \triangle sont critiques

Replace only with part number | Ne les remplacer que par une pièce portant le numéro spécifié.

SONY

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2010.01	Official Release	_	_
				201040800 1

- ENGLISH -



HANDYCAM AVCHO HOMI STICK THE STREET STREET







SPECIFICATIONS

System

Signal format: PAL color, CCIR standards HDTV 1080/50i specification

Movie recording format:

HD: MPEG-4 AVC/H.264 AVCHD format compatible

STD: MPEG-2 PS

Audio recording system:

Dolby Digital 2ch/5.1ch Dolby Digital 5.1 Creator

Photo file format

: DCF Ver.2.0 Compatible

Exif Ver.2.21 Compatible : MPF Baseline Compatible

Recording media (Movie/Photo)

Internal memory HDR-CX550E/CX550VE: 64 GB

Internal hard disk

HDR-XR550E/XR550VE: 240 GB

"Memory Stick PRO Duo" media

SD Memory card, SDHC Memory card (Class 4, 6, 10)

When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files.

The capacity that a user can use is below. HDR-CX550E: approximately 63.6 GB

HDR-CX550VE: approximately 62.8 GB HDR-XR550E: approximately 239 GB

HDR-XR550VE: approximately 238 GB

Viewfinder: Electronic viewfinder: color Image device: 6.3 mm (1/2.88 type) CMOS sensor

Recording pixels (photo, 4:3):

Max. 12.0 mega (4 000 × 3 000) pixels*1 Gross: Approx. 6 631 000 pixels

Effective (movie, 16:9):

Approx. 4 150 000 pixels*2

Effective (photo, 16:9): Approx. 4 500 000 pixels

Effective (photo, 4:3):

Approx. 6 000 000 pixels

 $10 \times (\text{Optical})^{*2}, 14 \cdot *3, 120 \times (\text{Digital})$ Filter diameter: 37 mm (1 1/2 in.)

F18~34

Focal length

 $f=3.8 \sim 38.0 \text{ mm} (5/32 \sim 1.1/2 \text{ in})$

When converted to a 35 mm still camera

For movies*2: $29.8 \sim 298 \text{ mm} (1 \ 3/16 \sim 11 \ 3/4)$

in.) (16:9)

For photos: $26.3 \sim 263 \text{ mm} (1 1/16 \sim 10 3/8)$ in.) (4:3)

Color temperature: [AUTO], [ONE PUSH], [INDOOR] (3 200 K), [OUTDOOR] (5 800 K)

Minimum illumination

11 lx (lux) (in default setting, shutter speed

3 lx (lux) (LOW LUX is set to [ON], shutter speed 1/25 second)

0 lx (lux) (NIGHTSHOT is set to on)

*1 The unique pixel array of Sony's ClearVid and the image processing system (BIONZ) allow still image resolution equivalent to the sizes described.

*2 [STEADYSHOT] is set to [STANDARD] or [OFF].

*3 [STEADYSHOT] is set to [ACTIVE].

Input/Output connectors

A/V Remote Connector: Component/video and audio output jack

HDMI OUT jack: HDMI mini connector USB jack: mini-AB

Headphone jack: Stereo minijack (ϕ 3.5 mm) MIC input jack: Stereo minijack (ϕ 3.5 mm)

Picture: 8.8 cm (3.5 type, aspect ratio 16:9) Total number of pixels: 921 600 (1 920 × 480)

Power requirements: DC 6.8 V/7.2 V (battery pack) DC 8.4 V (AC Adaptor)

Average power consumption:

During camera recording using the viewfinder at normal brightness:

HDR-CX550E/CX550VE HD: 3.2 W STD: 2.4 W

HDR-XR550E/XR550VE

HD: 3.5 W STD: 2.7 W

During camera recording using LCD screen

at normal brightness: HDR-CX550E/CX550VE

HD: 3.4 W STD: 2.6 W

HDR-XR550E/XR550VE

HD: 3.7 W STD: 2.9 W

Operating temperature: 0 °C to 40 °C (32 °F to

104 °F)

Storage temperature: -20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (approx.):

HDR-CX550E/CX550VE:

 $66 \times 74 \times 143 \text{ mm} (2.5/8 \times 3 \times 5.3/4 \text{ in.})$ (w/h/d) including the projecting parts $66 \times 74 \times 143 \text{ mm} (2.5/8 \times 3 \times 5.3/4 \text{ in.})$

(w/h/d) including the projecting parts, and the supplied rechargeable battery pack

HDR-XR550E/XR550VE:

 $70 \times 74 \times 143 \text{ mm} (2.7/8 \times 3 \times 5.3/4 \text{ in.})$ (w/h/d) including the projecting parts $70 \times 74 \times 143 \text{ mm} (2.7/8 \times 3 \times 5.3/4 \text{ in.})$ (w/h/d) including the projecting parts.

and the supplied rechargeable battery pack

Mass (approx.)

HDR-CX550E

420 g (14 oz) main unit only 480 g (1 lb 1 oz) including the supplied rechargeable battery pack

HDR-CX550VE: 440 g (15 oz) main unit only

490 g (1 lb 1 oz) including the supplied rechargeable battery pack

HDR-XR550E: 500 g (1 lb 1 oz) main unit only

550 g (1 lb 3 oz) including the supplied

rechargeable battery pack HDR-XR550VE:

510 g (1 lb 2 oz) main unit only 570 g (1 lb 4 oz) including the supplied rechargeable battery pack

AC Adaptor AC-L200C/AC-L200D Power requirements: AC 100 V - 240 V,

50 Hz/60 Hz

Current consumption: 0.35 A - 0.18 A

Power consumption: 18 W Output voltage: DC 8.4 V*

Operating temperature: 0 °C to 40 °C

(32 °F to 104 °F)

Storage temperature: -20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (approx.): $48 \times 29 \times 81 \text{ mm}$ (1 15/16 \times 1 3/16 \times 3 1/4 in.) (w/h/d) excluding the

projecting parts Mass (approx.): 170 g (6.0 oz) excluding the power cord (mains lead)

* See the label on the AC Adaptor for other specifications

Rechargeable battery pack NP-FV50 Maximum output voltage: DC 8.4 V Output voltage: DC 6.8 V

Maximum charge voltage: DC 8.4 V Maximum charge current: 2.1 A

Capacity Typical: 7.0 Wh (1 030 mAh) Minimum: 6.6 Wh (980 mAh)

Type: Li-ion

Design and specifications of your camcorder and accessories are subject to change without notice.

· Manufactured under license from Dolby Laboratories

These specifications are extracted from instruction manual of HDR-CX550/CX550V/XR550/XR550V.









- ENGLISH -

SPECIFICATIONS

Minimum illumination

System

Signal format: NTSC color, EIA standards HDTV 1080/60i specification

Movie recording format

HD: MPEG-4 AVC/H.264 AVCHD format

compatible SD: MPEG-2 PS

Audio recording system

Dolby Digital 2ch/5.1ch Dolby Digital 5.1 Creator

Photo file format

: DCF Ver.2.0 Compatible Exif Ver.2.21 Compatible

: MPF Baseline Compatible

Recording media (Movie/Photo) Internal memory

HDR-CX550/CX550V: 64 GB

Internal hard disk HDR-XR550/XR550V: 240 GB

"Memory Stick PRO Duo" media SD Memory card, SDHC Memory card (Class

4, 6, 10) When measuring media capacity, 1 GB equals 1 billion bytes, a portion of which is used for system management and/or application files. The capacity that a user can use is below

HDR-CX550:

approximately 63.6 GB HDR-CX550V:

approximately 62.8 GB

HDR-XR550 approximately 239 GB

HDR-XR550V:

Effective (movie, 16:9):

Effective (photo, 4:3):

Lens: G lens

F1.8 ~ 3.4

in.) (16:9)

in) (4.3)

(5 800 K)

-2-

Focal length:

Approx. 6 000 000 pixels

10 X (Optical)*2, 14•*3, 120 × (Digital)

Filter diameter: 37 mm (1 1/2 in.)

 $f=3.8 \sim 38.0 \text{ mm} (5/32 \sim 1.1/2 \text{ in.})$

Color temperature: [AUTO], [ONE PUSH],

[INDOOR] (3 200 K), [OUTDOOR]

When converted to a 35 mm still camera

For movies*2: $29.8 \sim 298 \text{ mm}$ (1 $3/16 \sim 11 \ 3/4$

For photos: $26.3 \sim 263 \text{ mm} (1 1/16 \sim 10 3/8)$

Approx. 4 150 000 pixels*2

approximately 238 GB Viewfinder: Electronic viewfinder: color

Image device: 6.3 mm (1/2.88 type) CMOS sensor Recording pixels (photo, 4:3): During camera recording using LCD screen Max. 12.0 mega (4.000 \times 3.000) pixels*

Gross: Approx. 6 631 000 pixels

HDR-XR550/XR550V Effective (photo, 16:9): Approx. 4 500 000 pixels

(32 °F to 104 °F)

h/d) including the projecting parts, and the

 $70 \times 74 \times 143 \text{ mm} (2.7/8 \times 3 \times 5.3/4 \text{ in.})$ (w/h/d) including the projecting parts $70 \times 74 \times 143 \text{ mm} (2.7/8 \times 3 \times 5.3/4 \text{ in.}) (\text{w})$ h/d) including the projecting parts, and the

supplied rechargeable battery pack attached

HDR-CX550:

420 g (14 oz) main unit only

rechargeable battery pack

490 g (1 lb 1 oz) including the supplied

rechargeable battery pack HDR-XR550:

500 g (1 lb 1 oz) main unit only

rechargeable battery pack

HDR-XR550V:

510 g (1 lb 2 oz) main unit only 570 g (1 lb 4 oz) including the supplied

AC Adaptor AC-L200C/AC-L200D

Current consumption: 0.35 A - 0.18 A

Power consumption: 18 W

(32 °F to 104 °F)

Storage temperature: -20 °C to +60 °C

 $1 \ 3/16 \times 3 \ 1/4 \ in.) \ (w/h/d)$ excluding the projecting parts

Mass (approx.): 170 g (6.0 oz) excluding the power

specifications.

Maximum charge voltage: DC 8.4 V Maximum charge current: 2.1 A

Minimum: 6.6 Wh (980 mAh)

Design and specifications of your camcorder and accessories are subject to change without notice.

Laboratories

Type: Li-ion

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE L2

11 lx (lux) (in default setting, shutter speed 1/60

3 lx (lux) (LOW LUX is set to [ON], shutter speed 1/30 second)

0 lx (lux) (NIGHTSHOT is set to on)

*1 The unique pixel array of Sony's ClearVid and the image processing system (BIONZ) allow still image resolution equivalent to the sizes described.

*2 [STEADYSHOT] is set to [STANDARD] or [OFF].

*3 [STEADYSHOT] is set to [ACTIVE].

Input/Output connectors A/V Remote Connector: Component/video and audio output jack

USB jack: mini-AB Headphone jack: Stereo minijack (@ 3.5 mm) MIC input jack: Stereo minijack (φ 3.5 mm)

HDMI OUT jack: HDMI mini connector

LCD screen Picture: 8.8 cm (3.5 type, aspect ratio 16:9)

Power requirements: DC 6.8 V/7.2 V (battery pack) DC 8 4 V (AC Adaptor)

Total number of pixels: 921 600 (1 920 × 480)

Average power consumption During camera recording using the

viewfinder at normal brightness HDR-CX550/CX550V HD: 3.4 W STD: 2.5 W

HDR-XR550/XR550V HD: 3.8 W STD: 2.8 W

at normal brightness: HDR-CX550/CX550V HD: 3.6 W STD: 2.7 W

HD: 4 0 W STD: 3 0 W Operating temperature: 0 °C to 40 °C

Storage temperature: –20 °C to +60 °C (-4 °F to +140 °F)

Dimensions (approx.): HDR-CX550/CX550V: $66 \times 74 \times 143 \text{ mm} (2.5/8 \times 3 \times 5.3/4 \text{ in.})$ (w/h/d) including the projecting parts $66 \times 74 \times 143 \text{ mm} (2.5/8 \times 3 \times 5.3/4 \text{ in.}) \text{ (w/}$

supplied rechargeable battery pack attached HDR-XR550/XR550V:

Mass (approx.)

480 g (1 lb 1 oz) including the supplied

HDR-CX550V:

440 g (15 oz) main unit only

550 g (1 lb 3 oz) including the supplied

rechargeable battery pack

Power requirements: AC 100 V - 240 V, 50 Hz/60 Hz

Output voltage: DC 8.4 V* Operating temperature: 0 °C to 40 °C

(-4 °F to+140 °F) Dimensions (approx.): 48 X 29 X 81 mm (1 15/16 \times

cord (mains lead) * See the label on the AC Adaptor for other

Rechargeable battery pack NP-FV50 Maximum output voltage: DC 8.4 V Output voltage: DC 6.8 V

Capacity Typical: 7.0 Wh (1 030 mAh)

· Manufactured under license from Dolby

- JAPANESE -



自己的析搭載 HOODYCOM AVCHO HOMI 会 () InfoLITHIUM V SERIES MAPS







概略仕様

```
システム
信号方式
NTSCカラー、EIA標準方式
     HDTV 1080/60i方式
ビデオ記録方式
     HD画質: MPEG-4 AVC/H.264
    AVCHD規格準拠
STD画質: MPEG-2 PS
音声記録方式
Exif Ver2.21準拠
      MPF Baseline準拠
記録メディア(動画・静止画)
    内蔵メモリー
HDR-CX550V: 64GB
内蔵ハードディスク
   内蔵ハードディスク
HDR-XR550V: 240GB
"メモリースティック PRO デュオ"
SDメモリーカード、SDHCメモリーカード
(Class 4, 6, 10)
容量は、1 GBを10億バイトで計算した場合の
数値です。また管理用ファイル、アブリケーショ
ンファイルなどを含むため、実際に使用できる
容量は減少します。で使用いただけるユーザー
容量は、アのよどかです
    容量は、次のとおりです。
HDR-CX550V 約62.8GB
     HDR-XR550V 約238GB
ファインダー:電子ファインダー(カラー)
撮像素子:6.3 mm(1/2.88型)CMOSセンサー記
録画素数:静止画時 最大1 200万画素相当*1
(4000×3000)(4:3時)
    総画素数:約663万画素
動画時有効画素数*2 (16:9):約415万画素
    静止画時有効画素数(16:9):約450万画素
静止画時有効画素数(4:3):約600万画素
    ボームレンズ: Gレンズ
10倍(光学)*2、14倍*3、120倍(デジタル)
フィルター径: 37 mm
F1.8 ~ 3.4
    F1.83 ~ 38.0 mm
35mmカメラ換算では
動画撮影時*<sup>2</sup>:
29.8 ~ 298 mm(16:9)
     静止画撮影時:
    26.3 ~ 263 mm(4:3)
色温度切り換え: [オート]、[ワンブッシュ]、[屋内]
(3 200 K)、[屋外] (5 800 K)
最低被写体照度:
11 lx(ルクス)(お買い上げ時、[シャッタース
    ピード] 1/60秒)
3 lx(ルクス)( LOW LUX時、[シャッタースピー
```

ド] 1/30秒) O lx(ルクス) (NIGHTSHOT時)

たは[切]のとき

*1 ソニー独自のクリアビッド画素配列と画 像処理システムBIONZにより、静止画は 表記の記録サイズを実現しています。 *2 [] 手ブレ]補正が[スタンダード]、ま

*3 [▶ 手ブレ]補正が[アクティブ]のとき

```
入/出力端子
A/ソリモート端子: コンポーネント、映像音声出力
兼用端子
HDMI OUT端子: HDMIミニコネクタ
USB端子: mini-AB
ヘッドホン端子: ステレオミニジャック(φ3.5
MIC入力端子: ステレオミニジャック(φ3.5 mm)
液晶凹凹
画面サイズ: 8.8 cm(3.5型、アスペクト比16:9)
総ドット数: 921 600ドット
    横1920×縦480
電源部、その他
電源電圧:バッテリー端子入力 6.8 V/7.2 V
DC端子入力 8.4 V
消費電力:ファインダー使用時、明るさ標準:
HDR-CX550V:
HD:3.4 W STD:2.5 W
    HDR-XR550V:
HD: 3.8 W STD: 2.8 W
    液晶画面使用時、明るさ標準:
HDR-CX550V:
    HD: 3.6 W STD: 2.7 W
HDR-XR550V:
    HD: 4.0 W STD: 3.0 W
動作温度:0℃~40℃保存温度:-20℃~+60℃
外形寸法
    HDR-CX550V
66 × 74 × 143 mm
    (突起部を含む)(幅×高さ×奥行き)
66 × 74 × 143 mm
     (突起部を含む、付属バッテリー装着状態)
    (幅×高さ×奥行き)
    HDR-XR550V
70 × 74 × 143 mm
    (突起部を含む)(幅×高さ×奥行き)
70 × 74 × 143 mm
    (突起部を含む、付属バッテリー装着状態)
(幅×高さ×奥行き)
本体質量:
HDR-CX550V
    約440 g(本体のみ)
HDR-XR550V
約510g(本体のみ)
撮影時総質量:
    HDR-CX550V
    約490 g(付属バッテリー含む)
    HDR-XR550V
約570 g(付属バッテリー含む)
```

```
ACアダプター AC-L200C/AC-L200D
電源: AC 100 V - 240 V、50 Hz/60 Hz消費電
カ: 18 W
定格出力:DC 8.4 V*
動作温度: 0°C ~ 40°C
保存温度: −20°C ~ +60°C
外形寸法: 約 48×29×81 mm(最大突起部をのぞ
く)(幅×高さ×奥行き)
質量:約170g(本体のみ)
* その他の仕様についてはACアダプターのラベル
をご覧ください。
リチャージャブルバッテリーパック
NP-FV50
```

最大電圧: DC 8.4 V 公称電圧: DC 6.8 V 容量: 公称容量: 7.0 Wh(1 030 mAh) 定格(最小)容量: 6.6 Wh(980 mAh) 使用電池:Li-ion

本機やアクセサリーの仕様および外観は、改良のため予告なく変更することがありますが、ご了承くだ -vi。 ドルビーラボラトリーズからの実施権に基づき製

造されています。

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE L2

Model information table

Model	HDR- CX550	HDR- CX550E	HDR- CX550V	HDR- CX550VE	HDR- XR550	HDR- XR550E	HDR- XR550V	HDR- XR550VE
Destination	E,KR	NE, E , CH, HK, JE	US, CND,	AEP, AUS	E, KR, JE	NE, E, CH, HK, JE	US, CND,	AEP, AUS
Color system	NTSC	PAL	NTSC	PAL	NTSC	PAL	NTSC	PAL
GPS	×	×	0	0	×	×	0	0
Hard Disk Drive	×	×	×	×	0	0	0	0
Intenal Memory	0	0	0	0	×	×	×	×
Control switch block(PS34600)	0	0	0	0	×	×	×	×
Control switch block(PS34700)	×	×	×	×	0	0	0	0
FP-1202 BOARD	×	×	×	×	0	0	0	0
FP-1203 BOARD	0	0	0	0	×	×	×	×
FP-1204 BOARD	×	×	0	0	×	×	0	0

Abbreviation

AUS : Australian model CH : Chinese model CND HK Canadian model : Hong Kong model : Japanese model JΕ Tourist model Korea model NE North European model

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE A SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

- Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
- Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
- 3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- 4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- 5. Check the B+ voltage to see it is at the values specified.
- 6. Flexible Circuit Board Repairing
 - Keep the temperature of the soldering iron around 270°C during repairing.
 - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
 - Be careful not to apply force on the conductor when soldering or unsoldering.

Unleaded solder

Boards requiring use of unleaded solder are printed with the leadfree mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

LEAD FREE MARK

Unleaded solder has the following characteristics.

 Unleaded solder melts at a temperature about 40°C higher than ordinary solder.

Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.

Soldering irons using a temperature regulator should be set to

Soldering irons using a temperature regulator should be set to about 350°C.

Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!

Strong viscosity

Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.

• Usable with ordinary solder

It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

注意

電池の交換は,正しく行わないと破裂する恐れがあります。 電池を交換する場合には必ず同じ型名の電池又は同等品と 交換してください。 使用済み電池は、取扱指示に従って処分してください。

サービス、点検時には次のことにご注意ください。

1. 注意事項をお守りください。

サービスのとき特に注意を要する個所については、キャビネット、シャーシ、部品などにラベルや捺印で注意 事項を表示しています。これらの注意書き及び取扱説 明書等の注意事項を必ずお守り下さい。

2. 指定部品のご使用を

セットの部品は難燃性や耐電圧など安全上の特性を 持ったものとなっています。従って交換部品は、使用 されていたものと同じ特性の部品を使用して下さい。 特に回路図、部品表にΔ印で指定されている安全上重 要な部品は必ず指定のものをご使用下さい。

3. 部品の取付けや配線の引きまわしはもとどおりに

安全上, チューブやテープなどの絶縁材料を使用したり, プリント基板から浮かして取付けた部品があります。また内部配線は引きまわしやクランパによって発熱部品や高圧部品に接近しないよう配慮されていますので, これらは必ずもとどおりにして下さい。

4. サービス後は安全点検を

サービスのために取外したネジ, 部品, 配線がもとどおりになっているか, またサービスした個所の周辺を劣化させてしまったところがないかなどを点検し, 安全性が確保されていることを確認して下さい。

5. チップ部品交換時の注意

- ・取外した部品は再使用しないで下さい。
- ・タンタルコンデンサのマイナス側は熱に弱いため交換時は注意して下さい。
- 6. フレキシブルプリント基板の取扱いについて
 - ・コテ先温度を270℃前後にして行なって下さい。
 - ・同一パターンに何度もコテ先を当てないで下さい。 (3回以内)
 - ・パターンに力が加わらないよう注意して下さい。

無鉛半田について

本機には無鉛半田が使用されています。

無鉛半田を使用している基板には、無鉛(Lead Free)を意味するレッドフリーマークがプリントされています。

(**注意**: 基板サイズによっては,無鉛半田を使用していて もレッドフリーマークがプリントされていないも のがあります)

4: レッドフリーマーク

無鉛半田には、以下の特性があります。

・ 融点が従来の半田よりも約40℃高い。

従来の半田こてをそのまま使用することは可能ですが、 少し長めにこてを当てる必要があります。温度調節機能 のついた半田こてを使用する場合、約350℃に設定して 下さい。

注意: 半田こてを長く当てすぎると, 基板のパターン(銅箔)がはがれてしまうことがありますので, 注意して下さい。

・ 粘性が強い

従来の半田よりも粘性が強いため、IC端子などが半田ブリッジしないように注意して下さい。

・ 従来の半田と混ぜて使用可能

無鉛半田には無鉛半田を追加するのが最適ですが、従来 の半田を追加しても構いません。

- ENGLISH -

1-1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied to the battery terminal using the regulated power supply (8.4V), the power is shut off so that the unit cannot operate.

These following method is available to prevent this.

Method:

Use the AC power adaptor (AC-L200C/L200D).

1-2. PRECAUTION ON REPLACING THE VC-592 BOARD

DESTINATION DATA

When you replace to the repairing board, the written destination data of repairing board also might be changed to original setting. Start the Adjust Manual in the Adjust Station and execute the "DESTINATON DATA WRITE".

After the board replacement, the error of the built-in recording media may be displayed. in this case, execute the [DESTINATION DATA WRITE] then the error will be cleared. If it is not cleared with [DESTINATION DATA WRITE], format the built-in recording media.

USB SERIAL SAVE

When you replace to the repairing board, get the data from the former one.

Start the Adjust Manual in the Adjust Station and perform "USB SERIAL SAVE" to get the data.

USB SERIAL No.

The set is shipped with a unique ID (USB Serial No.) written in it.

This ID has not been written in a new board for service, and therefore it must be entered after the board replacement.


Start the Adjust Manual in the Adjust Station and execute the "USB SERIAL No. INPUT".

1-3. PRECAUTION ON REPLACING THE MM-094 BOARD

Angular Velocity Sensor

When you replace to the reparing board, write down the sensitivity displayed on the angular velocity sensor SE9201 (PITCH/YAW). Start the Adjust Manual in the Adjust Station and execute the "GYRO sensor sensitivity adj".

MM-094 BOARD (SIDE B)

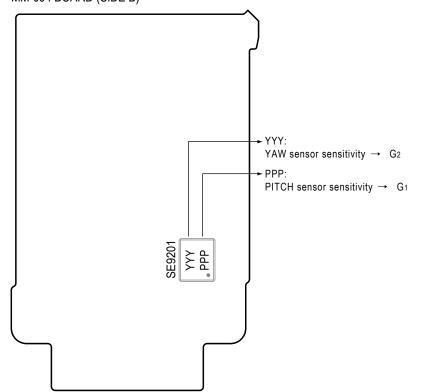

Note: The sensor sensitivity of SE9201 on MM-094 board is written only repair parts.

1-4. SELF-DIAGNOSIS FUNCTION


1-4-1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the Viewfinder or the LCD screen what to do. This function consists of two display; self-diagnosis display and service mode display.

Details of the self-diagnosis functions are provided in the Instruction manual.

1-4-2. Self-diagnosis Display

When problems occur while the unit is operating, the counter of the Viewfinder or the LCD screen shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the "repaired by:", "block" in which the problem occurred, and "detailed code" of the problem.

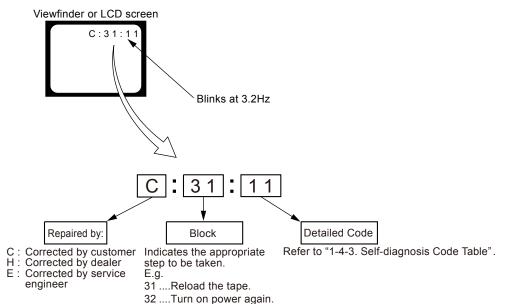

1-4-3. Self-diagnosis Code Table

S	Self-diagnosis Code		de			
Repaired by:	Blo Fund		Deta Co		Symptom/State	Correction
С	0	4	0	0	Non-standard battery is used.	Use the InfoLITHIUM battery.
С	0	6	0	0	The battery pack temperature is high.	Change the battery pack or place it in a cool place.
С	1	3	0	1	Memory card is unformatted. Memory card is broken.	Format the memory card. Insert a new memory card.
С	1	3	0	2	Access error	Remove the power source. Reconnect it again and operate your camcorder again.
С	3	2	6	0	Difficult to adjust focus (Cannot initialize focus)	Retry turn the power on by the power switch. If it does not recover, check the focus MR sensor of lens block (pin ②), ② of CN1001 on the VC-592 board). If it is OK, check the focus motor drive IC (IC5201 on the VC-592 board).
Е	2	0	0	0	Flash memory data are rewritten.	Make flash memory data correct value. (Note1)
Е	6	1	1	0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset signal (pin ①, ⑩ of CN1001 on the VC-592 board) when zooming is performed when the zoom lever is operated, and the zoom motor drive circuit (IC5201 on the VC-592 board) when zooming is not performed.

Note1: Start the Adjust Manual in the Adjust Station and refer to the "DESTINATON DATA WRITE".

	Self-d	iagnos	is Code	<u>;</u>		
Repaired by:	Block Detailed Function Code		iled	Symptom/State	Correction	
Е	6	1	1	1	The abnormalities in initialization of the focus lens and the abnormalities in initialization of the zoom lens occurred simultaneously.	Check both C: 32: 60 and E: 61: 10 of the self-diagnosis code.
E	6	1	3	0	Reset position detection error on the stepper iris initializing	Turn the power on to open lens barrier. Disconnect the battery or power cord, and then connect again. Confirm that the iris blades in lens are working. If iris blades do not working, check the iris motor drive IC in lens drive block (CN1001 pin ① to ② on VC-592 board). If iris blades work normally, confirm that they are closing completely and confirm following item. • Case of the iris blades do not close normally Replace the lens block (LSV-1390A (service)). • Case of "E: 61: 30" is appeared and iris blades closed completely. Confirm that communication with lens block is normal. • Case of LCD is not displayed normally Check that connection between CN6801 on CM-103 board and CN1003 on VC-592 board by FP-1206 flexible board. • Case of LCD is displayed normally Replace the lens block (LSV-1390A (service)).
Е	6	2	0	0	Handshake correction function does not work well. (With PITCH angular velocity sensor output stopped.)	Inspect PITCH angular velocity sensors (SE9201 on the MM-094 board) peripheral circuits.
Е	6	2	0	1	Handshake correction function does not work well. (With YAW angular velocity sensor output stopped.)	Inspect YAW angular velocity sensors (SE9201 on the MM-094 board) peripheral circuits.
Е	6	2	0	2	Abnormality of IC for steadyshot.	Refer to [1-5-1. E: 62: 02 (Abnormality of IC for Steadyshot) Occurred].
Е	6	2	0	3	IC for steadyshot and micro controller communication abnormality among.	Inspect the steadyshot circuit (IC5501 on the VC-592 board).
Е	6	2	0	4	Image vibration correction during handshake function does not work.	Inspect the image vibration angular velocity sensors (SE9101 on VC-592 board) peripheral circuits.
Е	6	2	1	0	Shift lens initializing failure.	Replacement of lens block. If an error occurs again, replace the VC-592 board. (Note2)
Е	6	2	1	1	Shift lens overheating (Pitch)	Refer to [1-5-2. E: 62: 11 (Shift Lens Overheating (Pitch)) Occurred].
Е	6	2	1	2	Shift lens overheating (Yaw)	Refer to [1-5-3. E : 62 : 12 (Shift Lens Overheating (Yaw)) Occurred].
Е	6	2	2	0	Abnormality of thermistor.	Refer to [1-5-4. E : 62 : 20 (Abnormality of Thermistor) Occurred].
Е	9	1	0	1	Abnormality when flash is being charged.	Checking of flash unit or replacement of flash unit.
E	9	2	0	1	Battery current value goes over the max discharge current	Check the remaining battery power because this symptom maybe depended on the remaining battery level, and confirm whether or not the symptom is occurred after replacing the battery. If the symptom is still occurred, overhaul inspection is needed. Connect the MM-094 board with VC-592 board through the FP-1198 (VC-MM) flexible board. Connect the MM-094 board with Control Switch Block (PS34600/PS34700). VC-592 board connected to DD-329 board. Check each output of DC/DC converter (IC4701) on DD-329 board with connected the DC/Batt harness (the minimum connection to periphery) to FP-1207 flexible board. PS34600: XR550/XR550E/XR550V/XR550VE PS34700: CX550/CX550E/CX550V/CX550VE
Е	9	4	0	0	Fault of writing or erasing the flash memory	Inspect the flash memory (IC8101 on the VC-592 board).
Е	9	4	0	1	Internal flash memory fault	Inspect the flash memory (IC8101 on the VC-592 board).
Е	9	4	0	2	BGM data error	Inspect the flash memory (IC8101 on the VC-592 board). If it is OK, check the CPU (IC7501 on the VC-592 board).
Е	9	5	0	0	GPS hardware error	CX550V/CX550VE/XR550V/XR550VE: Check whether the flexible board of the GPS module is broken, and check whether it is inserted imperfectly. If there is no problem the flexible board, inspect or replacement of the GPS module.

Note2: When the lens block was replaced, start the Adjust Manual in the Adjust Station and execute the necessary adjustment items.

After the adjustment, make sure with the STEADYSHOT turned ON that the steadyshot functions appropriately in the handheld operation.

CX550V/CX550VE/XR550V/XR550VE:

disk unit (XR550V/XR550VE).

Inspect or replacement of the DD-329 board (CX550V/CX550VE), hard

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2

Map area mount error

- ENGLISH -

1-5. METHOD OF COPING WITH SHIFT LENS ERROR


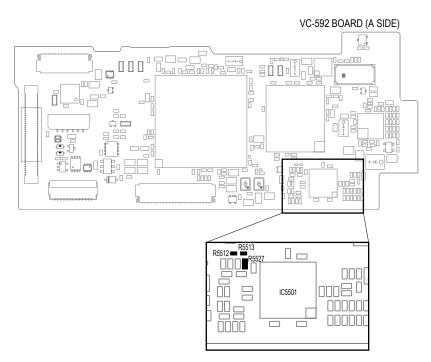


Fig. 1
Measurement points on the VC-592 board

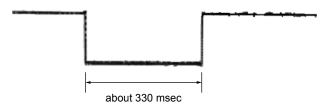

Note: The length of low section will vary a little depending on the conditions.

Fig. 2 Change in output voltage of R5513 on the VC-592 board

1-5-1. E: 62: 02 [Abnormality of IC for Steadyshot] Occurred

Order	Procedure
1	Turn the power OFF.
2	While measuring with an oscilloscope the output voltage of R5513 in the periphery of IC5501 on the VC-592 board, turn the power ON to check that the output voltage immediately after the power on change as shown in Fig. 2.
3	If the output voltage change as shown in Fig. 2, replace the lens block (Note). If it does not change as shown in Fig. 2, inspect the camera control circuit (IC7501 of VC-592 board) periphery.

Note: When the lens block was replaced, start the Adjust Manual in the Adjust Station and execute the necessary adjustment items.

After the adjustment, make sure with the STEADYSHOT turned ON that the steadyshot functions appropriately in the handheld operation.

1-5-2. E: 62: 11 [Shift Lens Overheating (Pitch)] Occurred

Connect by the SeusEX and perform the following process.

Order	Block	Page	Address	Data	Procedure
1	11	80	7430	01	Write the data. (After it starts, set it before caution is displayed.)
2	11	8E	F654	01	Write the data.
3	11	8E	F655	F0	Write the data.
4	11	8E	F658	01	Write the data. (Note 1)
5	11	8E	F658	00	Write the data.
6	11	8E	F654	00	Write the data.
7	11	8E	F655	10	Write the data.
8	11	8E	F658	01	Write the data. (Note 1)
9	11	8E	F658	00	Write the data.
10	11	80	7430	00	Write the data.
11					Check if the shift lens moves while setting the order 2 to 9. If the shift lens does not move, replace the lens block (Note 2). When the shift lens moved, proceed to the order 12.
12					While setting the order 2 to 9, measure with an oscilloscope the output voltage of R5527 in the periphery of IC5501 on the VC-592 board to check the output voltage varies.
13					If the output voltage does not vary, replace the lens block (Note 2). When the output voltage varied, proceed to the order 14.
14					Turn the power OFF.
15					While measuring with an oscilloscope the output voltage of R5513 in the periphery of IC5501 on the VC-592 board, turn the power ON to check that the output voltage immediately after the power on change as shown in Fig. 2.
16					If the output voltage change as shown in Fig. 2, replace the lens block (Note 2). If it does not change as shown in Fig. 2, inspect the camera control circuit (IC7501 of VC-592 board) periphery.

Note1: Finish this operation within 10 seconds. If it is likely to take more than 10 seconds, set block: 11, page: 8E, address: F658, data: 00, and then retry. **Note2:** When the lens block was replaced, start the Adjust Manual in the Adjust Station and execute the necessary adjustment items.

After the adjustment, make sure with the STEADYSHOT turned ON that the steadyshot functions appropriately in the handheld operation.

- ENGLISH -

1-5-3. E: 62: 12 [Shift Lens Overheating (Yaw)] Occurred

Connect by the SeusEX and perform the following process.

Order	Block	Page	Address	Data	Procedure
1	11	80	7430	01	Write the data. (After it starts, set it before caution is displayed.)
2	11	8E	F656	01	Write the data.
3	11	8E	F657	F0	Write the data.
4	11	8E	F659	01	Write the data. (Note 1)
5	11	8E	F659	00	Write the data.
6	11	8E	F656	00	Write the data.
7	11	8E	F657	10	Write the data.
8	11	8E	F659	01	Write the data. (Note 1)
9	11	8E	F659	00	Write the data.
10	11	80	7430	00	Write the data.
11					Check if the shift lens moves while setting the order 2 to 9. If the shift lens does not move, replace the lens block (Note 2). When the shift lens moved, proceed to the order 12.
12					While setting the order 2 to 9, measure with an oscilloscope the output voltage of R5524 in the periphery of IC5501 on the VC-592 board to check the output voltage varies.
13					If the output voltage does not vary, replace the lens block (Note 2). When the output voltage varied, proceed to the order 14.
14					Turn the power OFF.
15					While measuring with an oscilloscope the output voltage of R5513 in the periphery of IC5501 on the VC-592 board, turn the power ON to check that the output voltage immediately after the power on change as shown in Fig. 2.
16					If the output voltage change as shown in Fig. 2, replace the lens block (Note 2). If it does not change as shown in Fig. 2, inspect the camera control circuit (IC7501 of VC-592 board) periphery.

Note1: Finish this operation within 10 seconds. If it is likely to take more than 10 seconds, set block: 11, page: 8E, address: F659, data: 00, and then retry. **Note2:** When the lens block was replaced, start the Adjust Manual in the Adjust Station and execute the necessary adjustment items.

After the adjustment, make sure with the STEADYSHOT turned ON that the steadyshot functions appropriately in the handheld operation.

1-5-4. E: 62: 20 [Abnormality of Thermistor] Occurred

Order	Procedure
1	Turn the power ON.
2	Confirm the connections of flexible flat cables and connectors between the lens block and VC-592 board.
3	In case of no malfunction of connections, replace the lens block with new one (Note). When the error has occurred in spite of the lens replacement, replace VC-592 board with new one.

Note: When the lens block was replaced, start the Adjust Manual in the Adjust Station and execute the necessary adjustment items.

After the adjustment, make sure with the STEADYSHOT turned ON that the steadyshot functions appropriately in the handheld operation.

1-6. PRECAUTION ON REPLACING THE CABINET (BM)

1-6-1. Precaution on ordering the Cabinet (BM)

The model display adopts the laser printing method. Therefore, the Cabinet (BM) for replacement differs depending on the destination.

As similar displays are provided, choose the suitable one for or-

Note: After replacing the Cabinet (BM), the serial number for it will be changed to the one exclusive for service use. Inform a customer of the serial number change and change the serial number in the repair data.

HDR-CX550 (E Model) HDR-CX550 (KR Model) HDR-CX550E (NE Model) 0 Part No. <u>Description</u> Part No. Description Part No. Description CABINET BM(CX550E23) A-1771-847-A CABINET BM(CX550KR2) A-1771-853-A CABINET BM(CX550ECEL) A-1771-844-A HDR-CX550E (CH Model) HDR-CX550E (E, HK, JE Models) HDR-CX550V (US Model) 0 0 Serial No Serial No. Description CABINET BM(CX550ECN2) Part No. **Description** Part No. Part No. <u>Description</u> CABINET BM(CX550EE34) CABINET BM(CX550VU2) A-1771-851-A A-1771-854-A A-1771-842-A HDR-CX550V (CND Model) HDR-CX550V (J Model) HDR-CX550VE (AEP Model) 0 Serial No. Part No. **Description** Part No. **Description** Description Part No. A-1771-843-A CABINET BM(CX550VCA2) A-1771-831-A CABINET BM(CX550VJ1) A-1771-849-A CABINET BM(CX550VECEN) HDR-CX550VE (AUS Model) HDR-XR550 (E Model) HDR-XR550 (KR Model) 0 0 -Serial No. Part No. Part No. <u>Description</u> Part No. CABINET BM(CX550VEAU2) CABINET BM(XR550E23) A-1771-861-A CABINET BM(XR550KR2) A-1771-850-A A-1771-860-A HDR-XR550 (JE Model) HDR-XR550E (NE Model) HDR-XR550E (E Model) 0 -Serial No. -Serial No. Part No. **Description** Part No. Part No. Description **Description**

CABINET BM(XR550ECEL)

A-1771-865-A

CABINET BM(XR550EE34)

- ENGLISH -

Part No. **Description**


HDR-XR550E (HK. JE Models)


HDR-XR550V (CND Model)

0

A-1771-859-A

Part No.

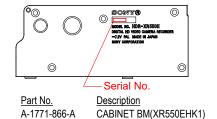

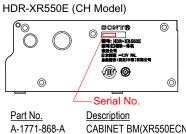


Description

CABINET BM(XR550VJ1)

HDR-XR550V (J Model)

Part No.

A-1771-856-A

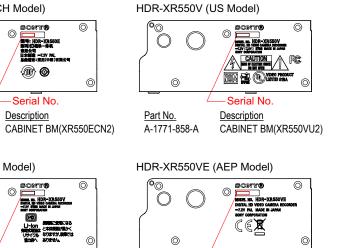



Description

CABINET BM(XR550VECEN)

Part No.

A-1771-863-A

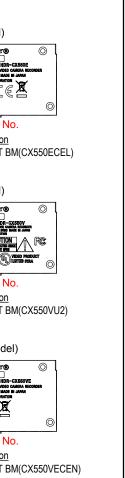

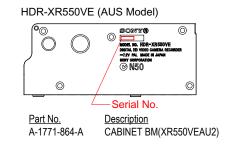

Serial No

CABINET BM(XR550VCA2)

Description

A-1771-867-A

CABINET BM(XR550JE3)


A-1771-862-A

1-6-2. Precaution on Replacing the Cabinet (BM) for J Models


The year of manufacture on the labels should be the same as the previous Cabinet (BM) (circled portions shown on the below). Example: For the figure below, attach the "Made of 09 years" label.

* The replacement label and "inset (how to affix)" are supplied together with Cabinet (BM) for service.

HDR-CX550V (J Model)

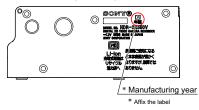

HDR-XR550V (J Model)

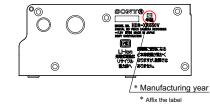


1-6-3. Precaution on Replacing the Cabinet (BM) for US Models


The date of manufacture on the labels should be the same as the previous Cabinet (BM) (circled portions shown on the below). Example: For the figure below, attach the "0A" labels.

* The replacement labels and "inset (how to affix)" are supplied together with Cabinet (BM) Assy for service.

HDR-CX550V (US Model)

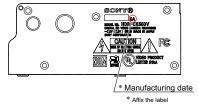

HDR-XR550V (US Model)

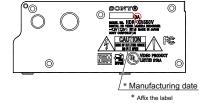


1-6-4. Precaution on Replacing the Cabinet (BM) for KR Models

The date of manufacture on the labels should be the same as the previous Cabinet (BM) (circled portions shown on the below). Example: For the figure below, attach the "2010-01" label.

* The replacement label and "inset (how to affix)" are supplied together with Cabinet (BM) for service.

HDR-CX550 (KR Model)

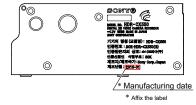

HDR-XR550 (KR Model)




- ENGLISH -


1-7. GPS RECEIVING CHECK (CX550V/CX550VE/XR550V/XR550VE)

After a part of set was replaced or after the set was assembled, check the reception of GPS signal.

How to check the GPS function

Bring your camcorder to an open area, and set the GPS switch to ON (appears on the LCD screen). Your camcorder starts trying to triangulate. When your camcorder triangulates successfully, it will record the location information at the time movies and photos were recorded.

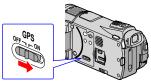

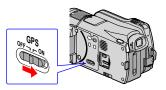

CX550V/CX550VE

XR550V/XR550VE

Notes

• The indicator changes according to the strength of GPS signal reception.

Triangulating status	GPS indicators	GPS reception status
Function off	No indicator	The GPS switch is set to OFF, or the GPS receiver is not functioning normally.
Unable to triangu- late	% ©	Your camcorder cannot find a GPS signal, therefore, it cannot triangulate. Move to an open area and turn on the GPS switch again.
Processing	% ©	Your camcorder is confirming the GPS signal, it may take several minutes to complete the triangulation.
Triangulating	×ı	Your camcorder is receiving a GPS signal, and can acquire location information.
Triangulating	×.ıl	Your camcorder is receiving a strong GPS signal, and can acquire location information.

- It may take from several seconds to several minutes to acquire the location information when you use the GPS for the first time or use it again after long intervals.
- You may not be able to acquire location information depending on the strength of GPS reception.
- When M is displayed and it takes a while to triangulate, set the GPS switch to OFF, then set to ON again.

1-8. PRECAUTION ON REPLACING THE HDD (XR550V/XR550VE), DD-329 BOARD (CX550V/CX550VE)

Do not factory check HDD (XR550V/XR550VE) or DD-329 BOARD (CX550V/CX550VE) in which Map Data is installed. The map data is erased whenthe factory check is done.

1-1. 修理時の電源供給について

本機では、安定化電源(8.4Vdc)からバッテリ端子に電源を供給した場合、約10秒後にシャットオフし、動作しなくなります。これを避けるため、下記の方法を用いてください。

方法:

ACアダプタ(AC-L200C/L200D)を使用する。

1-2. VC-592基板交換時の注意

仕向けデータ

補修用基板と交換する時、補修用基板に書かれている仕向けデータは元の設定と違っている場合があります。 Adjust StationからAdjust Manualを起動させて「DESTINATION DATA WRITE」を実行させてください。 補修用基板交換後、電源を入れると内蔵記録メディアエラーが表示される場合がありますが、「DESTINATION DATA WRITE」を実行させると消えます。「DESTINATION DATA WRITE」実行しても消えない場合は、内蔵記録メディアをフォーマットしてください。

USBシリアルセーブ

補修用基板と交換する時、交換前の基板よりUSBシリアルNo.を取得してください。 データの取得はAdjust StationからAdjust Manualを起動させて「USB SERIAL SAVE」を実行させてください。

USBシリアルNo.


セットは、1台毎に異なる固有のID(USB Serial No.)を書き込んだ後、出荷されています。 新品の補修用基板には、このIDが書き込まれていないので、基板交換後にIDを入力する必要があります。 Adjust StationからAdjust Manualを起動させて「USB SERIAL No. INPUT」を実行させてください。

1-3. MM-094基板交換時の注意

角速度センサ

補修用基板と交換する時、角速度センサ(SE9201(PITCH/YAW))の感度表示を書き留めてください。 Adjust StationからAdjust Manualを起動させて「GYRO sensor sensitivity adj.」を実行させてくだ

MM-094 BOARD (SIDE B)

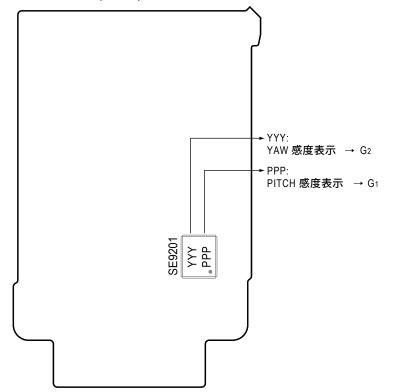

Note: MM-094基板のSE9201感度表示は補修用基板にのみ記載されています。


1-4. 自己診断機能

1-4-1. 自己診断機能について

本機の動作に不具合が生じたとき、自己診断機能が働き、ビューファインダまたはLCD画面に、どう処置したらよいか判断できる表示を行います。「自己診断表示」と「サービスモード表示」の2つの表示があります。自己診断機能については取扱説明書にも掲載されています。

1-4-2. 自己診断表示

本機の動作に不具合が生じたとき、ビューファインダまたはLCD画面のカウンタ表示部分がアルファベットと数字の4桁表示になり、3.2Hzで点滅します。この5文字の表示によって対応者分類および不具合の生じたブロックの分類、不具合の詳細コードを示します。

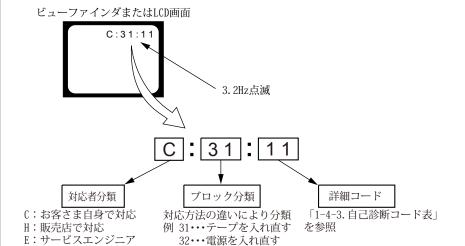

1-4-3. 自己診断コード表

で対応

1-4-	<i>J</i> .		2 H) -	<u> </u>	1X	
	自己	診断二	コード			
対応者		コック 詳細 幾能 コード				対応/方法
С	0	4	0	0	標準以外のバッテリを使用している	インフォリチウムバッテリを使用する。
С	0	6	0	0	バッテリが高温になっている	バッテリを交換するか, バッテリを涼しいとこに置 く。
С	1	3	0	1	フォーマットしていないメモリー カードを入れた メモリーカードが壊れている	メモリーカードをフォーマットする。 新しいメモリーカードに交換する。
С	1	3	0	2	アクセスエラー	電源を外し、再度入れ直してから操作する。
С	3	2	6	0	フォーカスが合いにくい (フォーカスの初期化ができない)	操作スイッチの電源を入れ直す。 復帰しない場合、レンズブロックのフォーカスMRセンサ(VC-592基板CN1001 ②, ②ピン)を点検する。 異常なければフォーカスモータ駆動回路(VC-592基板IC5201)を点検する。
Е	2	0	0	0	フラッシュメモリが書き換えられて いる	フラッシュメモリのデータを元の値に戻す。(注意1)
Е	6	1	1	0	ズーム動作の異常(ズームレンズの 初期化ができない)	ズームレバーを操作したときにズーム動作をすれば、レンズブロックのズームリセット信号(VC-592基板 CN1001 ⑦, ⑩ピン)を点検する。 ズーム動作をしなければズームモータ駆動回路 (VC-592基板IC5201)を点検する。

注意1: Adjust StationからAdjust Manualを起動させて「DESTINATION DATA WRITE」を参照してください。

1-5. シフトレンズエラーの対処方法

図1. VC-592基板測定箇所	VC-592 BOARD (A SIDE)
図1. VC-592基板測定箇所	
図1. VC-592基板測定箇所	
図1. VC-592基板測定箇所	
約 330 msec	図1. VC-592基板測定箇所
₩7 330 msec	
注: Lowの区間の長さは場合によって多少異なる	

図2. VC-592基板R5513の出力電圧の変化

1-5-1.E:62:02(手振れ補正用ICの異常)が出た場合

順序	作業内容
1	電源を切る。
2	VC-592基板IC5501の周辺にあるR5513の出力電圧をオシロスコープで測定しながら電源を入れる。電源投入直後の出力電圧が図2の様に変化することを確認する。
3	出力電圧が図2の様に変化するときはレンズブロックを交換する(注意)。図2の様に変化しないときはカメラコントロール回路(VC-592基板IC7501)周辺を点検する。

注意: レンズブロックを交換した場合は、Adjust StationからAdjust Manualを起動させて必要な調整項目を実施すること。 調整後は手振れ補正ONの状態にして、手持ち動作で手振れ補正が適切に動作していることを確認する。

	自己	,診断二	ード						
対応者	ブロ 機		詳細コード		症状/状態	対応/方法			
Е	6	1	1	1	フォーカス、ズーム異常	自己診断コードC:32:60とE:61:10の両方を点検する。			
E	6	1	3	0	ステッパIRISイニシャル時リセット 位置検出異常	電源を入れてレンズバリアが開いている状態で、バッテリまたは電源ケーブルをはずして付け直す。その際、レンズ内のアイリス羽根が動作していることを確認する。アイリス羽根が動作してない場合は、レンズドライブブロックのアイリスモータドライブ(VC-592基板CN1001 ⑪ ~ ⑭ ピン)を点検する。アイリス羽根が動作する場合は、アイリス羽根が完全に閉じきることを確認し、以下の内容を確認する。・アイリス羽根を正常に閉じることができない場合レンズブロックを交換する。・アイリス羽根は正常に閉じているが、E:61:30が出る場合CMOSブロック組立との通信ができているかを確認する。・正常に画面が出ていない場合CM-103基板とVC-592基板がFP-1206フレキシブル基板で接続されているかを確認する。・正常に画面が出ている場合レンズブロックを交換する			
Е	6	2	0	0	手振れ補正が効きにくい(PITCH角速度センサ出力張り付き)	PITCH角速度センサ(MM-094基板SE9201)周辺回路を点検する。			
Е	6	2	0	1	手振れ補正が効きにくい(YAW角速 度センサ出力張り付き)	YAW角速度センサ(MM-094基板SE9201)周辺回路を点検する。			
Е	6	2	0	2	手振れ補正用ICの異常	「1-5-1.E:62:02(手振れ補正用ICの異常)が出た場合」を参照。			
Е	6	2	0	3	手振れ補正用ICとマイクロコントローラーとの通信異常	手振れ補正回路(VC-592基板IC5501)を点検。			
Е	6	2	0	4	Active手振れ補正時の画ゆれが補正 できない (角速度センサ出力張り付き)	画ゆれ検出角速度センサ(VC-592基板SE9101) 周辺回路を点検する。			
Е	6	2	1	0	シフトレンズ初期化異常	レンズブロックを交換する。エラーが再度発生する場合は、VC-592 基板を交換する。(注意2)			
Е	6	2	1	1	シフトレンズオーバーヒート (PITCH)	「1-5-2. E:62:11(シフトレンズオーバーヒート(PITCH))が出た場合」を参照。			
Е	6	2	1	2	シフトレンズオーバーヒート (YAW)	「1-5-3. E:62:12(シフトレンズオーバーヒート(YAW))が出た場合」 を参照。			
Е	6	2	2	0	サーミスタの異常	「1-5-4.E:62:20(サーミスタの異常)が出た場合」を参照。			
Е	9	1	0	1	フラッシュの充電異常	フラッシュユニットの点検または交換をする。			
E	9	2	0	1	(バッテリーの) 電流値が最大放電電 流を超えた	バッテリ残量に依存する場合があるので、バッテリ残量を確認する。次にバッテリを交換して症状が出るか確認する。バッテリを交換しても症状が出る場合は、エラー発生後に電源が切れてしまうため、分解して確認する。MM-094基板とVC-592基板をFP-1198 (VC-MM)フレキシブル基板で接続する。MM-094基板とコントロールスイッチブロック(PS34600/PS34700)を接続する。VC-592基板にDD-329基板を接続する。DD-329基板とFP-1207フレキシブル基板を接続する。DC/バッテリハーネスをFP-1207フレキシブル基板に接続した状態(最小限の接続)でDC / DCコンバータ (DD-329基板IC4701) の各チャンネル出力を確認する。PS34600: XR550/XR550E/XR550V/XR550VEPS34700: CX550/CX550E/CX550V/CX550VE			
Е	9	4	0	0	フラッシュメモリの書込み/消去動作 不良	フラッシュメモリ(VC-592基板IC8101)を点検する。			
Е	9	4	0	1	フラッシュメモリ内部異常	フラッシュメモリ(VC-592基板IC8101)を点検する。			
Е	9	4	0	2	BGMデータ異常	フラッシュメモリ(VC-592基板IC8101)を点検する。 異常がない場合は, CPU(VC-592基板IC7501)を点検する。			
Е	9	5	0	0	GPSハード異常	CX550V/CX550VE/XR550V/XR550VE: GPS モジュールのフレキシブル基板が切れていないか、また完全に 挿入されているかを点検する。フレキシブル基板に問題がない場合 は、GPS モジュールの点検または交換をする。			
Е	9	6	0	0	地図領域マウント異常	CX550V/CX550VE/XR550V/XR550VE: DD-329基板(CX550V/CX550VE), ハードディスクユニット (XR550V/XR550VE)を点検または交換する。			

注意2:レンズブロックを交換した場合は、Adjust StationからAdjust Manualを起動させて必要な調整項目を実施すること。 調整後は手振れ補正ONの状態にして、手持ち動作で手振れ補正が適切に動作していることを確認する。

1-5-2.E:62:11(シフトレンズオーバーヒート(PITCH))が出た場合

SeusEXで接続し、次の手順を行う。

順序	ブロック	ページ	アドレス	データ	作業内容
1	11	80	7430	01	データを書き込む。(セット起動後、コーションが表示される前に 設定する事。)
2	11	8E	F654	01	データを書き込む。
3	11	8E	F655	FO	データを書き込む。
4	11	8E	F658	01	データを書き込む。(注意1)
5	11	8E	F658	00	データを書き込む。
6	11	8E	F654	00	データを書き込む。
7	11	8E	F655	10	データを書き込む。
8	11	8E	F658	01	データを書き込む。(注意1)
9	11	8E	F658	00	データを書き込む。
10	11	80	7430	00	データを書き込む。
11					順序2~9を設定している間にシフトレンズが動いたか確認する。 もしシフトレンズが動かない場合はレンズブロックを交換する (注意2)。動く場合は順序12に進む。
12					VC-592基板IC5501の周辺にあるR5527の出力電圧をオシロスコープで測定しながら、順序2 \sim 9を設定したときに出力電圧が変化することを確認する。
13					出力電圧が変化しないときはレンズブロックを交換する(注意2)。 変化するときは順序14に進む。
14					電源を切る。
15					VC-592基板IC5501の周辺にあるR5513の出力電圧をオシロスコープで測定しながら電源を入れる。電源投入直後の出力電圧が図2の様に変化することを確認する。
16					出力電圧が図2の様に変化するときはレンズブロックを交換する (注意2)。図2の様に変化しないときはカメラコントロール回路 (VC-592基板IC7501)周辺を点検する。

注意1: この操作は10 秒以内に終了してください。もし10 秒以上経過しそうな場合は,ブロック:11,ページ:8E,アドレス:F658, データ:00 に設定しなおしてから再度実行してください。

注意2: レンズブロックを交換した場合は、Adjust StationからAdjust Manualを起動させて必要な調整項目を実施すること。 調整後は手振れ補正ONの状態にして、手持ち動作で手振れ補正が適切に動作していることを確認する。

1-5-3.E:62:12(シフトレンズオーバーヒート(YAW))が出た場合

SeusEXで接続し、次の手順を行う。

順序	ブロック	ページ	アドレス	データ	作業内容
1	11	80	7430	01	データを書き込む。(セット起動後、コーションが表示される前に 設定する事。)
2	11	8E	F656	01	データを書き込む。
3	11	8E	F657	FO	データを書き込む。
4	11	8E	F659	01	データを書き込む。(注意1)
5	11	8E	F659	00	データを書き込む。
6	11	8E	F656	00	データを書き込む。
7	11	8E	F657	10	データを書き込む。
8	11	8E	F659	01	データを書き込む。(注意1)
9	11	8E	F659	00	データを書き込む。
10	11	80	7430	00	データを書き込む。
11					順序2~9を設定している間にシフトレンズが動いたか確認する。 もしシフトレンズが動かない場合はレンズブロックを交換する (注意2)。動く場合は順序12に進む。
12					VC-592基板IC5501の周辺にあるR5524の出力電圧をオシロスコープで測定しながら,順序2 \sim 9を設定したときに出力電圧が変化することを確認する。
13					出力電圧が変化しないときはレンズブロックを交換する(注意2)。 変化するときは順序14に進む。
14					電源を切る。
15					VC-592基板IC5501の周辺にあるR5513の出力電圧をオシロスコープで測定しながら電源を入れる。電源投入直後の出力電圧が図2の様に変化することを確認する。
16					出力電圧が図2の様に変化するときはレンズブロックを交換する (注意2)。図2の様に変化しないときはカメラコントロール回路 (VC-592基板IC7501)周辺を点検する。

注意1:この操作は10 秒以内に終了してください。もし10 秒以上経過しそうな場合は,ブロック:11 ,ページ:8E ,アドレス:F659, データ:00 に設定しなおしてから再度実行してください。

注意2:レンズブロックを交換した場合は、Adjust StationからAdjust Manualを起動させて必要な調整項目を実施すること。 調整後は手振れ補正ONの状態にして、手持ち動作で手振れ補正が適切に動作していることを確認する。

1-5-4.E:62:20(サーミスタの異常)が出た場合

順序	作業内容
1	電源を入れる。
2	レンズブロックとVC-592基板間のフレキシブルフラットケーブルとコネクタの接続を確認する。
3	接続に異常がなければレンズブロックを交換する(注意)。交換してもエラーが発生する場合はVC-592基板を交換する。

注意: レンズブロックを交換した場合は、Adjust StationからAdjust Manualを起動させて必要な調整項目を実施すること。 調整後は手振れ補正ONの状態にして、手持ち動作で手振れ補正が適切に動作していることを確認する。

1-6. キャビネット(BM)交換時の注意

1-6-1. キャビネット (BM) 注文時の注意

機種の表示部はレーザー印字方式を採用しております。 この為,交換用のキャビネット(BM)は機種,仕向けによ り異なります。類似の表示もありますので、該当するもの を選んで注文してください。

注意: キャビネット(BM)交換後はシリアルナンバーがサー ビス専用のシリアルナンバーに変更されます。お客 様への案内と修理データのシリアルナンバー変更を 行ってください。

HDR-CX550 (E 仕向) HDR-CX550 (KR 仕向) HDR-CX550E (NE 仕向) 0 0 0 シリアルナンバー Part No. Part No. Description Part No. Description Description CABINET BM(CX550E23) A-1771-847-A CABINET BM(CX550KR2) A-1771-853-A CABINET BM(CX550ECEL) A-1771-844-A HDR-CX550V (US 仕向) HDR-CX550E (E, HK, JE 仕向) HDR-CX550E (CH 仕向) 0 (0) (0) (0) -シリアルナンバー -シリアルナンバー -シリアルナンバー Part No. <u>Description</u> Part No. <u>Description</u> Part No. **Description** A-1771-851-A CABINET BM(CX550EE34) A-1771-854-A CABINET BM(CX550ECN2) A-1771-842-A CABINET BM(CX550VU2) HDR-CX550V (CND 仕向) HDR-CX550V (J 仕向) HDR-CX550VE (AEP 仕向) \bigcirc 0 ーシリアルナンバー -シリアルナンバー -シリアルナンバー Part No. **Description** Part No. A-1771-843-A CABINET BM(CX550VCA2) A-1771-831-A CABINET BM(CX550VJ1) A-1771-849-A CABINET BM(CX550VECEN) HDR-CX550VE (AUS 仕向) HDR-XR550 (E 仕向) HDR-XR550 (KR 仕向) 0 0 0 ―シリアルナンバー ーシリアルナンバー -シリアルナンバー Part No. Part No. **Description** Part No. **Description** <u>Description</u> CABINET BM(CX550VEAU2) A-1771-860-A CABINET BM(XR550E23) CABINET BM(XR550KR2) A-1771-850-A A-1771-861-A HDR-XR550 (JE 仕向) HDR-XR550E (NE 仕向) HDR-XR550E (E 仕向) 0 0

Description

CABINET BM(XR550ECEL)

HDR-XR550E (HK, JE 仕向)



HDR-XR550V (CND 仕向)

0

A-1771-859-A


Part No.



0 -シリアルナンバー


HDR-XR550E (CH 仕向)


Part No. **Description** A-1771-868-A CABINET BM(XR550ECN2)

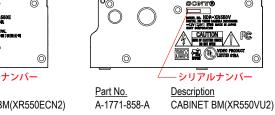

HDR-XR550V (US 仕向)

- JAPANESE -

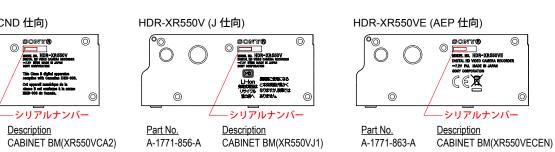

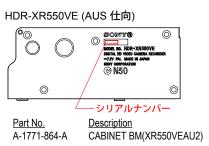

Description



Part No. A-1771-867-A

ーシリアルナンバー

CABINET BM(XR550JE3)

Description

Part No.

A-1771-862-A

-シリアルナンバー

CABINET BM(XR550EE34)

Description

Part No.

A-1771-865-A

1-6-2. 日本向けモデルのキャビネット (BM) ASSY交換時の注意

交換前のキャビネット(BM)に印字されている"製造年(下図の○部の表示)"と同じ表示のラベルを新しいキャビネット(BM) に貼付けてください。


例:下図では、"09年製"のラベルを貼る

*ラベルは,サービス用キャビネット(BM)に「投げ込み(ラベル貼り方)」を含めて同梱されています。

HDR-CX550V (J 仕向)



HDR-XR550V (J 仕向)

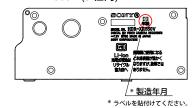

1-6-3. US向けモデルのキャビネット(BM)交換時の注意

交換前のキャビネット(BM)に印字されている"製造年月(下図の○部の表示)"と同じ表示のラベルを新しいキャビネット(BM)に貼付けてください。


例:下図では、"OA"のラベルを貼る

* ラベルは、サービス用キャビネット(BM)に「投げ込み(ラベル貼り方)」を含めて同梱されています。

HDR-CX550V (US 仕向)



HDR-XR550V (US 仕向)

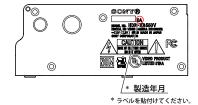

1-6-4. 韓国向けモデルのキャビネット(BM)交換時の注意

交換前のキャビネット(BM)に印字されている"製造年月(下図の○部の表示)"と同じ表示のラベルを新しいキャビネット(BM)に貼付けてください。

例:下図では、"2010-01"のラベルを貼る

*ラベルは、サービス用(BM)に「投げ込み(ラベル貼り方)」を含めて同梱されています。

HDR-CX550 (KR 仕向)



HDR-XR550 (KR 仕向)




1-7. GPS 受信確認 (CX550V/CX550VE/XR550V/XR550VE)

部品交換やセット組み立て後は、GPS 信号受信確認を行います。

GPS 機能確認方法

空の開けた場所で、GPSスイッチを「ON」にすると、 MS が表示され、 測位準備が行われます。 測位できた場合、 動画・静止画の撮影時に位置情報を記録します。

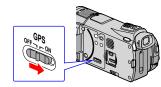



CX550V/CX550VE

XR550V/XR550VE

(を) ご注意

• GPS衛星からの電波の受信状況によって画面に表示されるアイコンが変わります。

測位状況	画面表示	GPS受信状況		
機能切非表示		GPSスイッチが「OFF」になっている,またはエラーが起きている。		
測位不可 💉		GPS信号を受信できないため,位置情報が取れない。 空の開けた場所に移動してGPSスイッチを入れなおしてください。		
衛星探索中	X Ø	GPS信号を確認中。測位中になるまで数分かかることがあります。		
測位中 光山		GPS信号を受信中。位置情報を取得できる。		
測位中	×.ıl	強いGPS信号を受信中。位置情報を取得できる。		

- 初めて使う場合やしばらく使わなかった場合は、位置情報を取得できるまで数十秒から数分かかることがあります。
- GPS受信状況によっては位置情報を取得できないことがあります。
- しばらくの間 🐼 が表示されて測位に時間がかかる場合は、GPSスイッチを一度「OFF」にして、再度「ON」にしてください。

1-8. HDD (XR550V/XR550VE), DD-329基板 (CX550V/CX550VE) 交換時の注意


地図データ入りHDD (XR550V/XR550VE) またはDD-329基板 (CX550V/CX550VE)にはファクトリーチェックを行わないでください。


ファクトリーチェックを行うと、地図データが消去されてしまいます。

2. REPAIR PARTS LIST

IDENTIFYING PARTS

Follow the disassembly in the numerical order given.

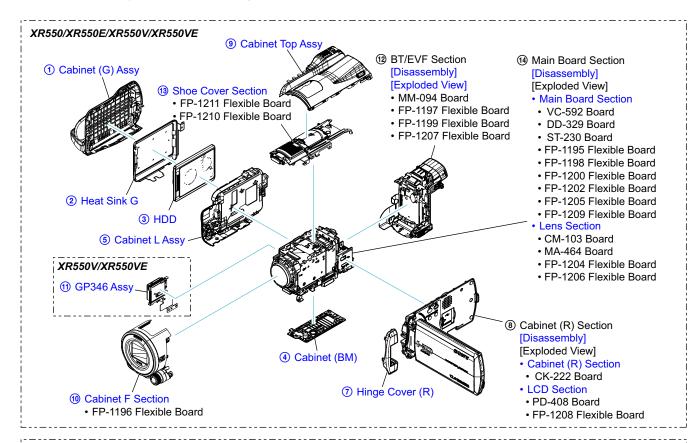

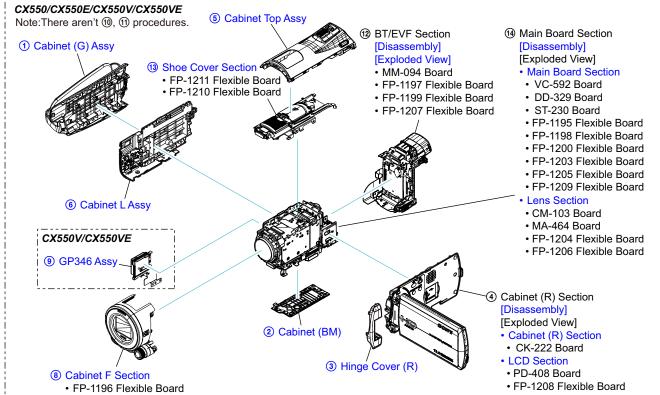

DISCHARGING OF THE CHARGING CAPACITOR

ACCESSORIES

ASSEMBLY

(ENGLISH)

NOTE:

- · -XX, -X mean standardized parts, so they may have some differences from the original
- · Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- · The mechanical parts with no reference number in the exploded views are not sup-
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- CAPACITORS:
- uF: μF
- · COILS
- uH: μH
- RESISTORS

All resistors are in ohms.

METAL: metal-film resistor

METAL OXIDE: Metal Oxide-film resistor

F: nonflammable

SEMICONDUCTORS

In each case, u: µ, for example:

uA...: μA... , uPA... , μPA...

 $uPB...\;,\; \mu PB...\;,\; \mu PC...\;,\; \mu PC...\;,\;$

uPD..., μPD...

(JAPANESE)

【使用上の注意】

- ここに記載されている部品は、補修用部品であるため、回路図及びセットに付いてい る部品と異なる場合があります。
- -XX,-Xは標準化部品のため,セットに付いている部品と異なる場合があります。
- ・ *印の部品は常備在庫しておりません。
- ・ コンデンサの単位で μ Fを示します。
- ・ 抵抗の単位Ωは省略してあります。
- 被:金属被膜抵抗 サンキン:酸化金属被膜抵抗
- ・ インダクタの単位でuHは μH を示します。
- ・ 半導体の名称でuA..., uPA..., uPB..., uPC..., uPD...等はそれぞれ μ A..., μ PA..., μ PB..., μPC..., μPD...を示します。

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark rianlge rianlge are critical for

Replace only with part number specified.

Les composants identifiés par une marque Ne les remplacer que par une pièce portant le numéro spécifié.

Color Indication of Appearance Parts Example:

(SILVER): Cabinet's Color (Silver) : Parts Color

図面番号で部品を指定するときは基板名 又はブロックを併せて指定してください。

△印の部品、または△印付の点線で囲ま れた部品は、安全性を維持するために、 重要な部品です。 従って交換時は,必ず指定の部品を使用

してください。


• 外装部品色表示

(SILVER) : セットの色を表す。 (Silver) :部品の色を表す。

Abbreviation

NE

AUS : Australian model : Chinese model : Canadian model CND HK : Hong Kong model : Japanese model JΕ : Tourist model KR Korea model : North European model

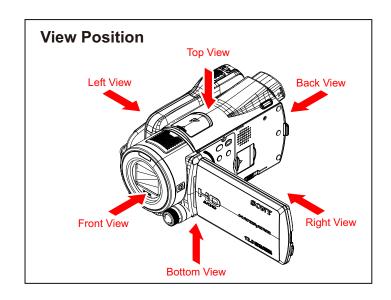


Link

NOTE FOR REPAIR

- Make sure that the flat cable and flexible board are not cracked of bent at the terminal.
- Do not insert the cable insufficiently nor crookedly.
- When remove a connector, don't pull at wire of connector. It is possible that a wire is snapped.
- When installing a connector, don't press down at wire of connector.
- It is possible that a wire is snapped.
- · Do not apply excessive load to the gilded flexible board.

Cut and remove the part of gilt which comes off at the point. (Be careful or some pieces of gilt may be left inside)

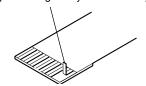

Note: High-voltage cautions

DISCHARGING OF THE ST-230 BOARD'S CHARGING CAPACITOR (C5012)


The charging capacitor (C5012) of the ST-230 board is charged up to the maximum 315 V potential.


There is a danger of electric shock by this high voltage when the capacitor is handled by hand. The electric shock is caused by the charged voltage which is kept without discharging when the main power of the unit is simply turned off. Therefore, the remaining voltage must be discharged as described below.

Preparing the Short Jig

To preparing the short jig, a small clip is attached to each end of a resistor of 1 k Ω /1 W (1-215-869-11).

Wrap insulating tape fully around the leads of the resistor to prevent electrical shock.

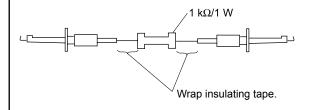

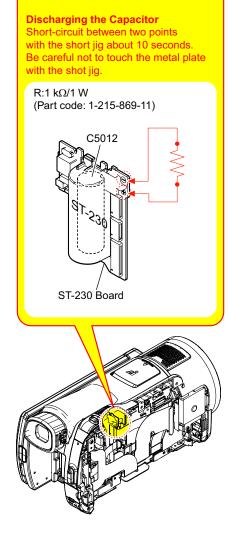

修理時の注意

- フラットケーブルおよびフレキシブル基板の端子面に欠け、 折れ等がないことを確認する。
 また、コネクタへの接続は、差し込み不足や斜め差しにならないように注意する。
- コネクタを取り外す時に、線材部(極細)を持って引っ張ると 断線する恐れがありますので、絶対に線材部(極細)を持って 引っ張らないでください。
- ・ 線材部(極細)を押さえながらコネクタを差し込むと、線材部 (極細)が断線する恐れがありますので、絶対に線材部(極細) には負担をかけないでください。
- ・金メッキされているフレキシブル基板には、強い負担をかけないでください。

先端の剥がれたメッキ部はカットして 除去してください。 (メッキ破片がコネクタ内に残っている



Note: 高電圧の警告

ST-230基板ストロボ用充電コンデンサ(C5012)の放電


ST-230基板のストロボ用充電コンデンサ(C5012)は最大 315Vの電圧で充電されています。


この高電圧で充電されたコンデンサに手を触れた場合, 電気ショックを受けます。この高電圧には単にセットの 電源を切っただけでは放電されず,残留しています。こ のため,下記の方法で残留電圧を放電してください。


ショート治具の準備

ショート治具は $1k\Omega/1W$ 抵抗(1-215-869-11)の両端に 小型のクリップを接続して作成します。

抵抗器は絶縁テープで完全に覆い電気ショックを受けないようにしてください。

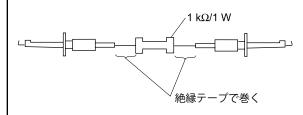

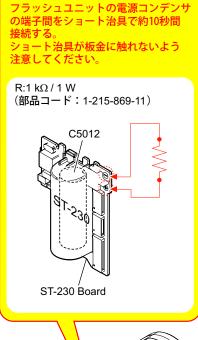

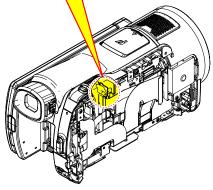


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1

(XR550/XR550E/XR550V/XR550VE)

Refer to page 2-4 about CX550/CX550E/CX550V/CX550VE ns: not supplied

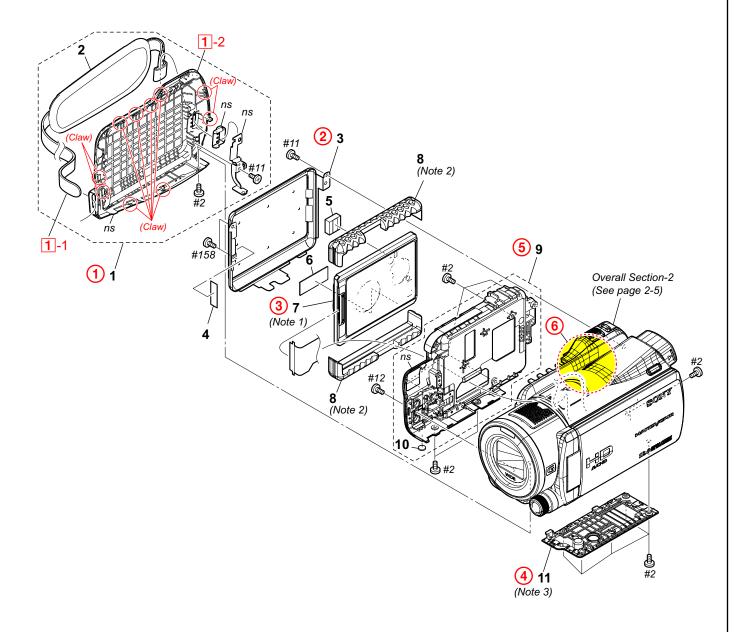

Refer to page 2-4 about CX550/CX550E/CX550V/CX550VE


Ref. No.	Part No.	<u>Description</u>	Ref. No.	Part No.	Description
1	X-2547-054-1	CABINET G (347) ASSY	10	2-589-376-01	FOOT (395), RUBBER
2	2-664-928-41	BELT, GRIP	11	(Note 3)	CABINET(BM)
3	4-177-960-01	HEAT SINK G (347)			
4	4-179-888-01	HD DAMPER SHEET	#2	2-635-562-31	SCREW (M1.7)
5	4-177-969-01	GASKET (10X10X4)	#11	3-078-890-11	SCREW, TAPPING
			#12	3-080-204-21	SCREW, TAPPING, P2
6	4-181-717-01	SHEET, HD GUARD	#158	2-660-401-51	SCREW (M1.7), NEW TRU-STAR, P2
7	1-840-187-21	HDD (MK2431GAH-240GB) (XR550/XR550E)			
7	A-1708-620-A	SERVICE (240G_OPAL), HDD (XR550V/XR550VE)			
		(Note 1)			
8	3-298-143-01	DAMPER (2), 08STYLE (Note 2)			
9	X-2547-052-1	CABINET L (347) ASSY			


DISASSEMBLY


1. Remove to numerical order (1) to 6) in the left figure.

1 #2 X 2 \rightarrow Remove the Grip Belt (1-1) \rightarrow Slide the Cabinet (G) Assy (1-2)

Bottom View

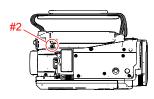

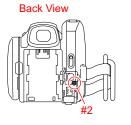


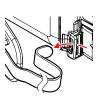


4 #2 X 5





② #11 X 1 → #158 X 2

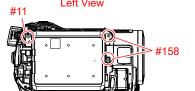

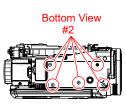

⑤ #12 X 1 → #2 X 6

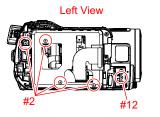

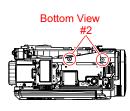



6


DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電

Screw

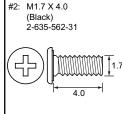

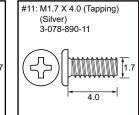

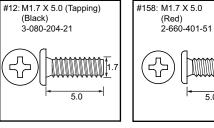


Note


Note 1: Do not factory check HDD in which Map Data is installed (XR550V/XR550VE). The map data is erased when the factory check is done.

Note 1: 地図データ入りHDD (XR550V/XR550VE) にはファクトリーチェックを行わないでください。ファクトリーチェックを行うと、地図データが消去されてしまいます。

Note 2: In case of attaching, turn concave portion to the main body side.

Concave Portion

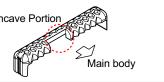

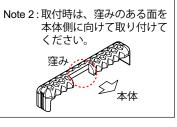


Note 3: Refer to page 1-4 "Precaution on replacing the Cabinet (BM)" when changing the Cabinet (BM).

Note 3: キャビネットボトム組立の交換時は、1-9ページの"キャビネット (BM) 交換時の注意"を参照してください。

2-1-2. OVERALL SECTION-1

(CX550/CX550E/CX550V/CX550VE)

Refer to page 2-3 about XR550/XR550E/XR550V/XR550VE ns: not supplied

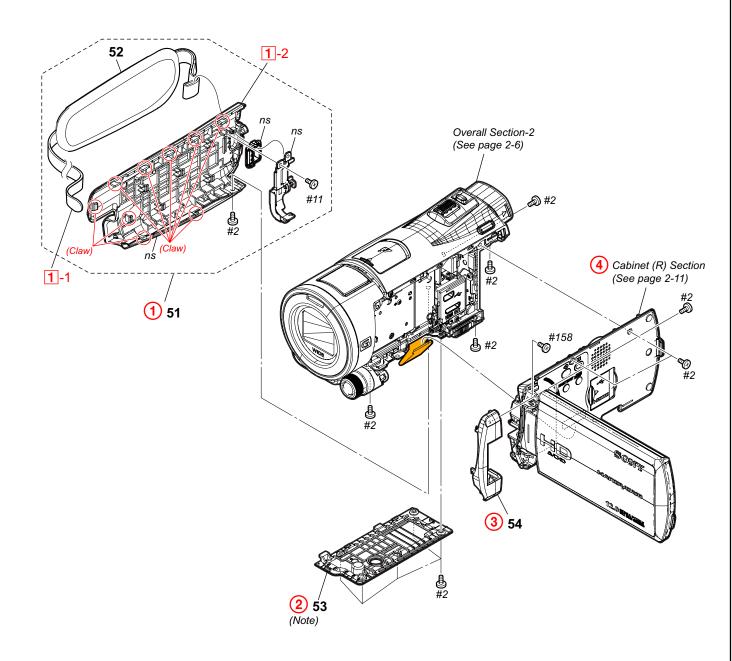

Refer to page 2-3 about XR550/XR550E/XR550V/XR550VE


Ref. No.	Part No.	Description	Ref. No.	Part No.	<u>Description</u>
51	X-2547-053-1	CABINET G (346) ASSY	#2	2-635-562-31	SCREW (M1.7)
52	2-664-928-41	BELT, GRIP	#11	3-078-890-11	SCREW, TAPPING
53	(Note)	CABINET(BM)	#158	2-660-401-51	SCREW (M1.7), NEW TRU-STAR, P2
* 54	4-177-957-01	COVER (R), HINGE			

DISASSEMBLY


1. Remove to numerical order (1) to 4) in the left figure.

1 #2 X 2 \rightarrow Remove the Grip Belt (1-1) \rightarrow Slide the Cabinet (G) Assy (1-2)

Bottom View

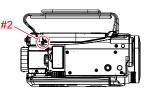




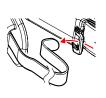


3 #2 X 2





2 #2 X 5

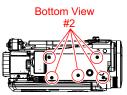


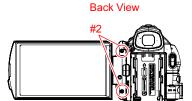


4 #2 X 5 \rightarrow #14 X 1 \rightarrow #158 X 1

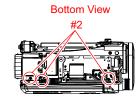


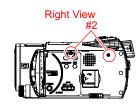


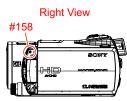

Screw

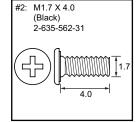

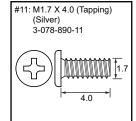

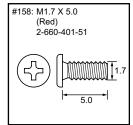

Note


Refer to page 1-4 "Precaution on replacing the Cabinet (BM)" when changing the Cabinet (BM).

キャビネット (BM) 組立の交換時は、1-9ページのキャビネット (BM) 交換時の注意"を参照してください。

2-1-3. OVERALL SECTION-2

(XR550/XR550E/XR550V/XR550VE)

Refer to page 2-6 about CX550/CX550E/CX550V/CX550VE

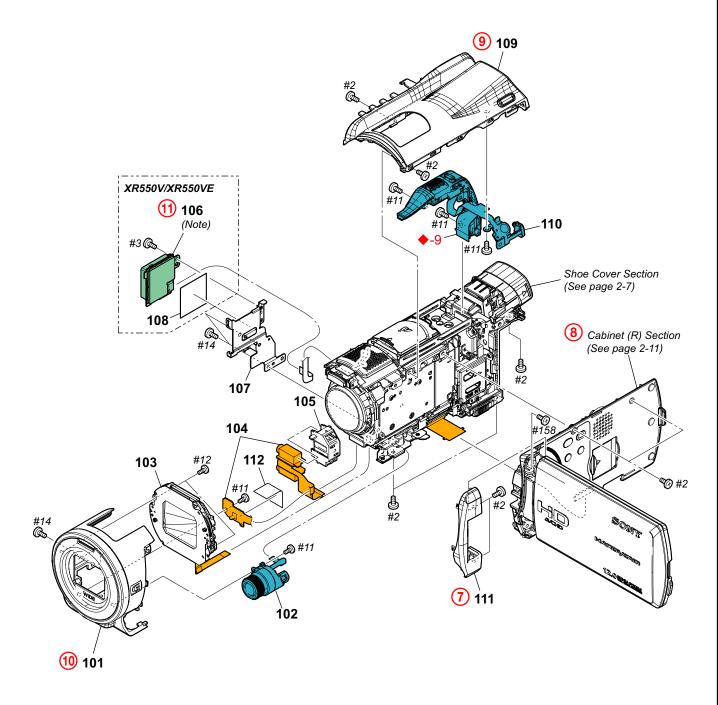

Refer to page 2-6 about CX550/CX550E/CX550V/CX550VE


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	X-2547-059-1	CABINET F (347) ASSY	110	1-487-842-11	SWITCH BLOCK, CONTROL (PS34700)
102	1-487-590-11	SWITCH BLOCK, CONTROL (RS34600)	* 111	4-177-957-01	COVER (R), HINGE
103	A-1760-135-A	BARRIER UNIT, LENS	112	2-590-635-01	TAPE (AS 1/2)
104	A-1765-106-A	FP-1196 FLEXIBLE BOARD, COMPLETE			
* 105	4-178-025-01	CASE (FRONT), JACK FIXED	#2	2-635-562-31	SCREW (M1.7)
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
106	A-1765-188-A	GP346 ASSY (GP-028) (XR550V/XR550VE) (Note)	#11	3-078-890-11	SCREW, TAPPING
* 107	4-177-950-01	GP FRAME	#12	3-080-204-21	SCREW, TAPPING, P2
108	4-181-947-01	SHEET (G), SHIELD (XR550V/XR550VE)	#14	2-599-475-11	SCREW (M1.7)
109	X-2547-050-1	CABINET TOP (347) ASSY (XR550V/XR550VE)			
109	X-2547-078-1	CABINET TOP (347) ASSY (N) (XR550/XR550E)	#158	2-660-401-51	SCREW (M1.7), NEW TRU-STAR, P

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2


DISASSEMBLY


- Remove to numerical order (7 to 11) in the left figure.
 The meaning of the sign in left figure is as follows. Be careful when it removes.
 - ◆-X: Flexible Board, Flat Cable, Harness


7 #2 X 2

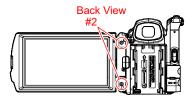


8 #2 X 5 \rightarrow #158 X 1

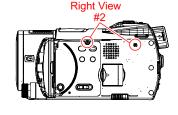


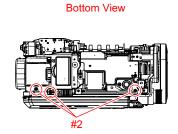

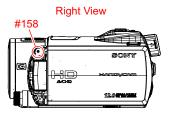



9 #11 X 1 → #2 X 2

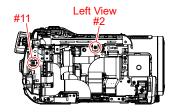

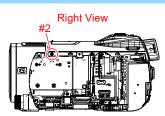


10 #14 X 1

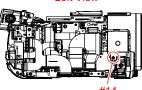

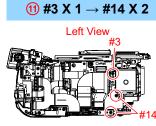


Screw

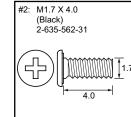


#12: M1.7 X 5.0 (Tapping)


3-080-204-21

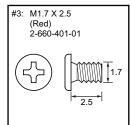

#14: M1.7 X 2.5

(Silver) 2-599-475-11

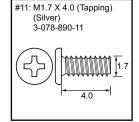

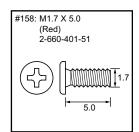

Note


Be sure to read "1-7. GPS RECEIVING CHECK" on page 1-5 when you exchange the GPS Assy (GP-028).

GPS Assy (GP-028) 交換時は、1-10ページ 「1-7. GPS受信確認」を必ずお読みください。

2-1-4. OVERALL SECTION-2

(CX550/CX550E/CX550V/CX550VE)

Refer to page 2-5 about XR550/XR550E/XR550V/XR550VE ns: not supplied

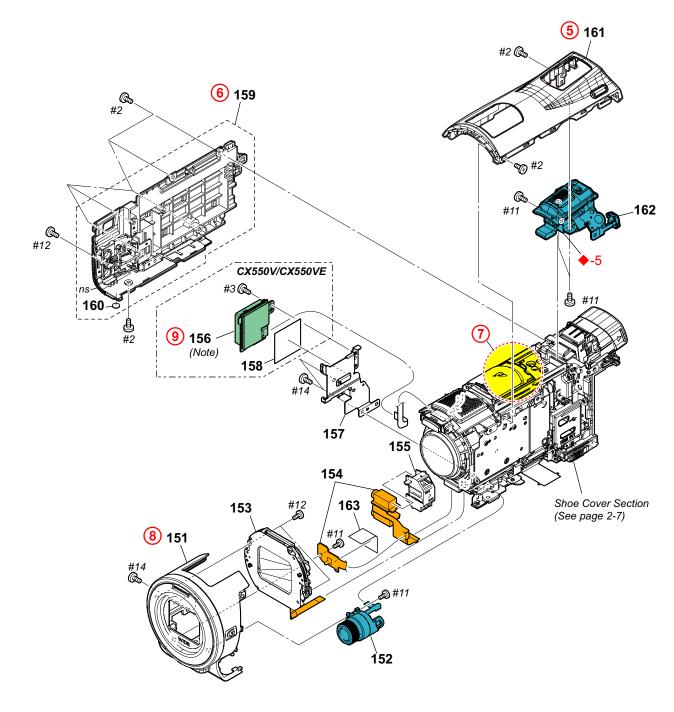

Refer to page 2-5 about XR550/XR550E/XR550V/XR550VE


Ref. No.	Part No.	<u>Description</u>	Ref. No.	Part No.	<u>Description</u>
151	X-2547-058-1	CABINET F (346) ASSY	161	X-2547-049-1	CABINET TOP (346) ASSY (CX550V/CX550VE)
152	1-487-590-11	SWITCH BLOCK, CONTROL (RS34600)	161	X-2547-077-1	CABINET TOP (346) ASSY (N) (CX550/CX550E)
153	A-1760-135-A	BARRIER UNIT, LENS	162	1-487-584-11	SWITCH BLOCK, CONTROL (PS34600)
154	A-1765-106-A	FP-1196 FLEXIBLE BOARD, COMPLETE	163	2-590-635-01	TAPE (AS 1/2)
* 155	4-178-025-01	CASE (FRONT), JACK FIXED			, ,
			#2	2-635-562-31	SCREW (M1.7)
156	A-1765-188-A	GP346 ASSY (GP-028) (CX550V/CX550VE) (Note)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
* 157	4-177-950-01	GP FRAME	#11	3-078-890-11	SCREW, TAPPING
158	4-181-947-01	SHEET (G), SHIELD (CX550V/CX550VE)	#12	3-080-204-21	SCREW, TAPPING, P2
159	X-2547-051-1	CABINET L (346) ASSY	#14	2-599-475-11	SCREW (M1.7)
160	2 500 276 01	EOOT (205) DUDDED			, ,

2-589-376-01 FOOT (395), RUBBER HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2


DISASSEMBLY

- Remove to numerical order (5 to 9) in the left figure.
 The meaning of the sign in left figure is as follows. Be careful when it removes.
 - ◆-X: Flexible Board, Flat Cable, Harness

⑤ #2 X 2 → #11 X 1

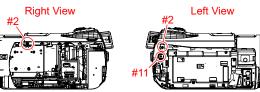



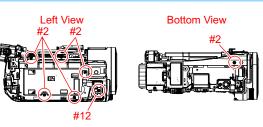


7


DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電


8 #14 X 1

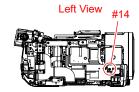



9 #3 X 1 → #14 X 2

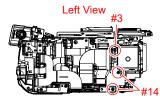



Screw

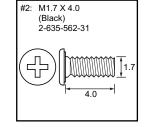

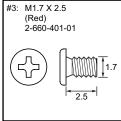

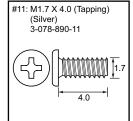

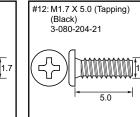

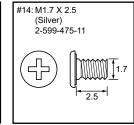


Note

Be sure to read "1-7. GPS RECEIVING CHECK" on page 1-5 when you exchange the GPS Assy (GP-028).

GPS Assy (GP-028) 交換時は、1-10ページ「1-7. GPS受信確認」 を必ずお読みください。

2-1-5. SHOE COVER SECTION

ns: not supplied

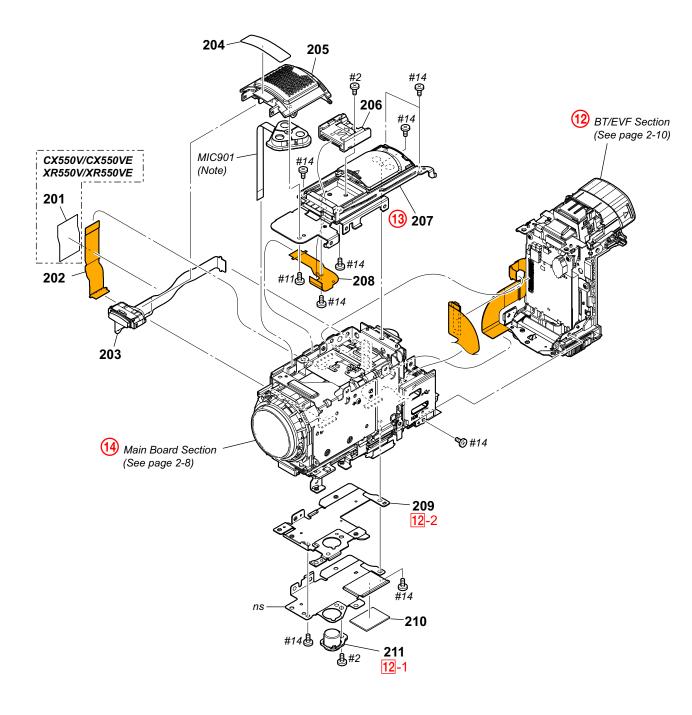



Ref. No.	Part No.	<u>Description</u>	Ref. No.	Part No.	Description
201	4-181-948-01	SHEET (L1), SHIELD	210	4-177-965-01	SHEET (BM), SHIELD
		(CX550V/CX550VE/XR550V/XR550VE)	211	3-283-643-01	SCREW, TRIPOD
202	1-880-392-11	FP-1210 FLEXIBLE BOARD			
203	1-487-579-11	FLASH UNIT (FL34600)	MIC901	1-542-711-61	MICROPHONE UNIT (Note)
* 204	4-177-968-01	INSULATING SHEET, STROBOSCOPE			
205	X-2547-047-1	HOLDER (346) ASSY, MICROPHONE	#2	2-635-562-31	SCREW (M1.7)
		(CX550/CX550E/CX550V/CX550VE)	#11	3-078-890-11	SCREW, TAPPING
205	X-2547-048-1	HOLDER (347) ASSY, MICROPHONE	#14	2-599-475-11	SCREW (M1.7)
		(XR550/XR550E/XR550V/XR550VE)			
206	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)			
207	X-2547-046-1	COVER ASSY, SHOE			
208	1-880-393-11	FP-1211 FLEXIBLE BOARD			
* 209	4-177-953-01	FRAME, BOTTOM			


DISASSEMBLY

1. Remove to numerical order (12) to 14) in the left figure.

12 #2 X 1 \rightarrow Tripod Screw (12-1) \rightarrow #14 X 2 \rightarrow Bottom Frame (12-2) \rightarrow #14 X 3

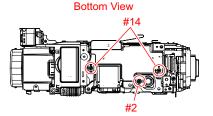

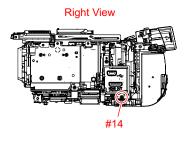


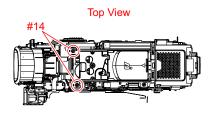



13 #14 X 2

#14

Screw

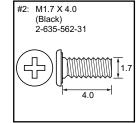

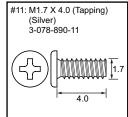


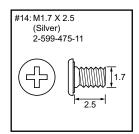

Note


Note: Refer to "Assembly-2: How to Fold the Microphone Flexible Board" when installing.


Note: 組立時は"Assembly-2: How to Fold the Microphone Flexible Board"を参照してください

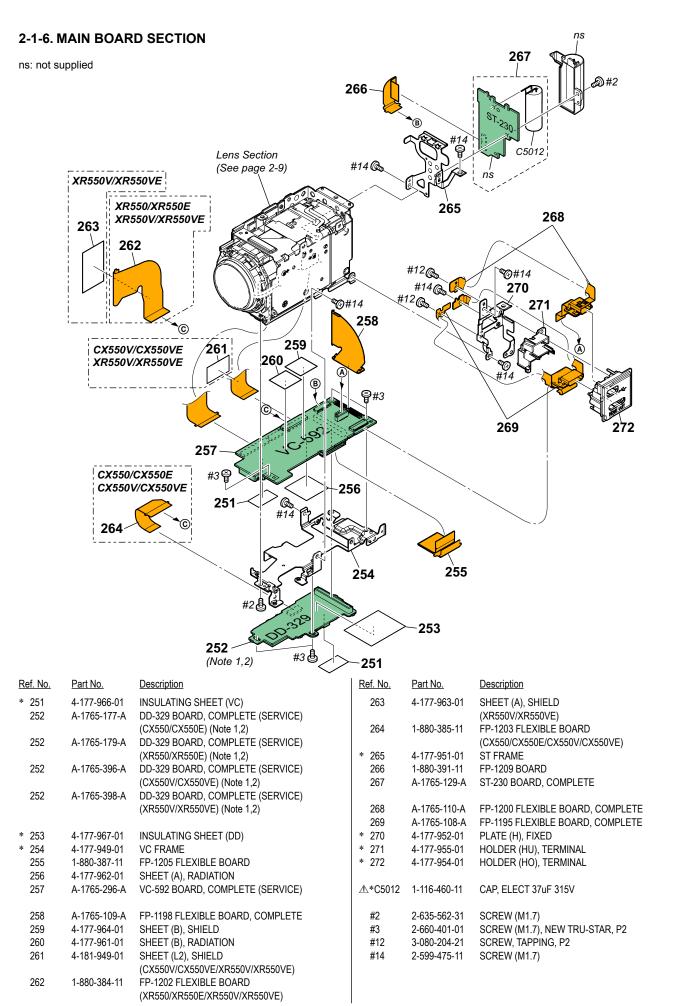



HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2

Screw

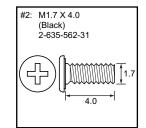

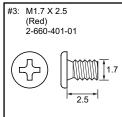

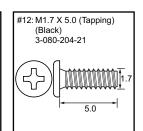

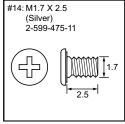


Note

- Note 1: When replacing the DD-329 board, start the Adjust Manual in the Adjust Station and refer to the "INTERNAL MEMORY ADJUSTMENTS".
- Note 2: Do not factory check DD-329 board in which Map Data is installed (CX550V/CX550VE).

 The map data is erased when the factory check is done.
- Note 1: DD-329基板を交換の際は、Adjust Stationから Adjust Manualを起動させて「INTERNAL MEMORY ADJUSTMENTS」を参照してください。
- Note 2: 地図データ入りDD-329基板 (CX550V/CX550VE) にはファクトリーチェックを行わないでください。ファクトリーチェックを行うと、地図データが消去されてしまいます。

2-1-7. LENS SECTION


ns: not supplied

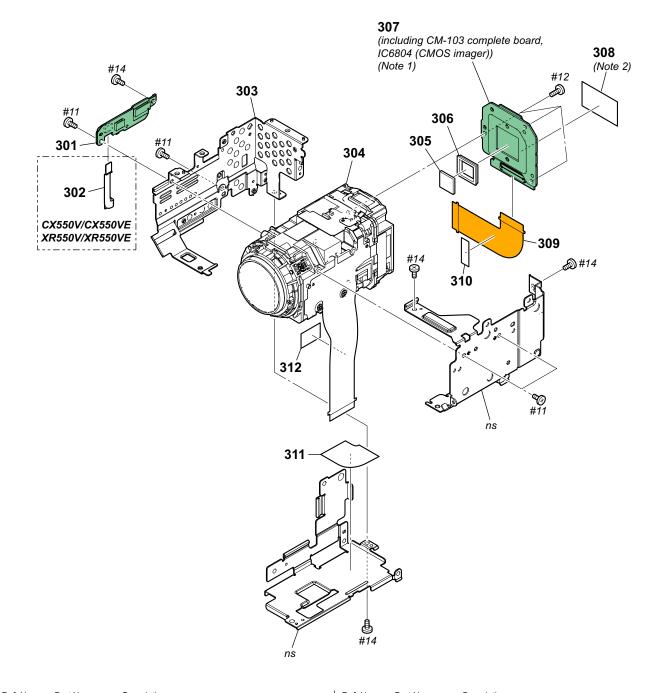



Ref. No.	Part No.	Description	Ref. No.	Part No.	<u>Description</u>
301	A-1765-130-A	MA-464 BOARD, COMPLETE	* 310	4-178-006-01	SHEET (5X13)
		(CX550V/CX550VE/XR550V/XR550VE)	* 311	4-178-005-01	SHEET (C), SHIELD
301	A-1765-131-A	MA-464 BOARD, COMPLETE	* 312	4-177-966-01	INSULATING SHEET (VC)
		(CX550/CX550E/XR550/XR550E)			
302	1-880-386-11	FP-1204 FLEXIBLE BOARD	#11	3-078-890-11	SCREW, TAPPING
		(CX550V/CX550VE/XR550V/XR550VE)	#12	3-080-204-21	SCREW, TAPPING, P2
* 303	4-178-003-01	FRAME (L), LENS	#14	2-599-475-11	SCREW (M1.7)
304	A-1733-302-A	LSV-1390A (SERVICE)			
205	1 056 022 21	ODTICAL FILTERRI OCIZ (OFR 03 F2)			
305	1-856-033-21	OPTICAL FILTERBLOCK (OFB-03-52)			
306	3-216-044-01	RUBBER (1270), SEAL			
307	A-1733-301-A	CMOS BLOCK ASSY (1390)			
		(including CM-103 complete board, IC6804 (CMOS			
		imager)) (Note 1)			
* 308	4-135-726-01	SHEET (CM), RADIATION (Note 2)			
309	1-880-388-11	FP-1206 FLEXIBLE BOARD			

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2

Screw

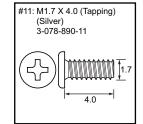

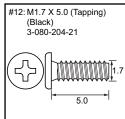

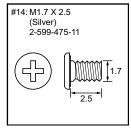


Note

- **Note 1:** Be sure to read "Precautions for Replacement of Imager" on page 6-1 when changing the imager.
- Note 2: The Radiation Sheet CM when peeling off once, so that it cannot be reused
- Note 1: イメージャの交換時は6 1 ページの"イメージャ交換時の注意"を必ずお読みください。
- Note 2: Radiation Sheet CMは一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-8. BT/EVF SECTION


ns: not supplied

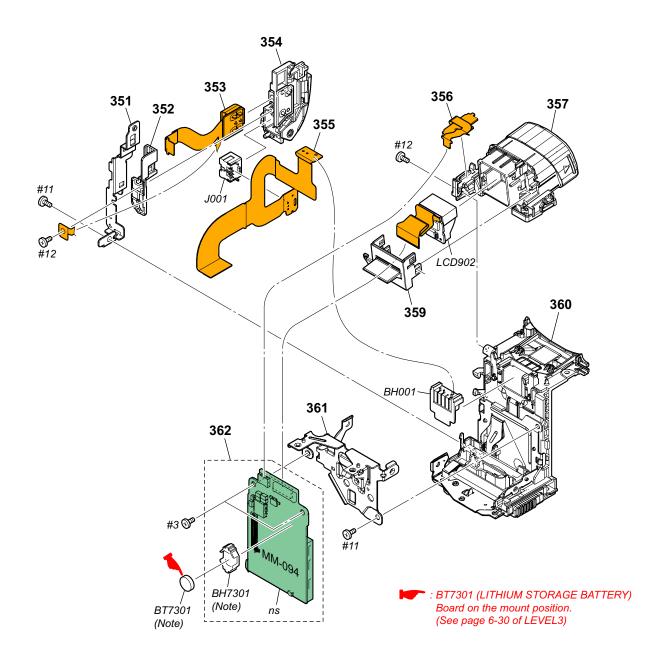



Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 351	4-178-009-01	PLATE, TERMINAL HOLDER FIXED	* 361	4-178-007-01	BT FRAME
* 352	4-178-008-01	RETAINER, TERMINAL	362	A-1765-294-A	MM-094 BOARD, COMPLETE (SERVICE)
353	A-1765-111-A	FP-1197 FLEXIBLE BOARD, COMPLETE			
354	X-2547-056-1	HOLDER (346) ASSY, TERMINAL	 ∆ BH001	1-780-064-21	BATTERY TERMINAL BOARD
		(CX550/CX550E/CX550V/CX550VE)	/∆*BH7301	1-251-928-21	SOCKET, BATTERY (Note)
354	X-2547-057-1	HOLDER (347) ASSY, TERMINAL	⚠ BT7301	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
		(XR550/XR550E/XR550V/XR550VE)	△ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
		,	LCD902	1-811-013-11	LCD MODULE (FL0906)
355	1-880-389-11	FP-1207 FLEXIBLE BOARD			
356	A-1765-107-A	FP-1199 FLEXIBLE BOARD, COMPLETE	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
357	X-2547-060-1	EYE CUP ASSY	#11	3-078-890-11	SCREW, TAPPING
* 359	4-178-033-01	VF RETAINER	#12	3-080-204-21	SCREW, TAPPING, P2
360	X-2547-055-1	BT PANEL ASSY			

HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2

Screw

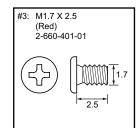

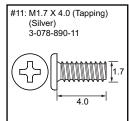

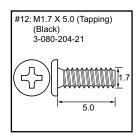

Note

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

Note: Replace the battery holder (BH7301) together when replacing the lithium storage battery (BT7301) on the MM-094

> (The battery holder removed once cannot be used again.)

When mounting these parts, mount new battery holder first and attach new lithium storage battery next.


- **注意:**電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と
交換してください。
使用済み電池は、 では、150円 使用済み電池は、取扱指示に従って処分してください。

MM-094基板のリチウム蓄電池 (BT7301) を交換する場合 はバッテリホルダ (BH7301) も同時に新品に交換してく Note:

(一度使用したバッテリホルダは再使用できません。) 部品取り付けの際は、先にバッテリホルダを取り付けてからリチウム蓄電池を装着してください。


2-1-9. CABINET (R) SECTION


ns: not supplied

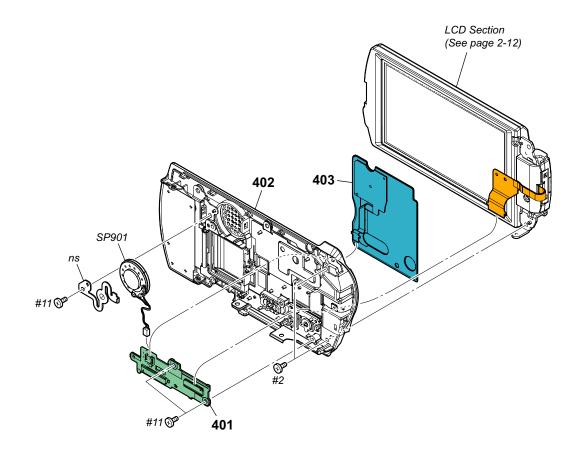

Ref. No.	Part No.	Description	Ref. No.	Part No.	<u>Description</u>
401	A-1765-174-A	CK-222 BOARD, COMPLETE (CX550V/CX550VE/XR550V/XR550VE)	403	1-487-585-21	SWITCH BLOCK, CONTROL (SK34600) (CX550/CX550E/XR550/XR550E)
401	A-1765-175-A	CK-222 BOARD, COMPLETE			,
		(CX550/CX550E/XR550/XR550)	SP901	1-858-075-12	SPEAKER (1.8CM)
402	X-2547-061-1	CABINET R ASSY			
		(CX550V/CX550VE/XR550V/XR550VE)	#2	2-635-562-31	SCREW (M1.7)
402	X-2547-079-1	CABINET R ASSY (N)	#11	3-078-890-11	SCREW, TAPPING
		(CX550/CX550E/XR550/XR550E)			
403	1-487-585-11	SWITCH BLOCK, CONTROL (SK34600)			
		(CX550V/CX550VE/XR550V/XR550VE)			


Screw

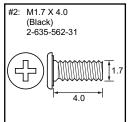

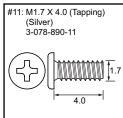


2-1-10. LCD SECTION


ns: not supplied

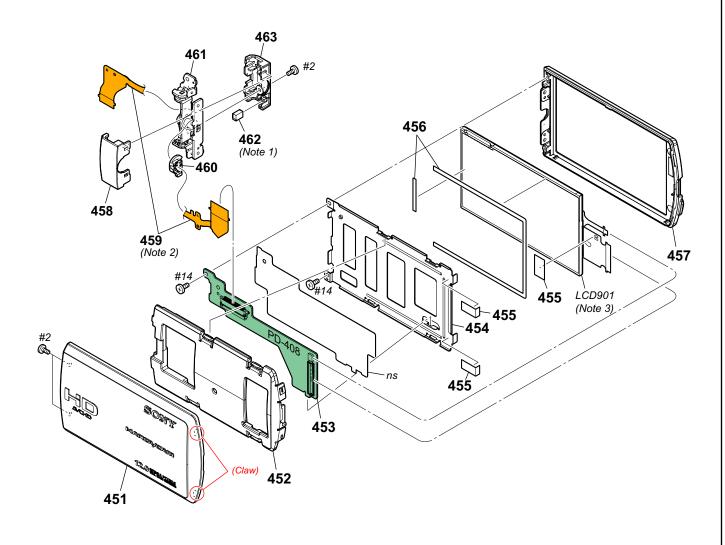


Ref. No.	Part No.	<u>Description</u>	Ref. No.	Part No.	<u>Description</u>
451	4-178-058-01	P CABINET C (CX550/CX550E/CX550V/CX550VE)	* 460	4-167-146-01	CLAMP, FLEXIBLE (346)
451	4-178-058-11	P CABINET C (XR550/XR550E/XR550V/XR550VE)	461	X-2547-062-1	HINGE (346) ASSY
* 452	4-178-061-01	MOLD, LCD INNER	462	1-471-504-11	MAGNET (ND5X3.5X2.4-B) (Note 1)
453	A-1765-173-A	PD-408 BOARD, COMPLETE	* 463	4-178-063-01	COVER (U), HINGE
454	4-178-060-01	LCD FRAME			
			LCD901	A-1763-666-A	LCD BLOCK ASSY (SERVICE) (Note 3)
* 455	4-178-006-01	SHEET (5X13)			
456	4-182-483-01	CUSHION, LCD (346)	#2	2-635-562-31	SCREW (M1.7)
457	4-178-059-01	P CABINET M	#14	2-599-475-11	SCREW (M1.7)
* 458	4-178-062-01	COVER (O), HINGE			
459	1-880-390-11	FP-1208 FLEXIBLE BOARD (Note 2)			


Screw

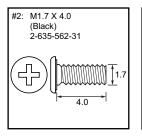


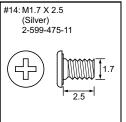

Note

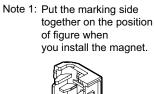


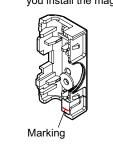

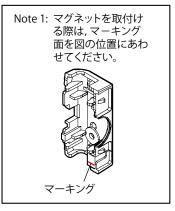


Note2: Refer to "Assembly-1: The methode of attachment of FP-1208 Flexible Board" when installing .

Note 3: Push the LCD Frame from the side in the back, and check whether there is between LCD unit and the P cabinet M the space.

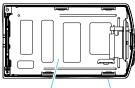

LCD Frame P Cabinet M

Check whether LCD unit is at the center of the window frame.

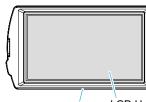


Window Frame LCD Unit

When LCD unit shifts from the center of the window frameInstall the LCD unit again, and align the LCD unit to the center of the window frame (align the upper and lower, right and left, even). (Don't be stranded Pcabinet M on a LCD unit.)


Note 2: 組立時は"Assembly-1: The methode of attachment of FP-1208 Flexible board"を参照してください。

Note 3: 後ろ側からLCDフレームを押し、LCDユニットと PキャビネットMの間 に隙間が無いことを確認 してください。

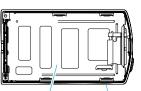

LCDフレーム PキャビネットM


LCD ユニットが窓枠の中央にあるか確認して ください。

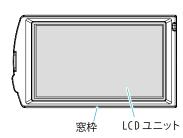

LCDユニットが窓枠の中央からずれている場合は LCDユニットが窓枠の中心(上下左右均等に なるように取り付け直してください。 (PキャビネットMがLCDユニットに乗り上げないように)


• EXCEPT J MODEL

Checking supplied accessories.

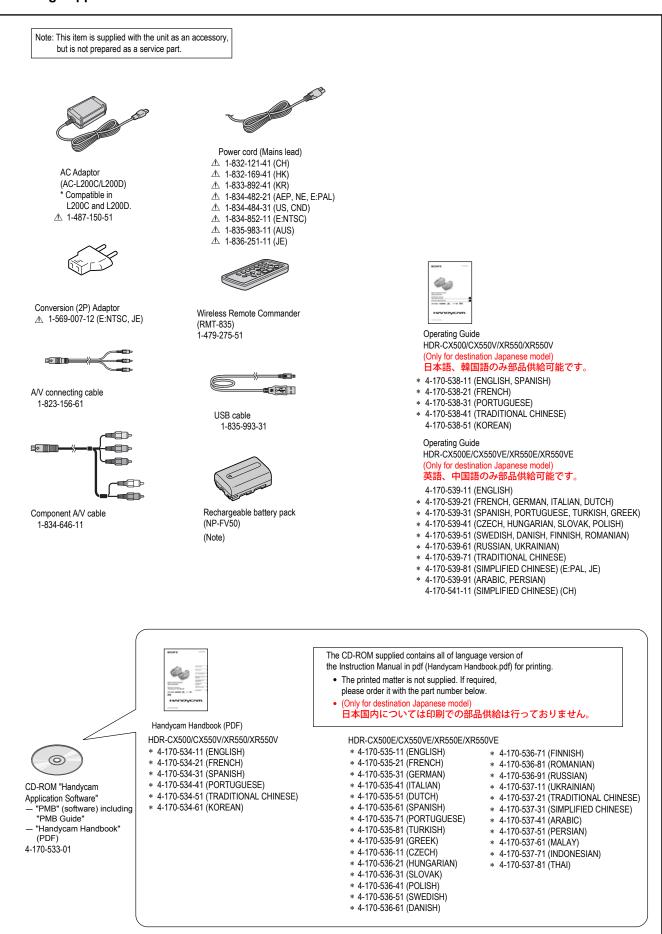

• J MODEL

付属品

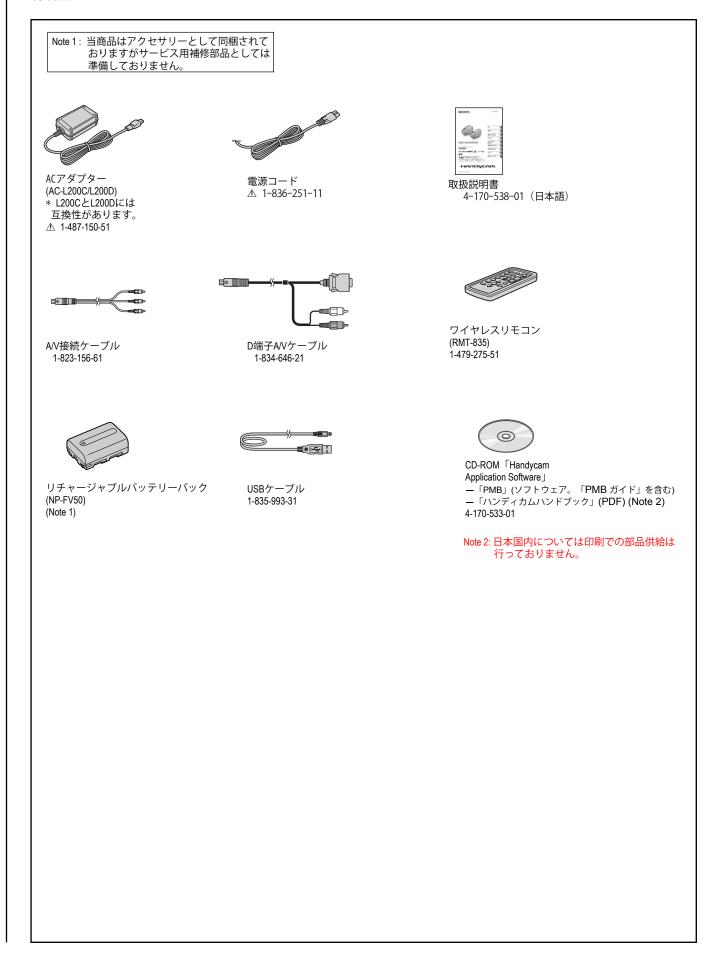

2-2. ELECTRICAL PARTS LIST

2-2. ELI	ECIRICAL	PARIS LIST
Ref. No.	<u>Part No.</u> A-1765-174-A A-1765-175-A	<u>Description</u> CK-222 BOARD, COMPLETE (CX550V/CX550VE/XR550V/XR550VE) CK-222 BOARD, COMPLETE (CX550/CX550E/XR550/XR550E) ************************************
* C5801	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
		< CONNECTOR >
		CONNECTOR, FPC (ZIF) 45P FFC/FPC CONNECTOR (LIF) 6P CONNECTOR, FPC (ZIF) 33P PIN, CONNECTOR (PC BOARD) 2P
		< RESISTOR >
R5803	1-218-990-81	SHORT CHIP 0 (CX550/CX550E/XR550/XR550E)
R5804 R5805 R5806 R5807	1-218-958-11 1-218-963-11 1-218-972-11 1-218-985-11	METAL CHIP 2.7K 5% 1/16W METAL CHIP 6.8K 5% 1/16W METAL CHIP 39K 5% 1/16W METAL CHIP 470K 5% 1/16W (CX550V/CX550VE/XR550V/XR550VE)
R5808	1-218-941-81	METAL CHIP 100 5% 1/16W
		< SWITCH >
* S5801 * S5802 S5803	1-786-914-31 1-786-914-31 1-798-253-21	SWITCH, TACTILE SWITCH, TACTILE SWITCH, SLIDE (CX550V/CX550VE/XR550V/XR550VE)
		< SENSOR >
* SE5801	1-487-118-11	GMR SENSOR
	A-1765-108-A	FP-1195 FLEXIBLE BOARD, COMPLETE ***********************************
		< CONNECTOR >
CN1301	1-821-166-21	HDMI CONNECTOR
		< LINE FILTER >
LF002 LF003	1-457-374-21 1-457-374-21 1-457-374-21 1-457-374-21	COMMOM MODE CHOKE COIL COMMOM MODE CHOKE COIL COMMOM MODE CHOKE COIL COMMOM MODE CHOKE COIL
	A-1765-106-A	FP-1196 FLEXIBLE BOARD, COMPLETE ***********************************
		< CAPACITOR >
C6501 C6502	1-165-989-11 1-112-717-91	CERAMIC CHIP 10uF 10% 6.3V CERAMIC CHIP 1uF 10% 6.3V

Ref. No.	Part No.	Description < DIODE >
D6502 * D6503	6-502-193-01 6-502-198-01	DIODE SML-D12V8WT86SN DIODE SML-J13RTT86
		< IC >
IC6501	6-600-163-01	IC RS-770
		< JACK >
J1301 J1302		,
	A-1765-111-A	FP-1197 FLEXIBLE BOARD, COMPLETE
		< CONNECTOR >
CN1303	1-815-794-13	
		, ,
	A-1765-109-A	FP-1198 FLEXIBLE BOARD, COMPLETE
		< CONNECTOR >
* CN001 * CN002	1-822-379-11 1-822-379-11	CONNECTOR, BOARD TO BOARD 80P CONNECTOR, BOARD TO BOARD 80P
	A-1765-107-A	FP-1199 FLEXIBLE BOARD, COMPLETE ***********************************
		< SWITCH >
S8901	1-771-487-11	SWITCH, SLIDE
	A-1765-110-A	FP-1200 FLEXIBLE BOARD, COMPLETE
	A-1765-110-A	*******
014000		**************************************
CN1302	A-1765-110-A 1-822-425-21	*******
CN1302		**************************************
CN1302	1-822-425-21	<pre> </pre> <pre> </pre> <pre> <pre< td=""></pre<></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>

Ref. No.	Part No.	Description	Ref. No.	Part No.	<u>Description</u>			
	1-880-387-11	FP-1205 FLEXIBLE BOARD ************************************		A-1765-129-A	ST-230 BOARD, C			
					< CAPACITOR >			
	1-880-388-11	FP-1206 FLEXIBLE BOARD ************************************	C5003 C5004 * C5006 C5007 * C5011	1-125-777-11 1-114-238-91 1-112-746-11 1-164-850-11 1-116-457-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1uF 22uF 4.7uF 10PF 0.033uF	10% 20% 10% 0.5PF 10%	10V 10V 6.3V 50V 350V
	1-880-389-11	FP-1207 FLEXIBLE BOARD ************************************	△*C5012 C5101 C5102	1-116-460-11 1-164-935-11 1-164-935-11	CAP, ELECT CERAMIC CHIP CERAMIC CHIP	37uF 470PF 470PF	10% 10% 10%	315V 50V 50V
	1-880-390-11	FP-1208 FLEXIBLE BOARD			< CONNECTOR >			
		********	* CN5002	1-816-644-51 1-816-643-51 1-816-648-61	FFC/FPC CONNE FFC/FPC CONNE FFC/FPC CONNE	CTOR (LIF)	10P	
	1-880-391-11	FP-1209 FLEXIBLE BOARD			< DIODE >			
			≜ *D5002	6-501-096-01	DIODE CRF02 (1	ΓE85R)		
	1-880-392-11	FP-1210 FLEXIBLE BOARD ************************************			< FERRITE BEAD	>		
			FB5101 FB5102	1-500-238-11 1-500-238-11	BEAD, FERRITE (BEAD, FERRITE (
	1-880-393-11	FP-1211 FLEXIBLE BOARD			< IC >			
				6-712-975-01	IC BD4215NUV-E	Ξ2		
	A-1765-130-A	MA-464 BOARD, COMPLETE			< COIL >			
	A-1765-131-A	(CX550V/CX550VE/XR550V/XR550VE) MA-464 BOARD, COMPLETE (CX550/CX550E/XR550/XR550E)	* L5001	1-400-820-11	INDUCTOR < TRANSISTOR >	2.2uH		
		*********	/*Q5002	6-552-144-01	TRANSISTOR	TIG052TS	S-TL-E	
		< CAPACITOR >			< RESISTOR >			
* C5701	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V (CX550V/CX550VE/XR550V/XR550VE) < CONNECTOR >	R5008 R5009 R5015 R5016	1-218-965-11 1-218-965-11 1-216-809-11 1-218-989-11	METAL CHIP METAL CHIP METAL CHIP METAL CHIP	10K 10K 100 1M	5% 5% 5%	1/16W 1/16W 1/10W 1/16W
CN5702 CN5703 * CN5703	1-821-502-11 1-816-654-61 1-816-645-61 1-816-645-51 1-816-654-61	CONNECTOR, FPC (ZIF) 29P FFC/FPC CONNECTOR (LIF) 6P FFC/FPC CONNECTOR (LIF) 14P FFC/CONNECTOR, FPC (LIF) 14P FFC/FPC CONNECTOR (LIF) 6P	R5018 R5104 R5105	1-216-270-00 1-218-941-81 1-218-941-81	METAL CHIP METAL CHIP METAL CHIP	1M 100 100	5% 5% 5%	1/8W 1/16W 1/16W
		(CX550V/CX550VE/XR550V/XR550VE)			< TRANSFORMER	₹>		
		< IC >	<u></u> 1	1-445-491-21	D.CD.C.CONVE	RTER TRAN	SFORME	R
* IC5701	6-711-739-01	IC TC7WG126FK (CX550V/CX550VE/XR550V/XR550VE)	VDR001	1-802-090-21	< VARISTOR > VARISTOR, CHIP			
		< RESISTOR >	VDR002	1-802-090-21 1-802-090-21 1-802-090-21	VARISTOR, CHIP VARISTOR, CHIP VARISTOR, CHIP			
R5701	1-218-977-11	METAL CHIP 100K 5% 1/16W (CX550V/CX550VE/XR550V/XR550VE)	VDR004	1-802-090-21 1-802-090-21	VARISTOR, CHIP VARISTOR, CHIP			
	1-218-963-11	METAL CHIP 6.8K 5% 1/16W	1					


CM-103、DD-329、MM-094、PD-408、およびVC-592の ELECTRICAL PARTS LISTについては、LEVEL3を参照して下さい。


3. ASSEMBLY

Assembly-1: The Method of attachment of FP-1208 Flexible Board


1) Fold dotted line parts of the FP-1208 flexible board as shown in figure.



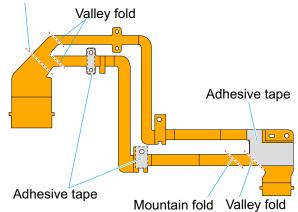


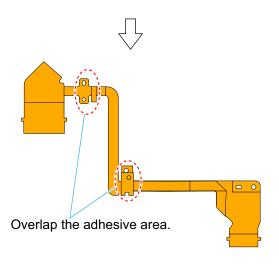


② Pass the FP-1208 flexible board through the flexible clamp.

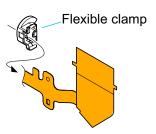


3 Install the flexible clamp in the hinge assy

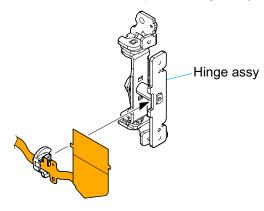


(4) Roll the FP-1208 flexible board 1.5 times, in the direction of the arrow (A).

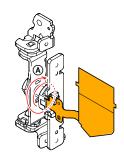


(5) Put the adhesive part and FP-1208 flexible board on the hinge assy according to the position of the boss.

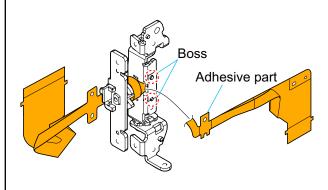

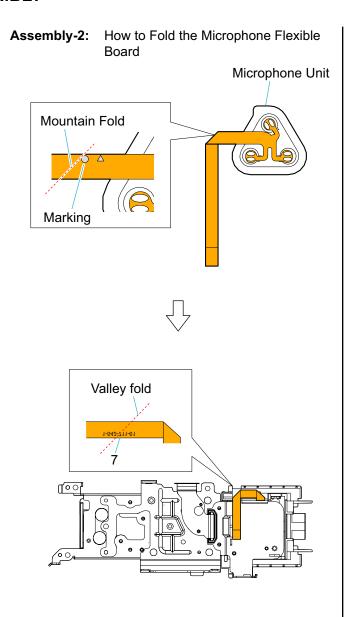


4. BLOCK DIAGRAMS


4-1. OVERALL BLOCK DIAGRAM (1/2) (): Number in parenthesis () indicates the division number of schematic diagram where the component is located.

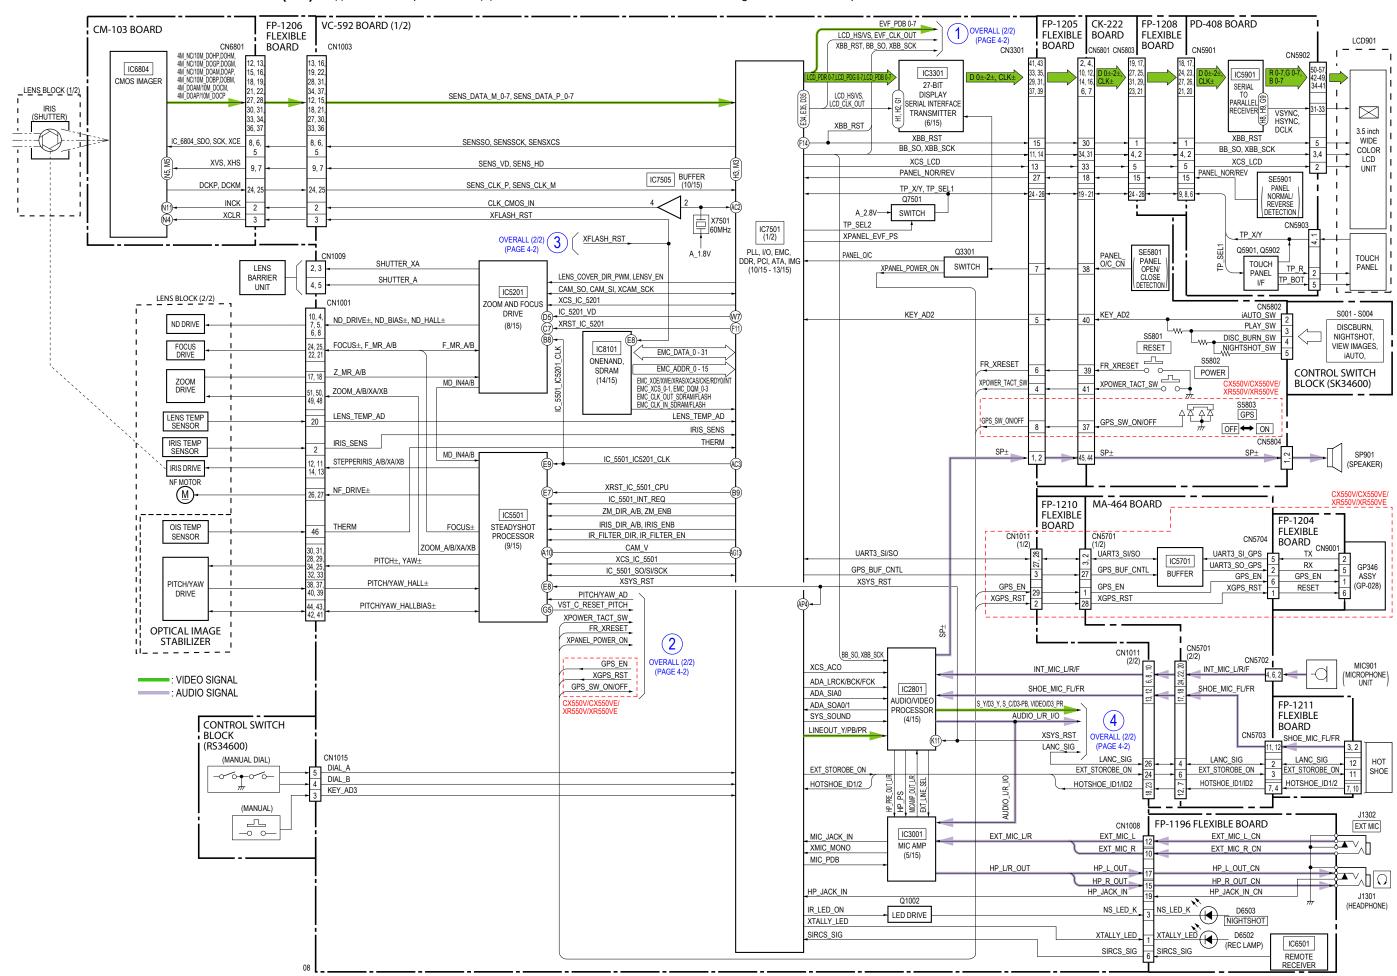


4-2. OVERALL BLOCK DIAGRAM (2/2) (): Number in parenthesis () indicates the division number of schematic diagram where the component is located.

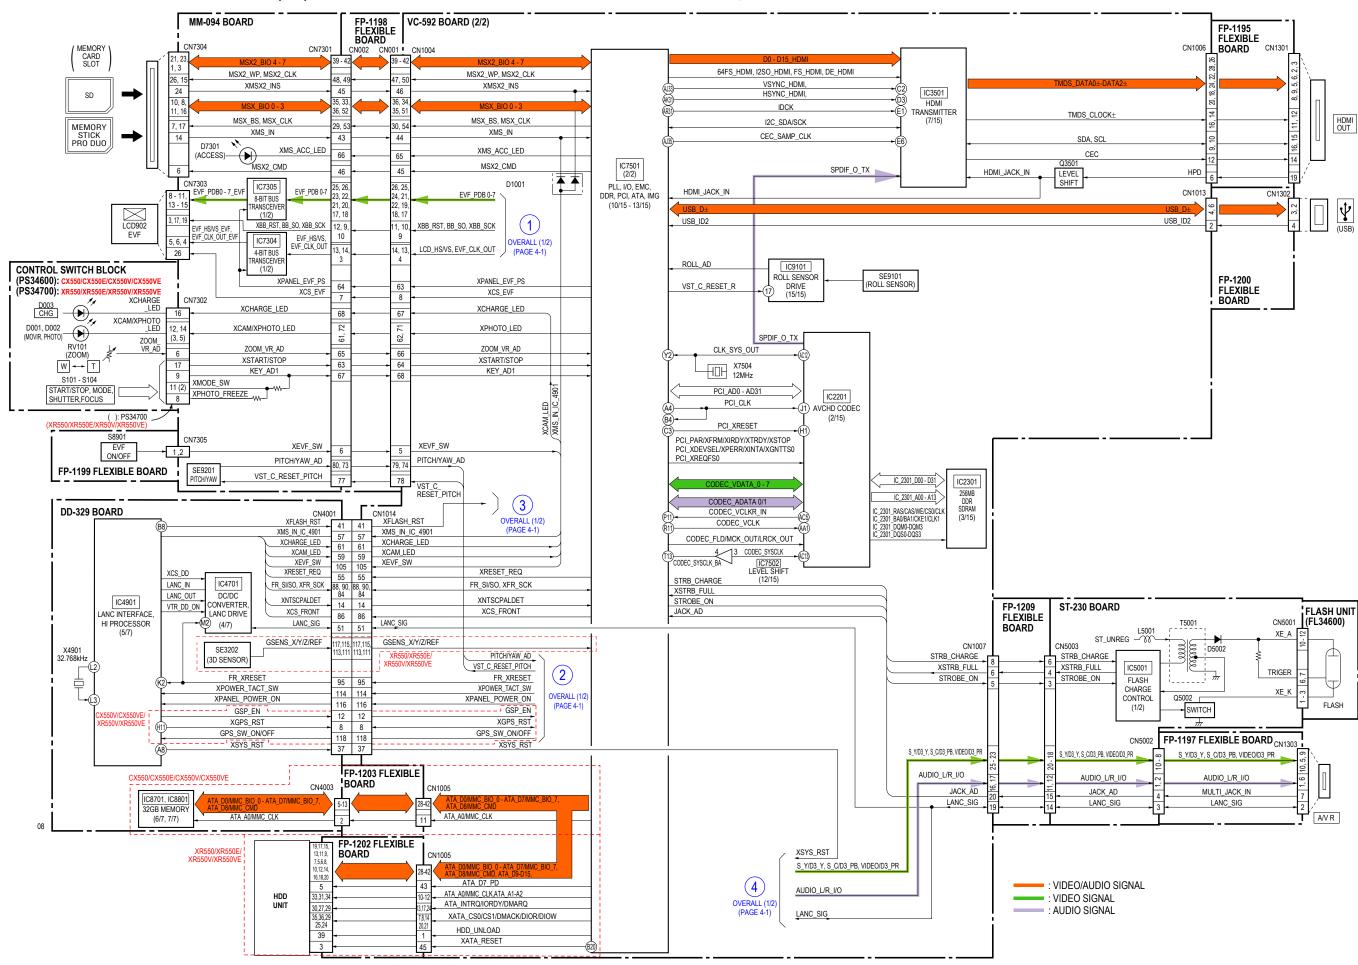

4-3. POWER BLOCK DIAGRAM (1/2) (): Number in parenthesis () indicates the division number of schematic diagram where the component is located.

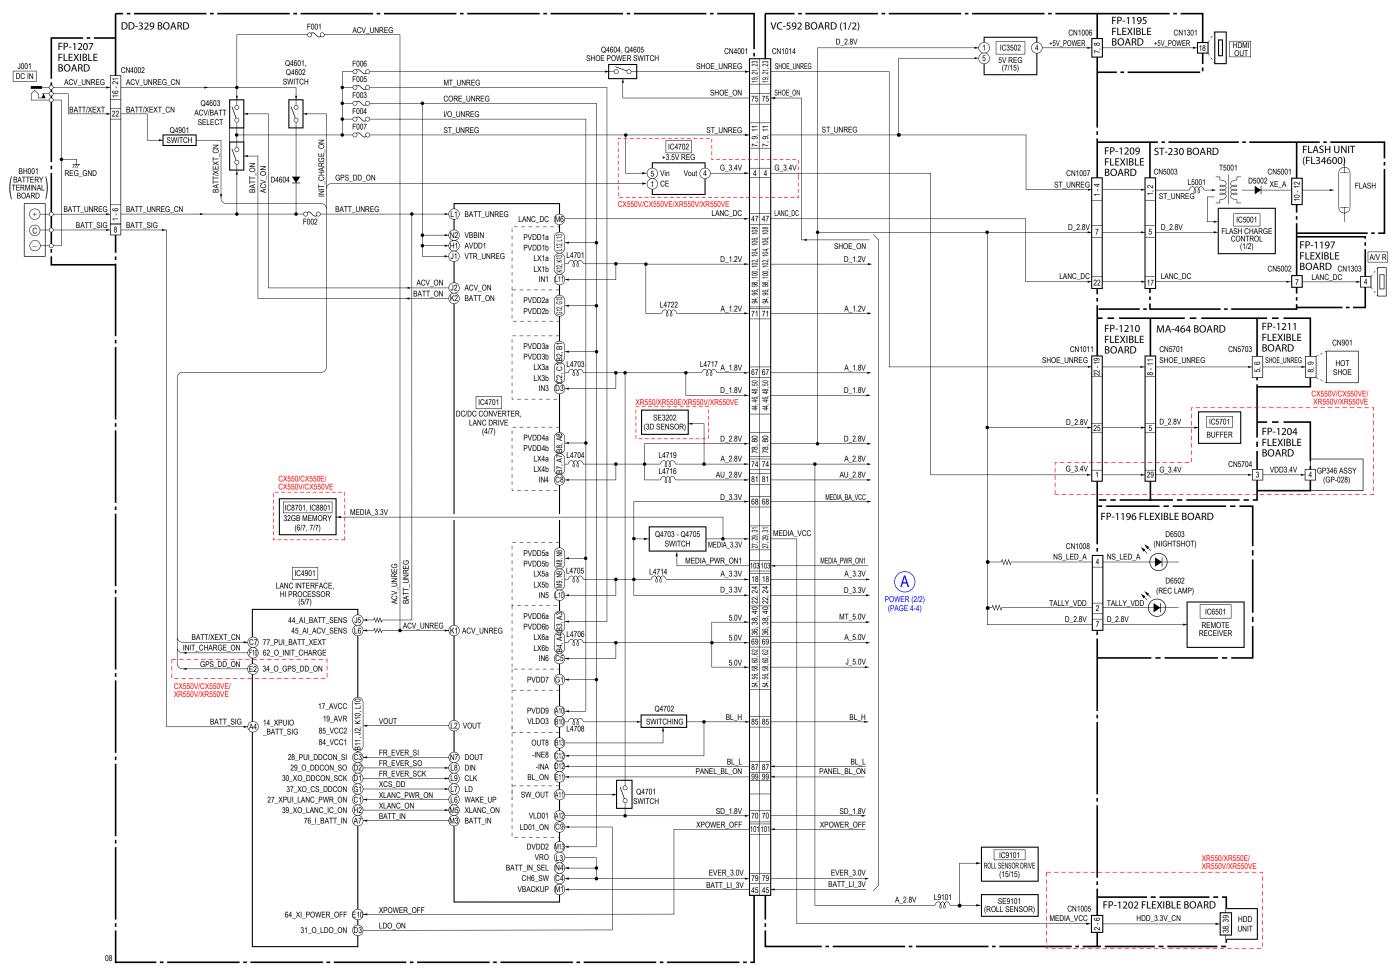


4-4. POWER BLOCK DIAGRAM (2/2) (): Number in parenthesis () indicates the division number of schematic diagram where the component is located.

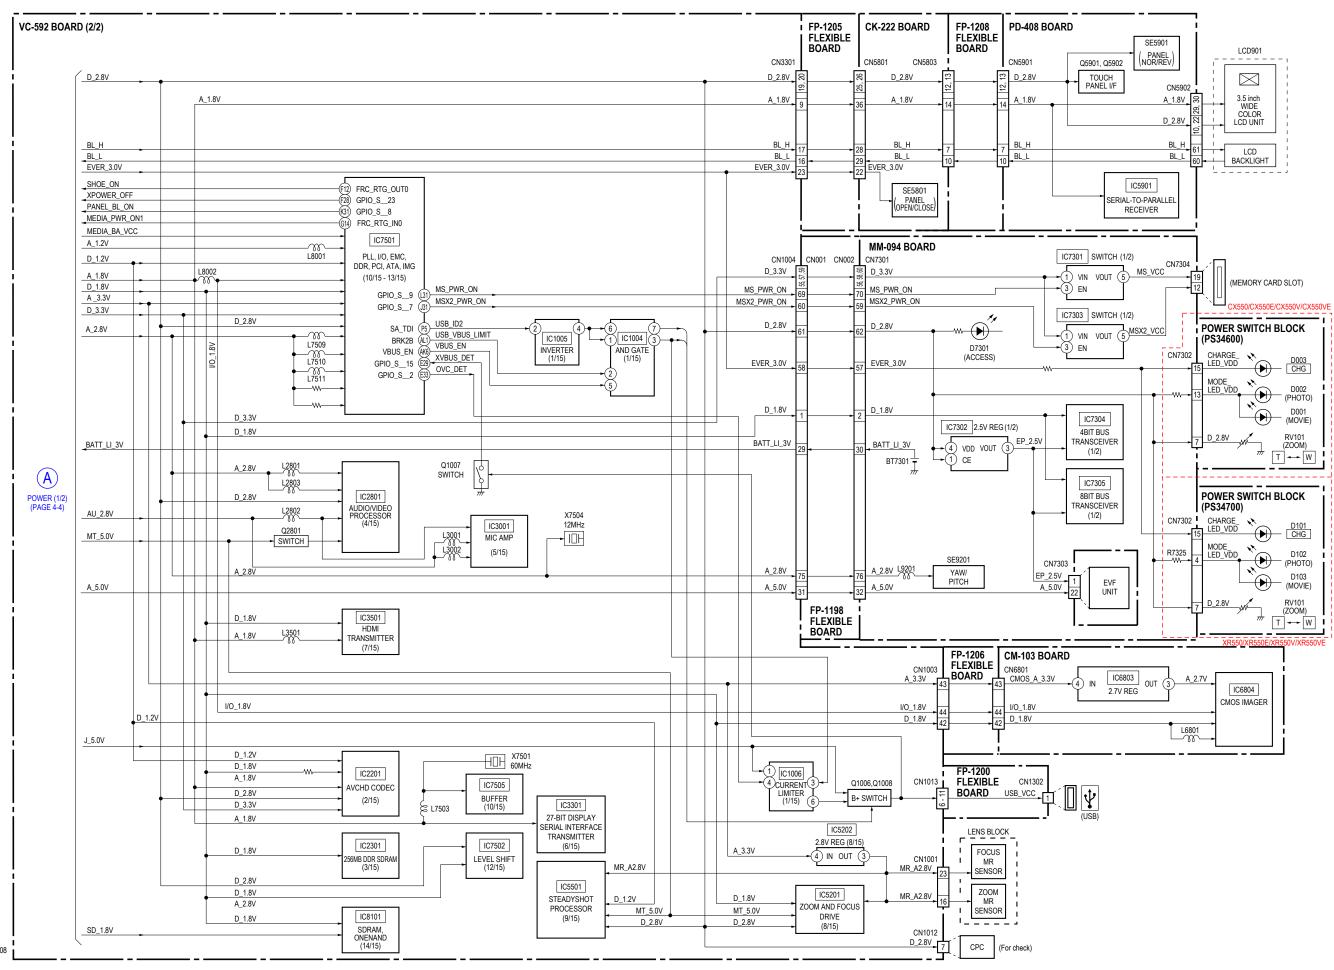


5. FRAME SCHEMATIC DIAGRAMS

5-1. FRAME SCHEMATIC DIAGRAM (1/2)

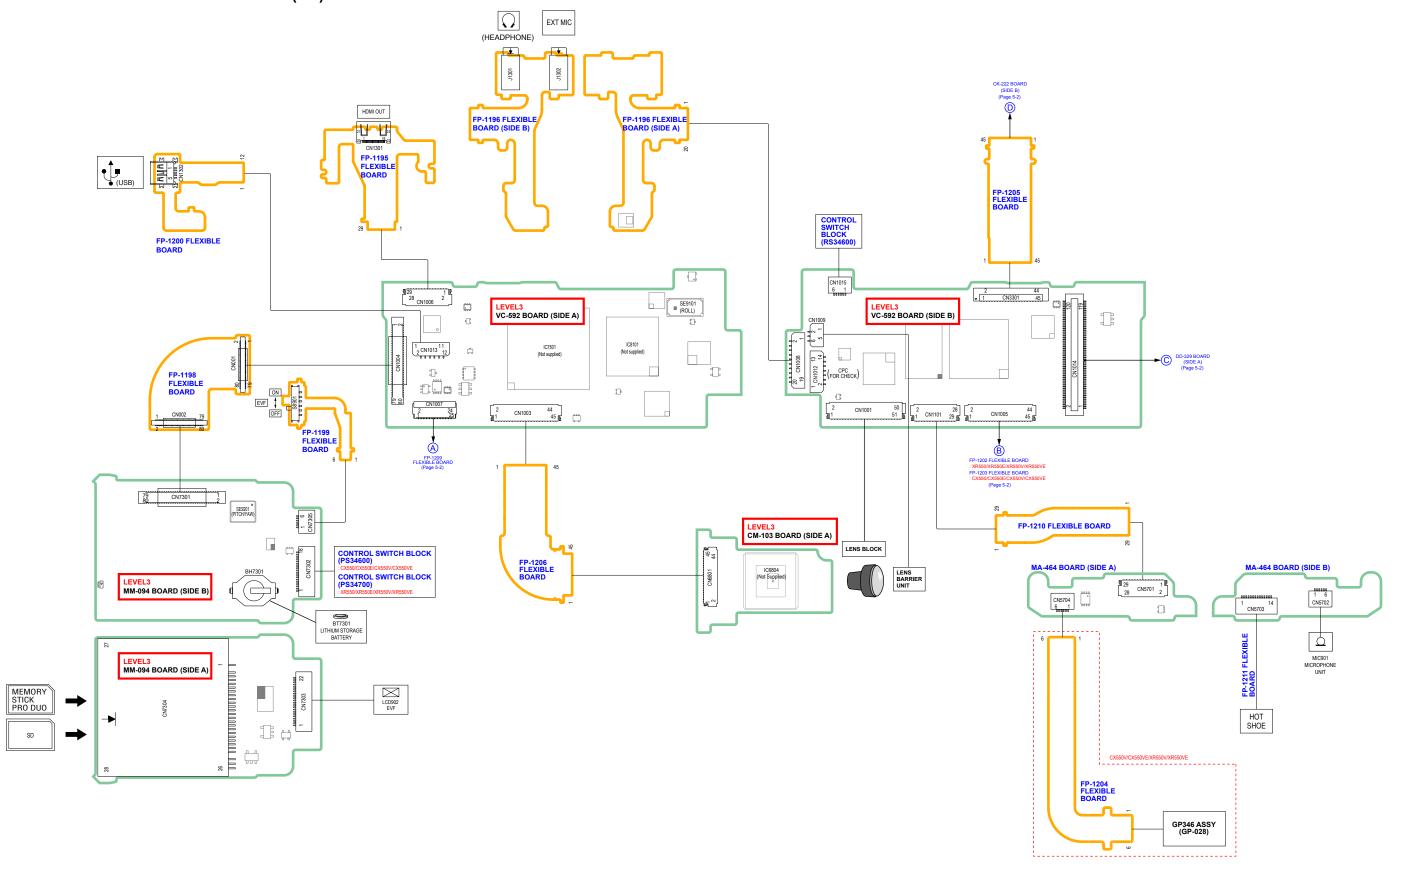

5-2. FRAME SCHEMATIC DIAGRAM (2/2)

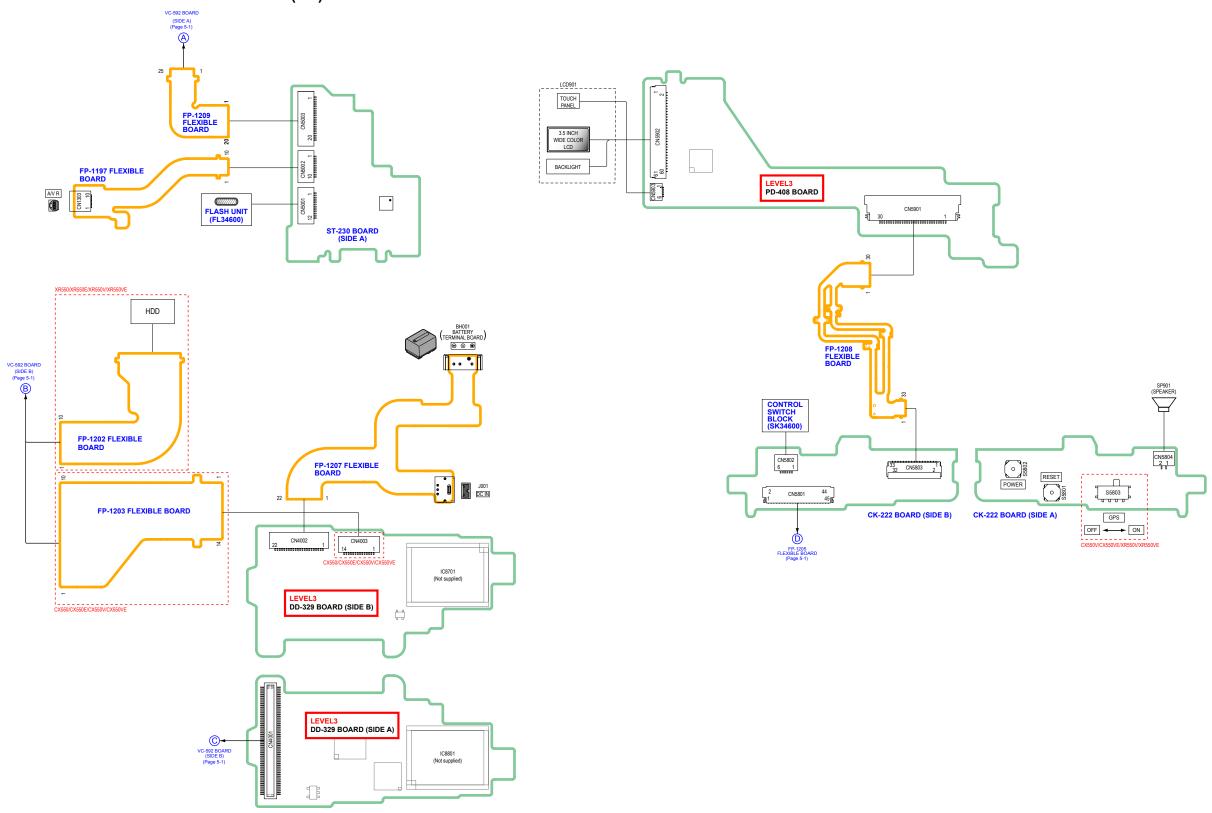

- ENGLISH -

THIS NOTE IS COMMON FOR SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS (In addition to this, the necessary note is printed in each block)

For Schematic Diagrams

- All capacitors are in μF unless otherwise noted. pF : μ μF. 50 V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10 W unless otherwise noted. $k\Omega = 1000 \Omega$. $M\Omega = 1000 k\Omega$.
- Caution when replacing chip parts. New parts must be attached after removal of chip. Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

Example C541 L452 22U 10UH TA A 2520 Kinds of capacitor External dimensions (mm) Case size

- · Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
- In such cases, the unused circuits may be indicated.
- Parts with ★ differ according to the model/destination. Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name

XEDIT → EDIT

PB/XREC → PB/REC

- ----: non flammable resistor
- + : fusible resistor
- : panel designation
- =: B+ Line
- ==: B- Line
- IN/OUT direction of (+, −) B LINE.
- ____: adjustment for repair.

Precautions for Replacement of Imager

- If the imager has been replaced, carry out all the adjustments for the camera section.
- As the imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC. In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark A are critical for safety.

Replace only with part number specified.

Les composants identifiés par une marque A sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié

Please refer to LEVEL 3 about the SCHEMATIC DIAGRAMS and PRINTED WIRING BOARDS of CM-114, MM-088 and VC-588.

For Printed Wiring Boards


- **4** : Uses unleaded solder.
- Circuit board
 - : Flexible board


Pattern from the side which enables seeing.

- : pattern of the rear side
- (The other layers' patterns are not indicated)
- · Through hole is omitted.
- There are a few cases that the part printed on diagram isn't mounted in this model.
- ____: panel designation

· Chip parts. Transistor



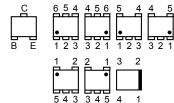

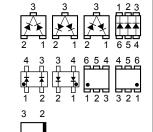


- JAPANESE -

回路図、プリント図共通ノート (他に必要なノートは各セクションに記載しています)

回路図ノート

- ・ケミコン, タンタルを除くコンデンサで, 耐圧50V 以下のものはその耐圧を省略。単位はすべてμF(pは
- チップ抵抗で指示のないものは、1/10W以下。
- $k\Omega = 1000\Omega$, $M\Omega = 1000k\Omega$
- ・チップ部品交換時の注意
- 取り外した部品は再使用せず、未使用の部品をご使用 ください。
- タンタルコンデンサのマイナス側は熱に弱いため注意 してください。
- ・チップ部品には下記のように表示したものがあります。

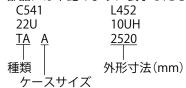

- ・抵抗, コンデンサ, ICなど定数にXXがあるものは, 使 用していない事を示しています。このため、使用して いない回路が記載されている事があります。
- ★印のある部品は、機種などにより異なりますので機 能別マウント一覧表を参照してください。 ・可変抵抗と半固定抵抗で、B特性の表示を省略。
- ・ 信号名表記について、下記のような場合があります。 XEDIT $\rightarrow \overline{\text{EDIT}}$ $PB/XREC \rightarrow PB/\overline{REC}$
- · は不燃性抵抗。
- + 「 はヒューズ抵抗。
- し はパネル表示名称。
- **——** はB+ライン。
- **--** はB-ライン。
- ・ はBライン(+, -)の入出力方向を示す。
- は調整名称。

イメージャ交換時の注意

- イメージャを交換した場合は、カメラ部の全調整を行って ください。
- ・ イメージャは構造上、静電気により破壊される恐れがある ため、MOSICと同様に注意して取り扱ってください。 また、受光部にはゴミの付着、および強い光がはいること のないように注意してください。

図面番号で部品を指定するときは基板名又はブロック を併せて指定してください。

△印の部品, または△印付の点線で囲まれた部品は, 安全性を維持するために, 重要な部品です。 従って交換時は, 必ず指定の部品を使用してください。

CM-114, MM-088およびVC-588のSCHEMATIC DIAGRAMS、PRINTED WIRING BOARDSについては、 LEVEL3を参照して下さい。

プリント図ノート

- ・*「*」: 無鉛半田を使用しています。

|:フレキシブル配線板 見ている面側のパターン。


: 裏側のパターン


(他のパターンについては表示されていません)


- スルーホールは省略。
- ・プリント図には、本機で使用していない部品が記載さ れている場合があります。
- してはパネル表示名称。


•	Chip parts.	
	Transistor	


Diode

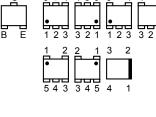


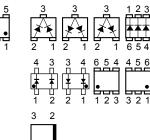


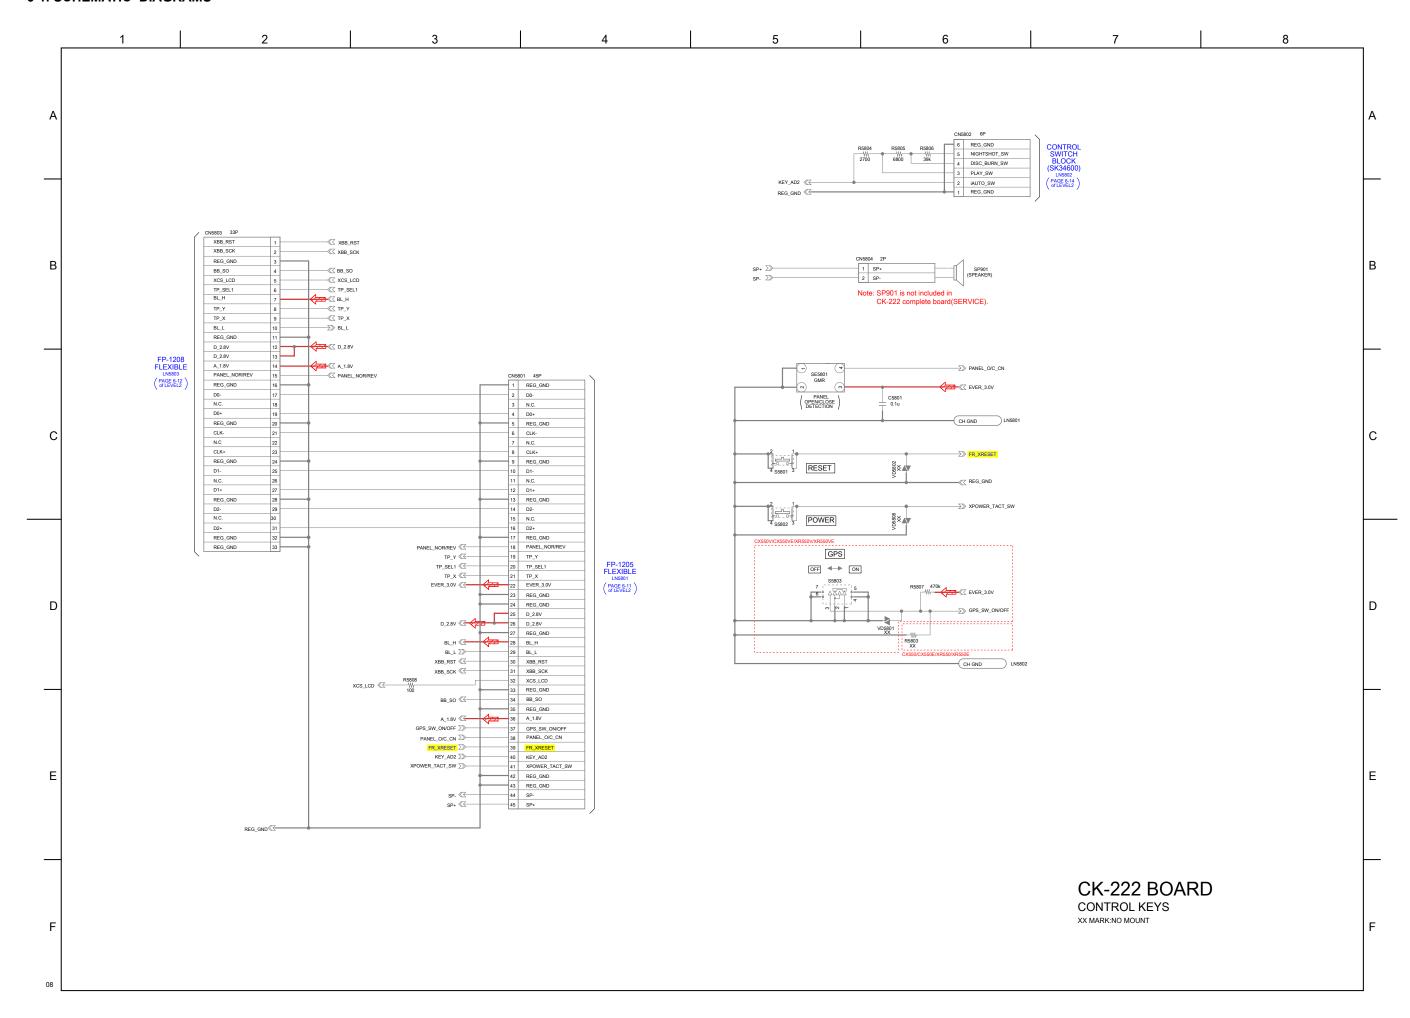


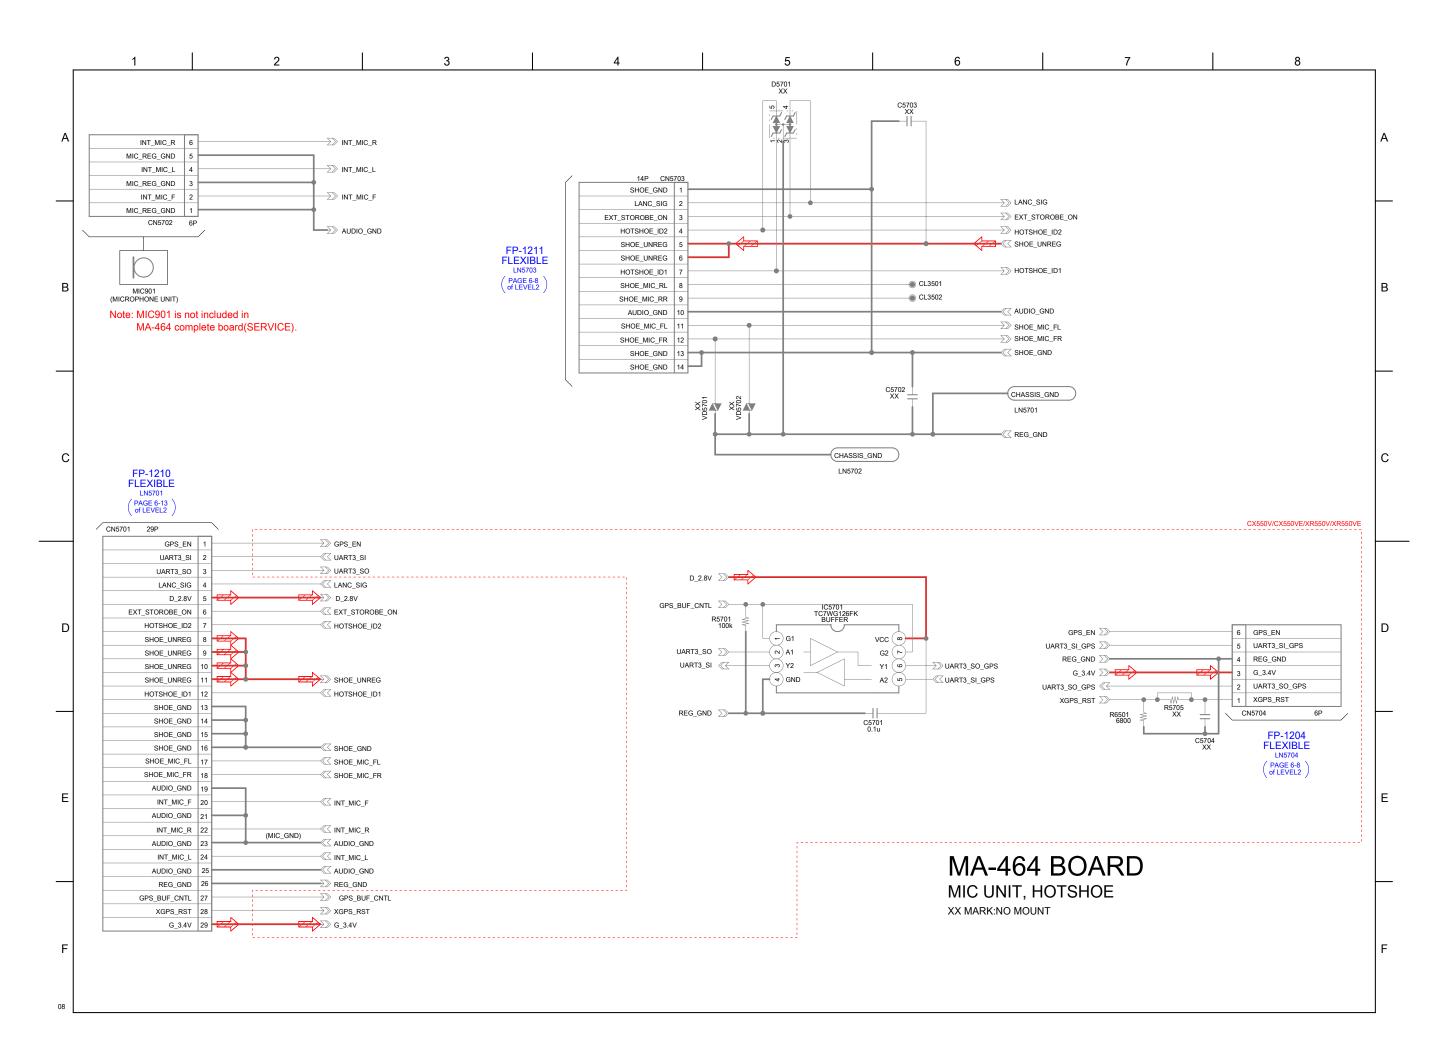


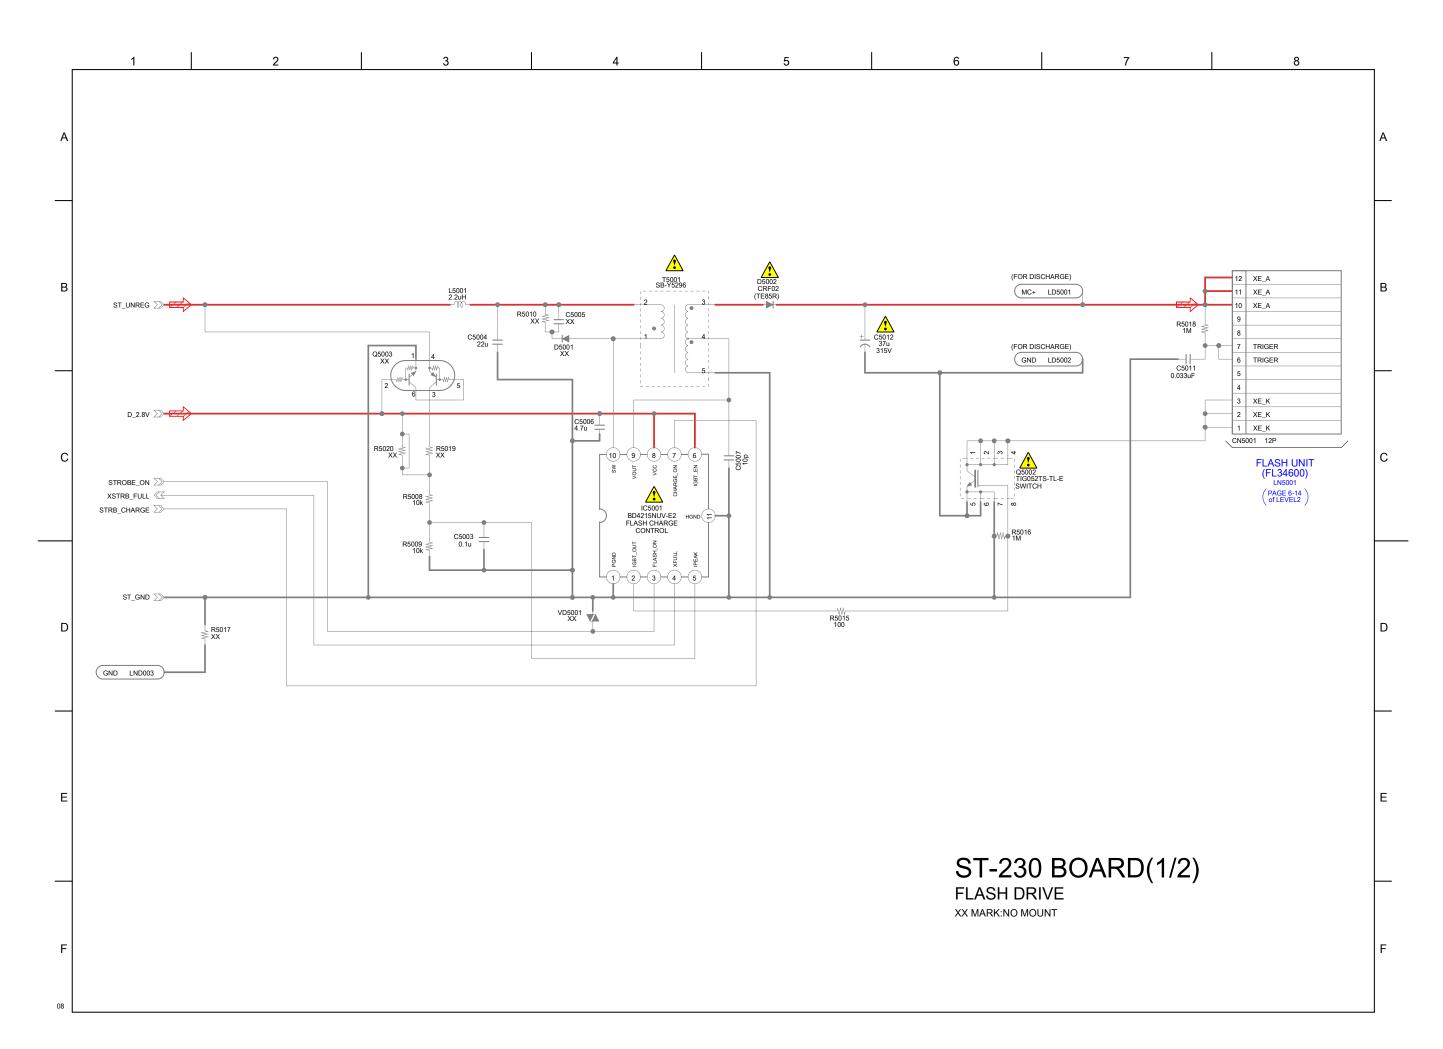


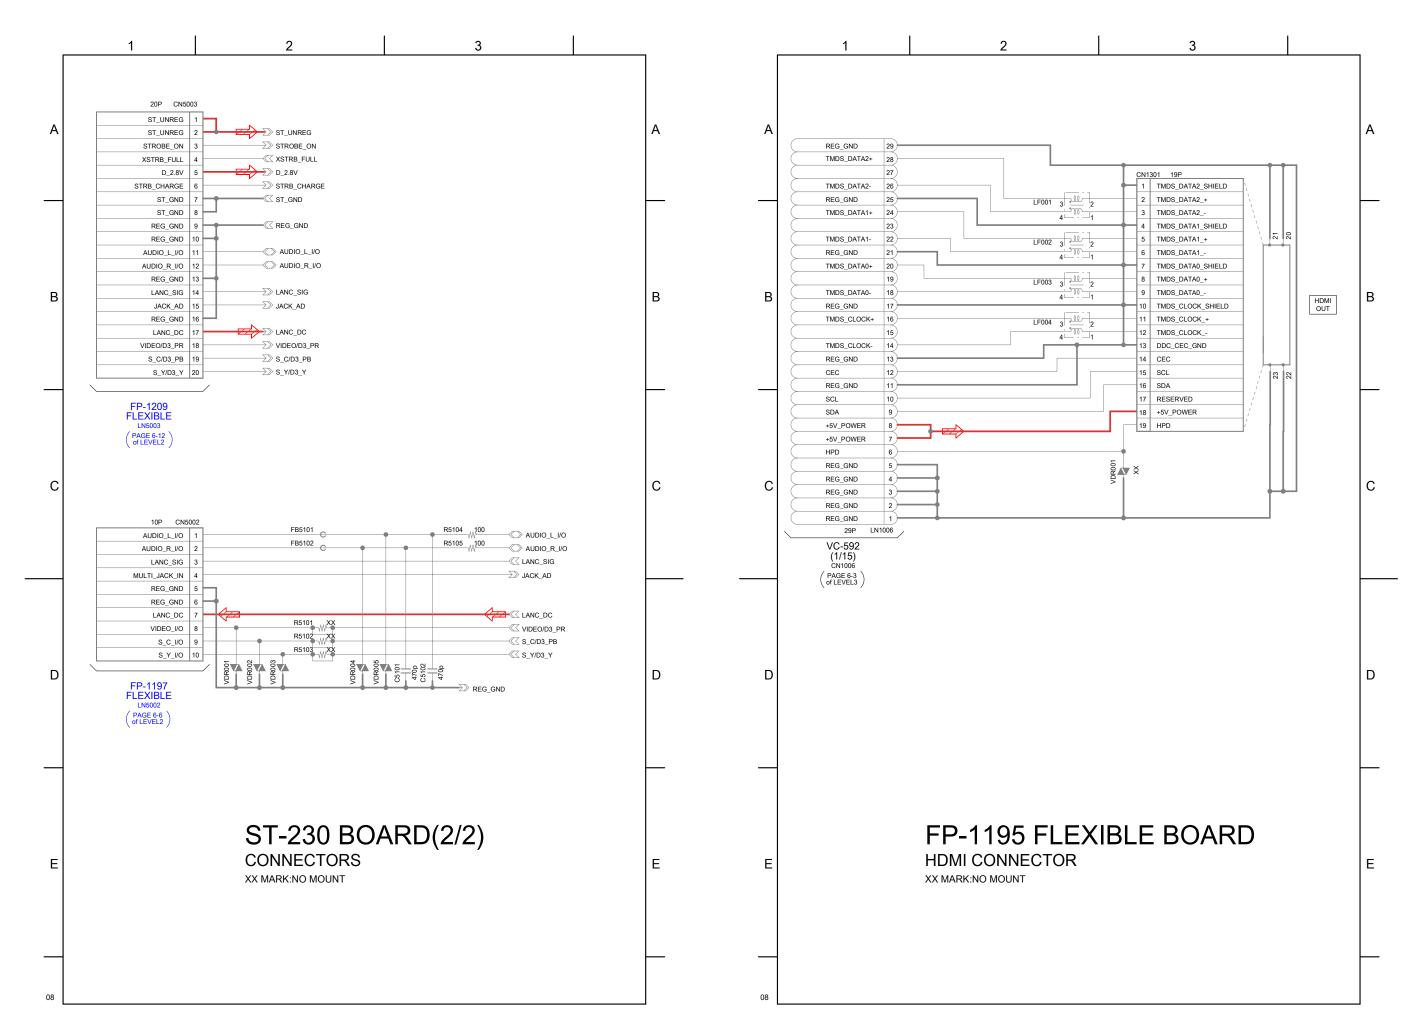


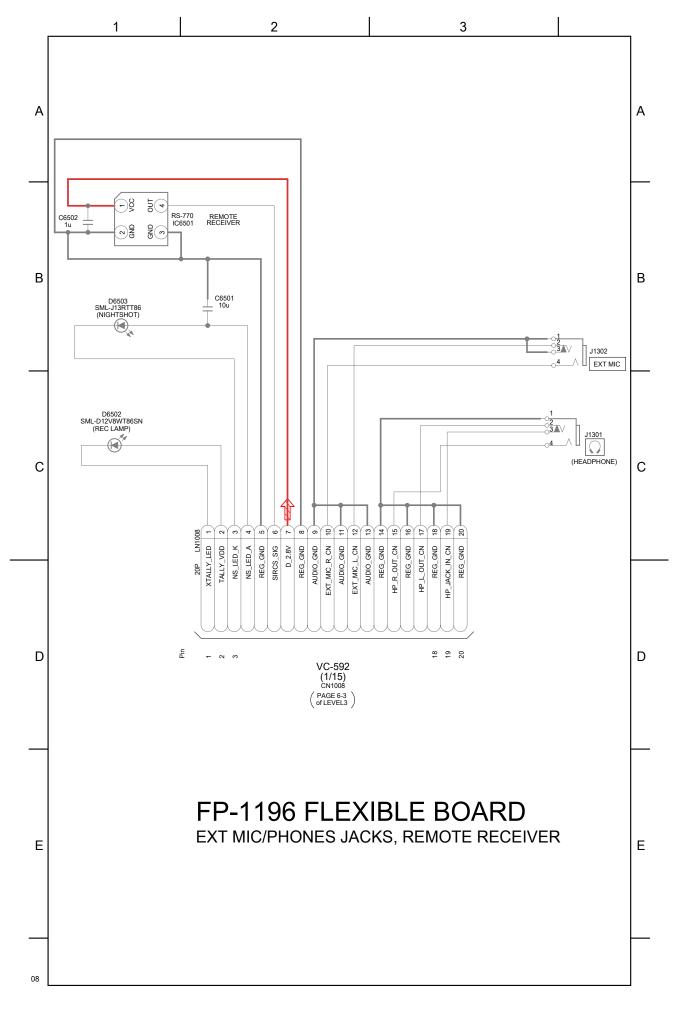


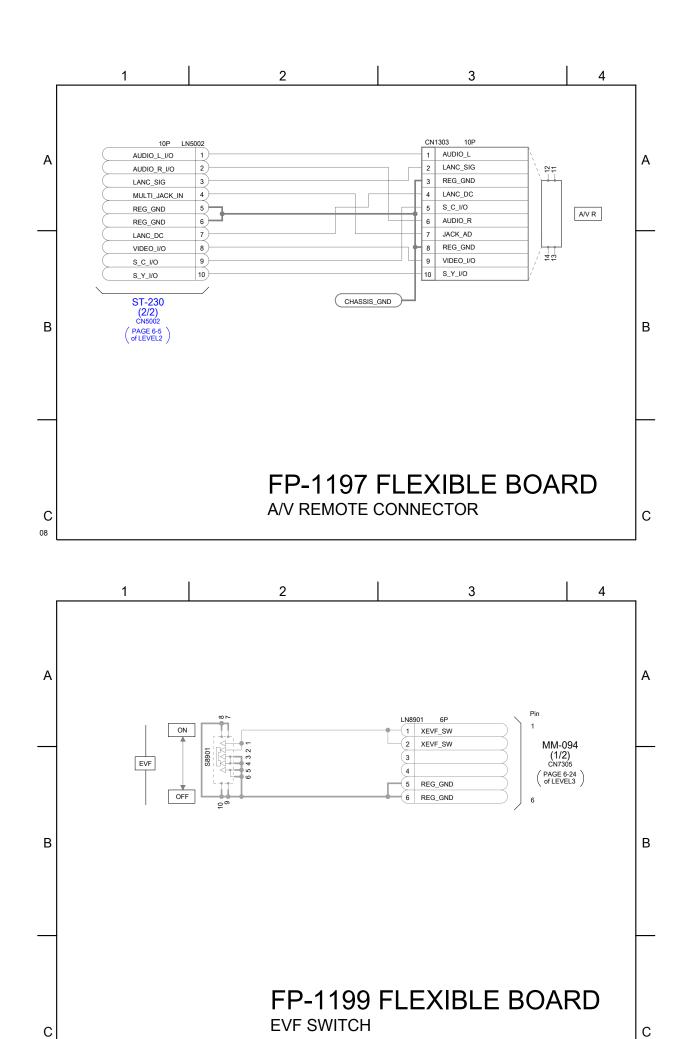


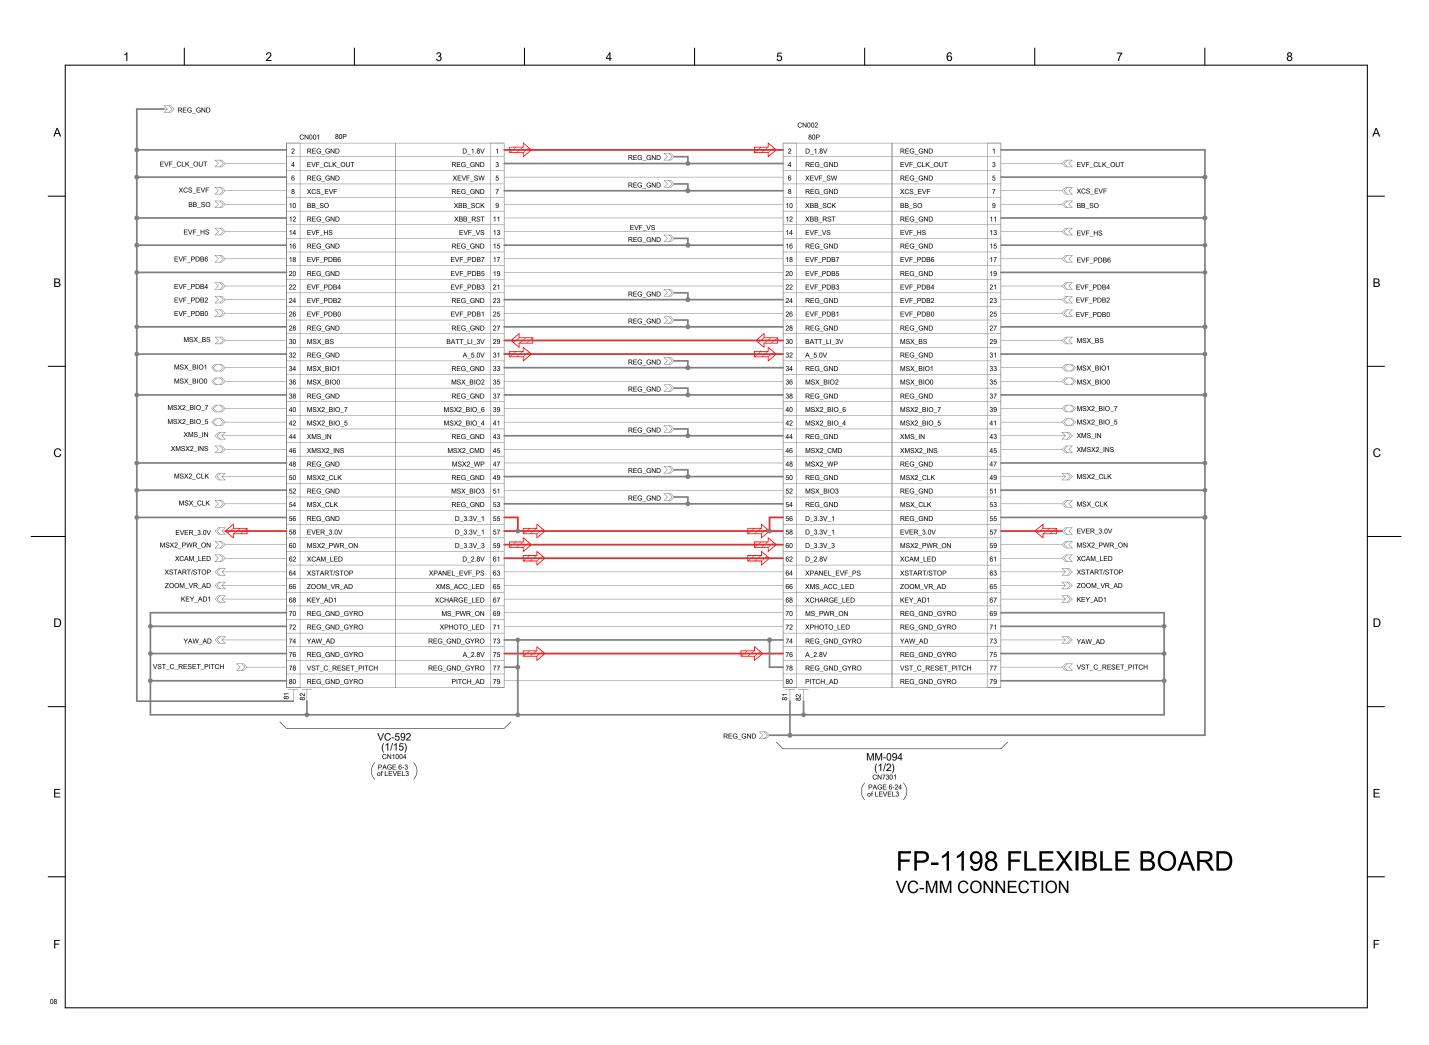


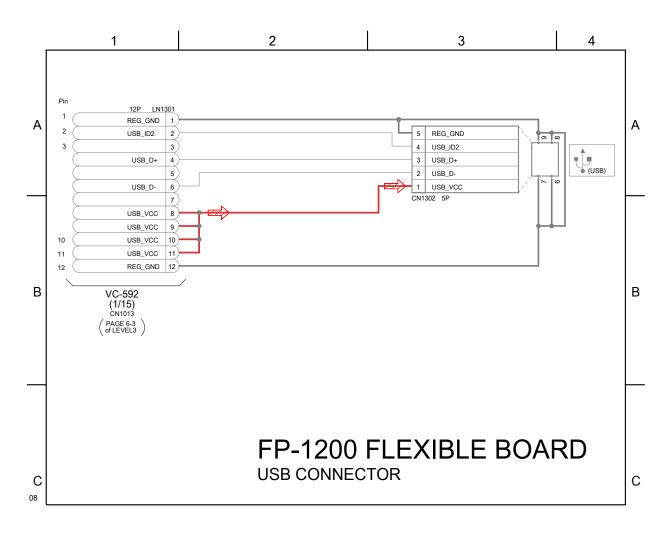


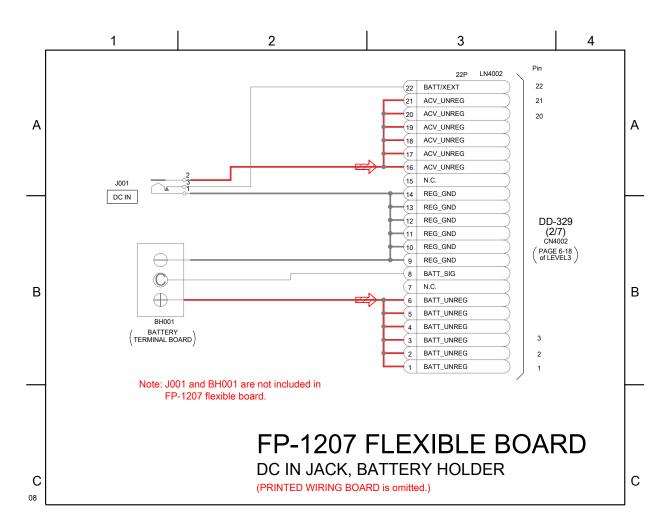


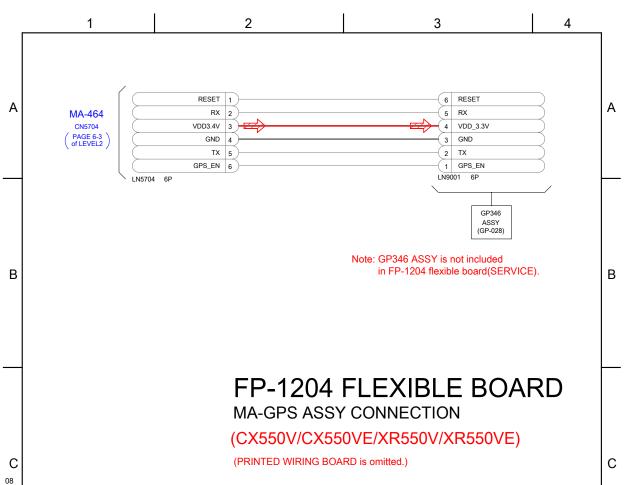


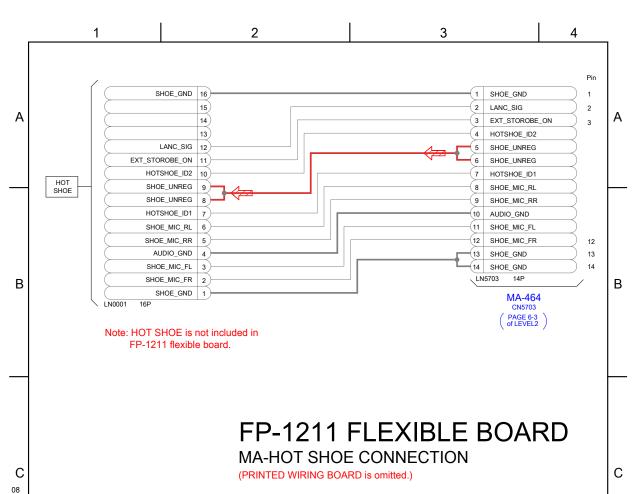


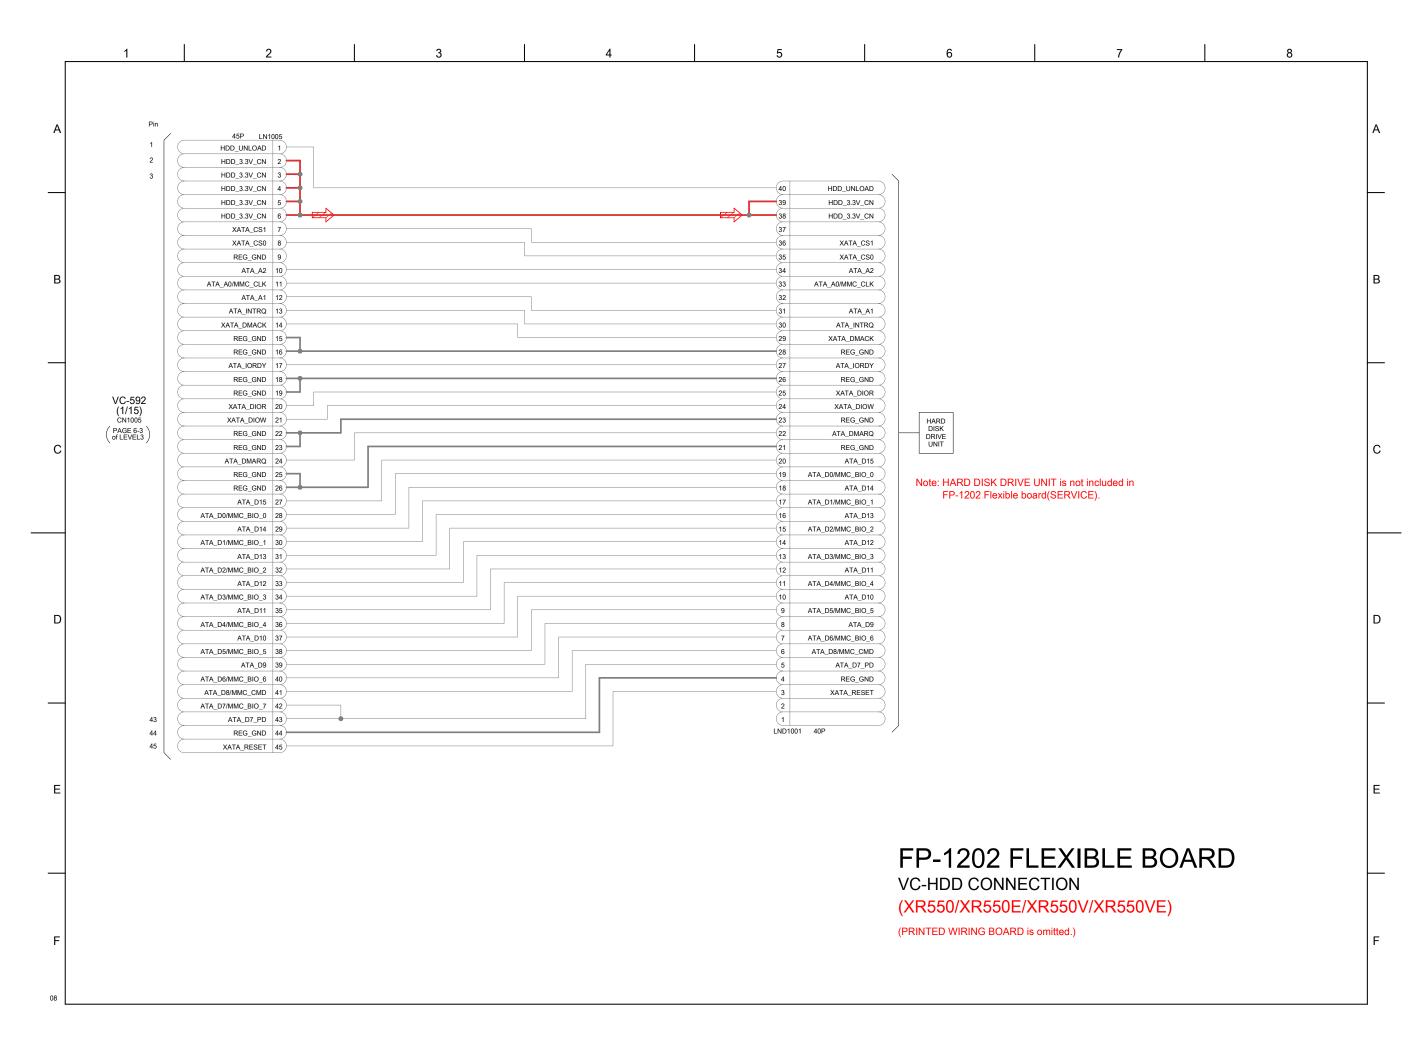


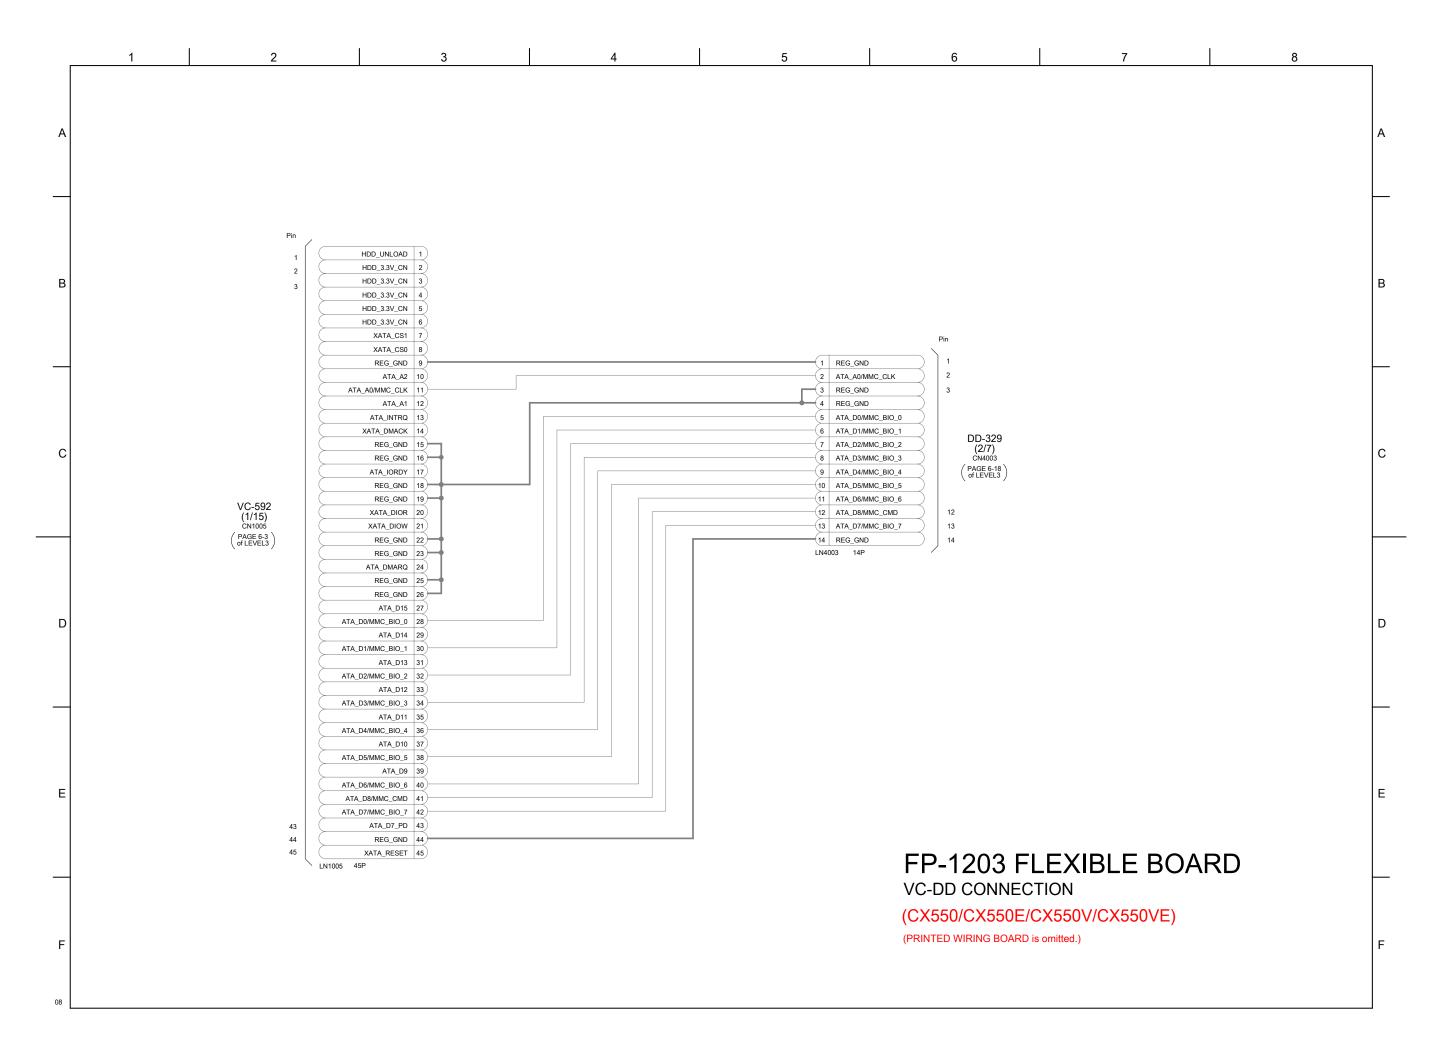


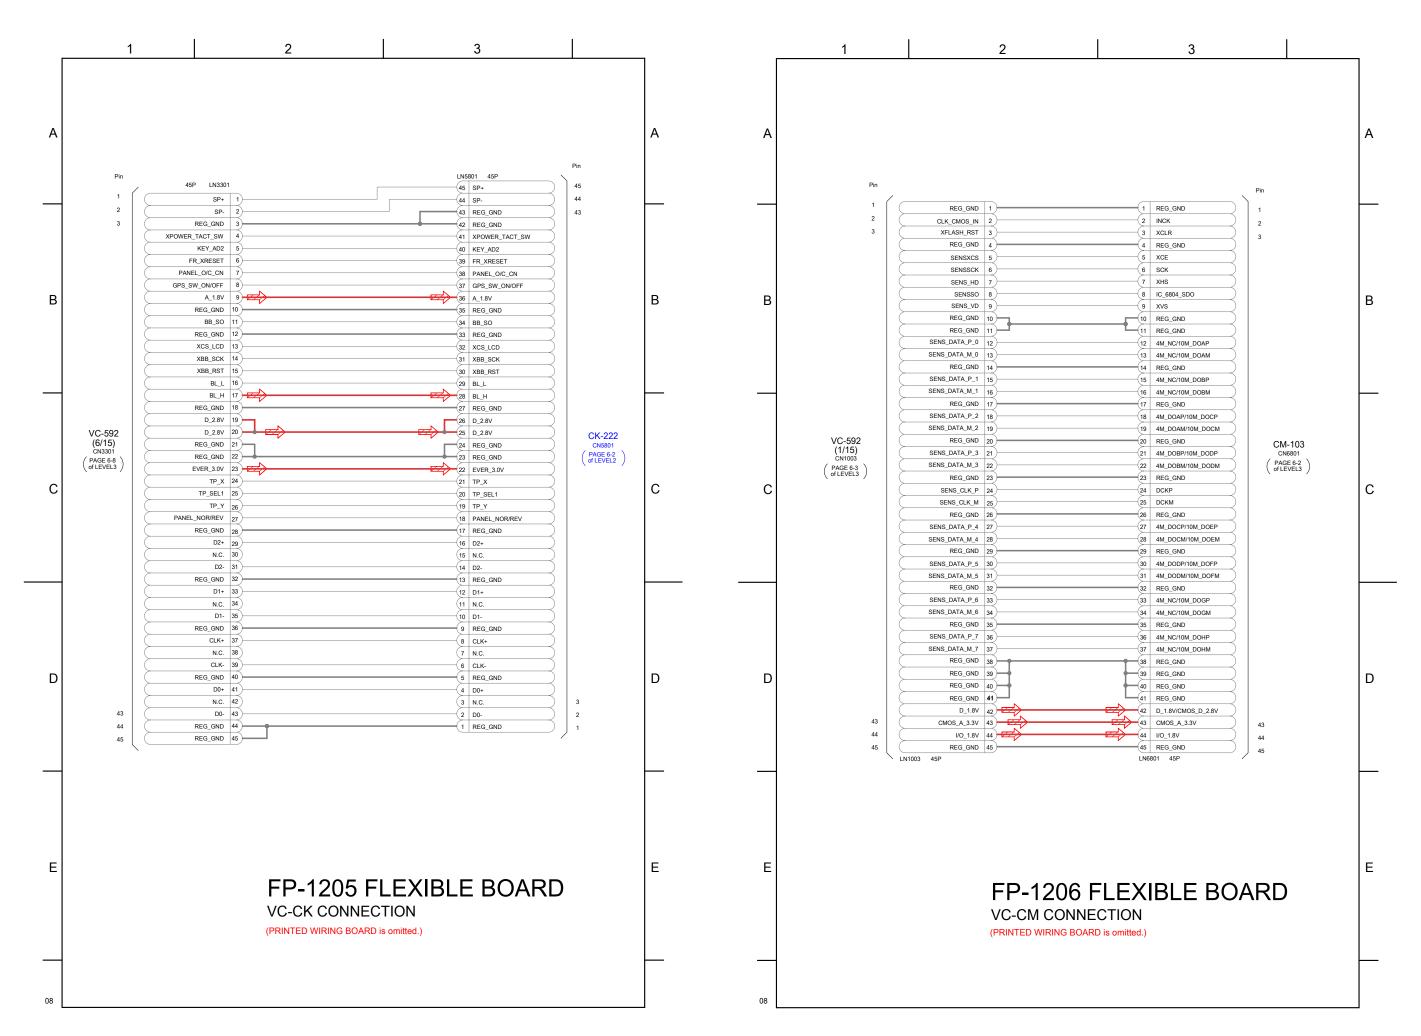


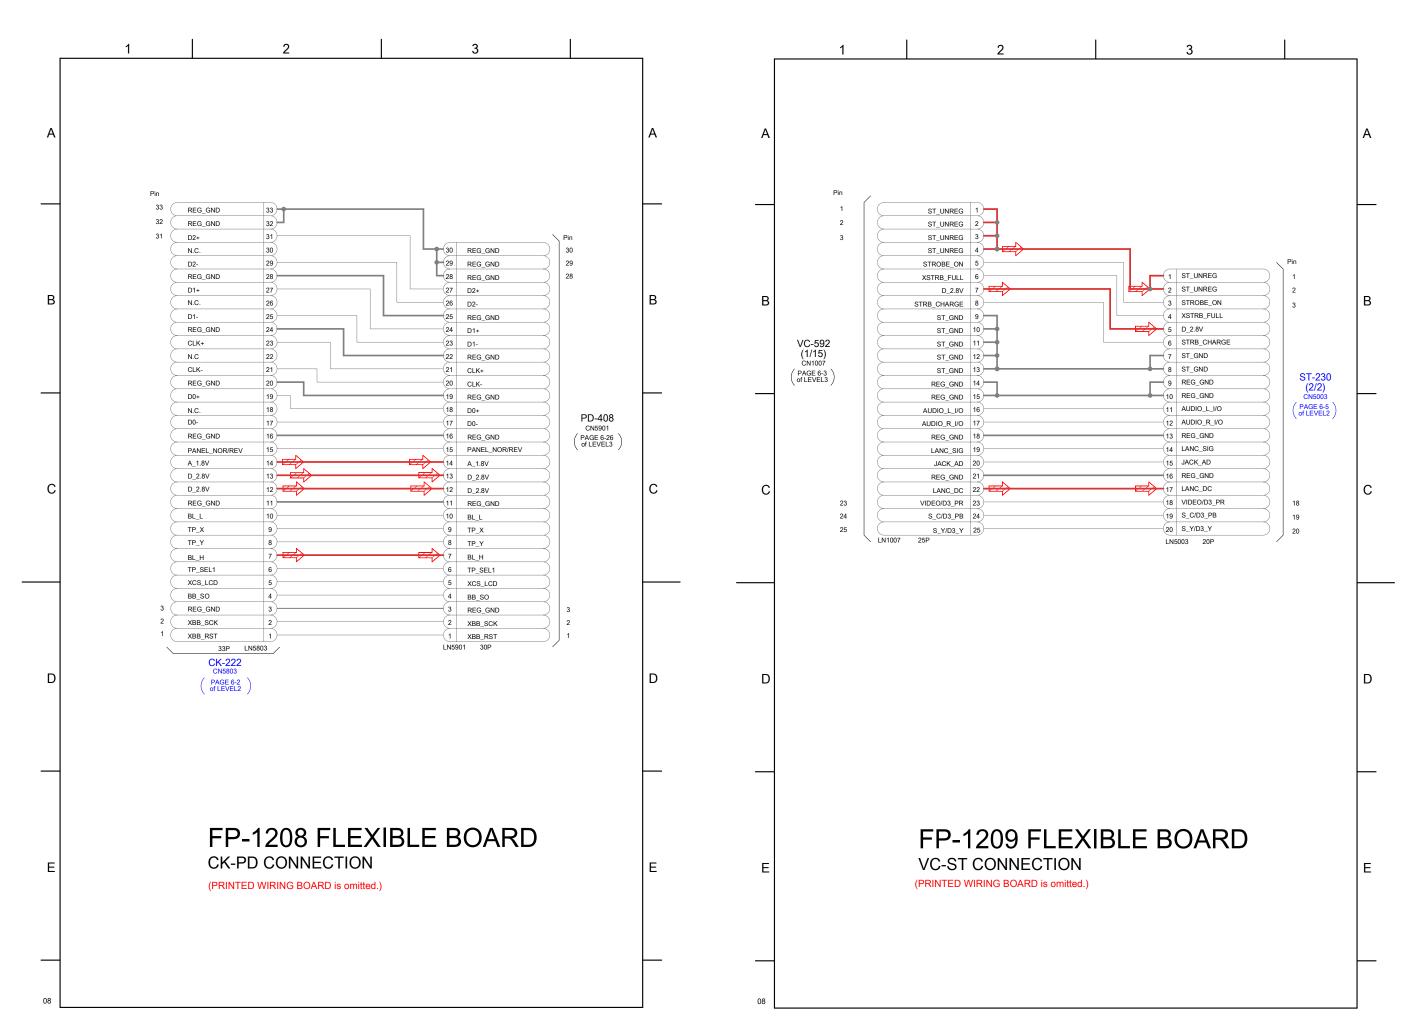

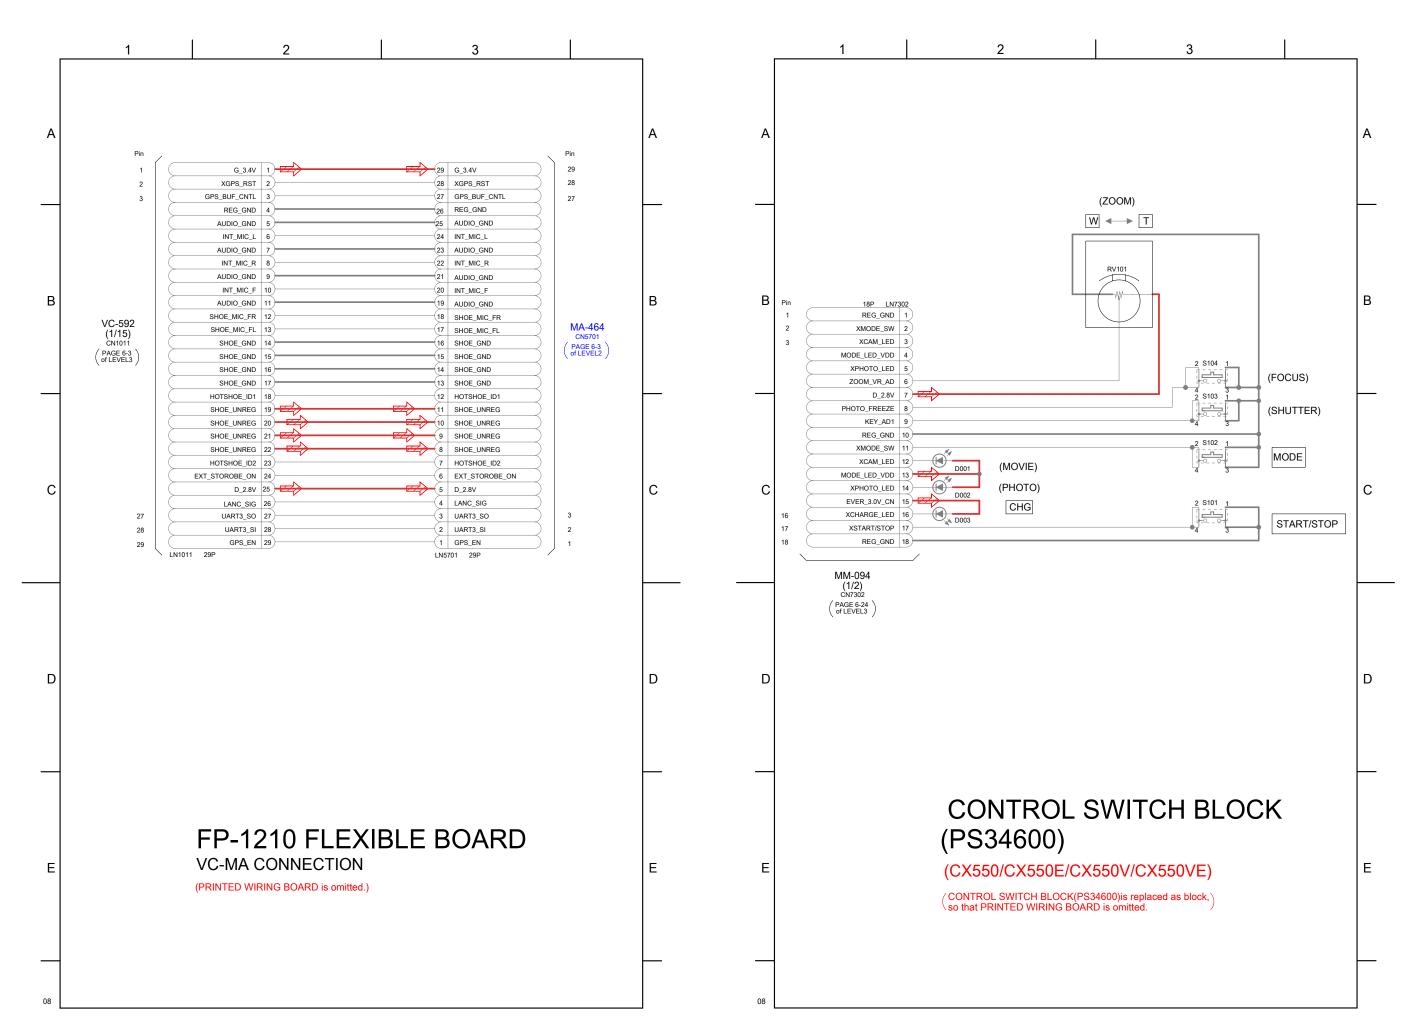


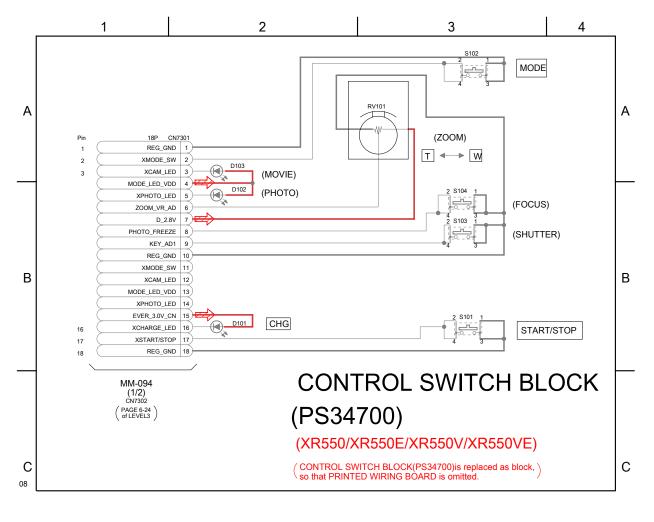

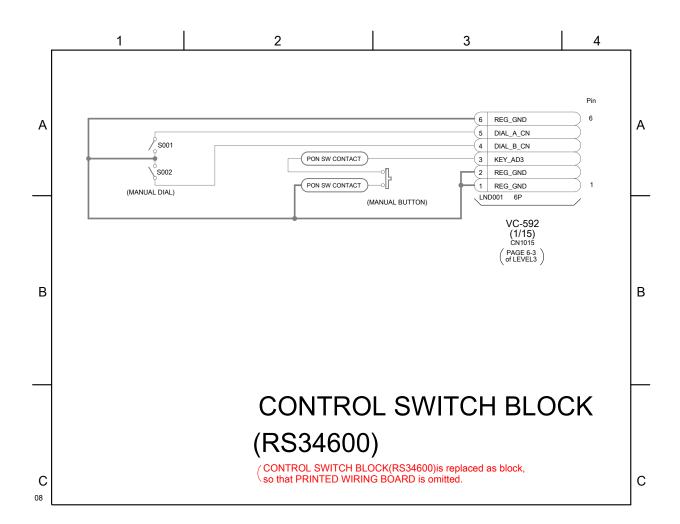


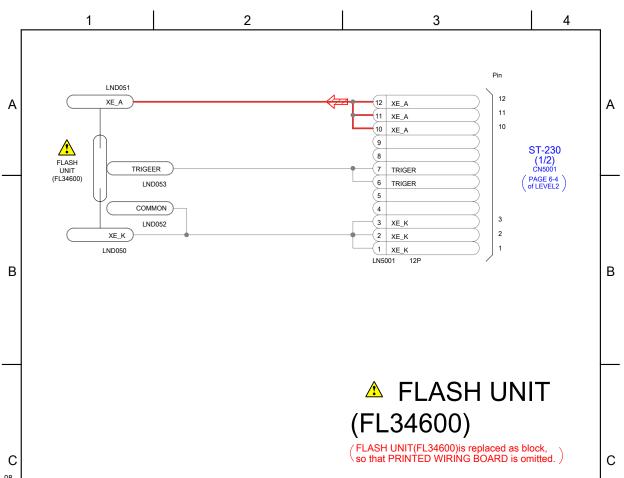


HDR-CX550/CX550E/CX550V/CX550VE/XR550/XR550E/XR550V/XR550VE_L2

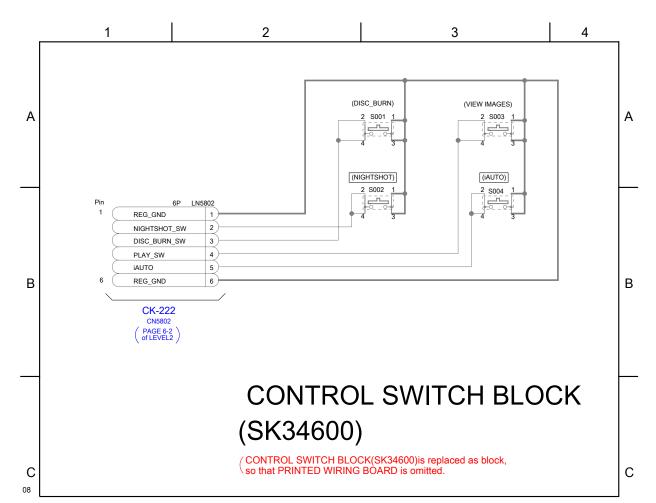


6-2. PRINTED WIRING BOARDS

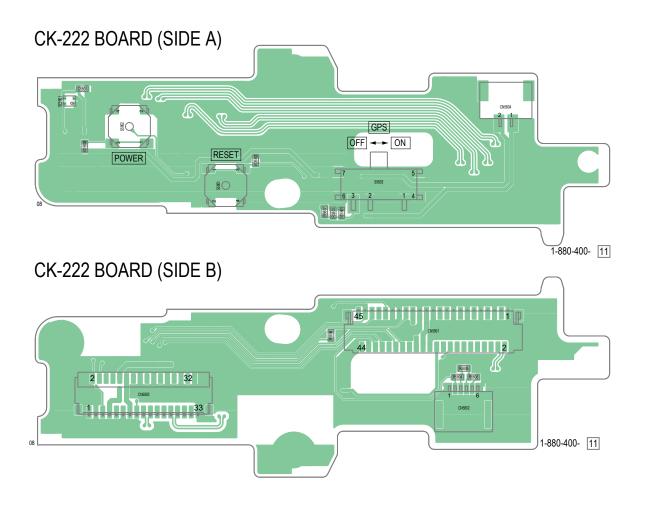


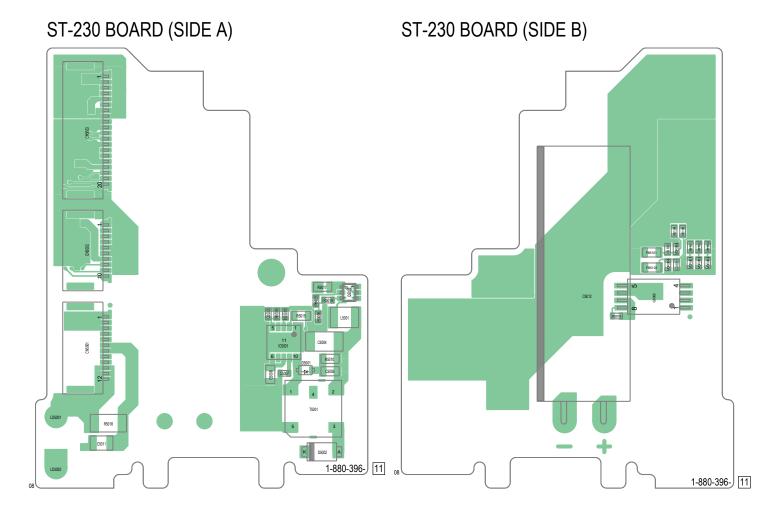


MA-464 BOARD (SIDE A)

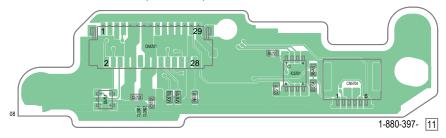


MA-464 BOARD (SIDE B)

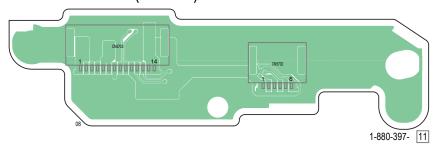



FP-1195 FLEXIBLE BOARD

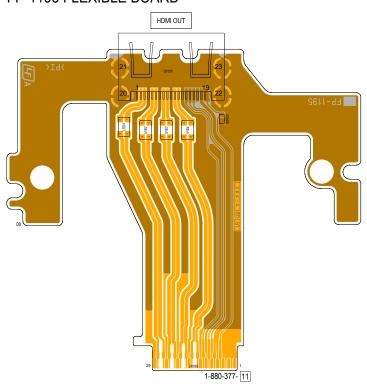

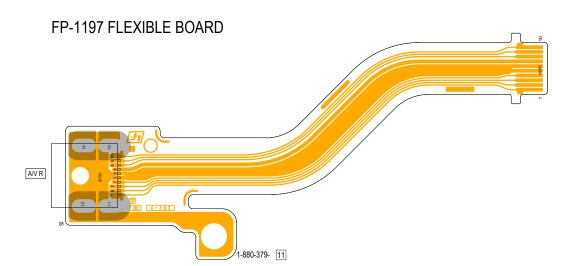

FP-1198 FLEXIBLE BOARD

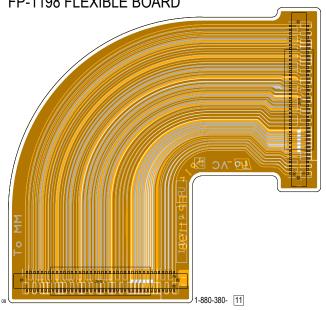

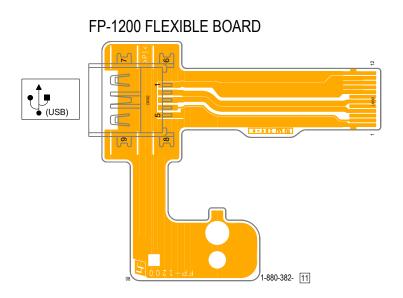

FP-1196 FLEXIBLE BOARD

